


SIEMENS

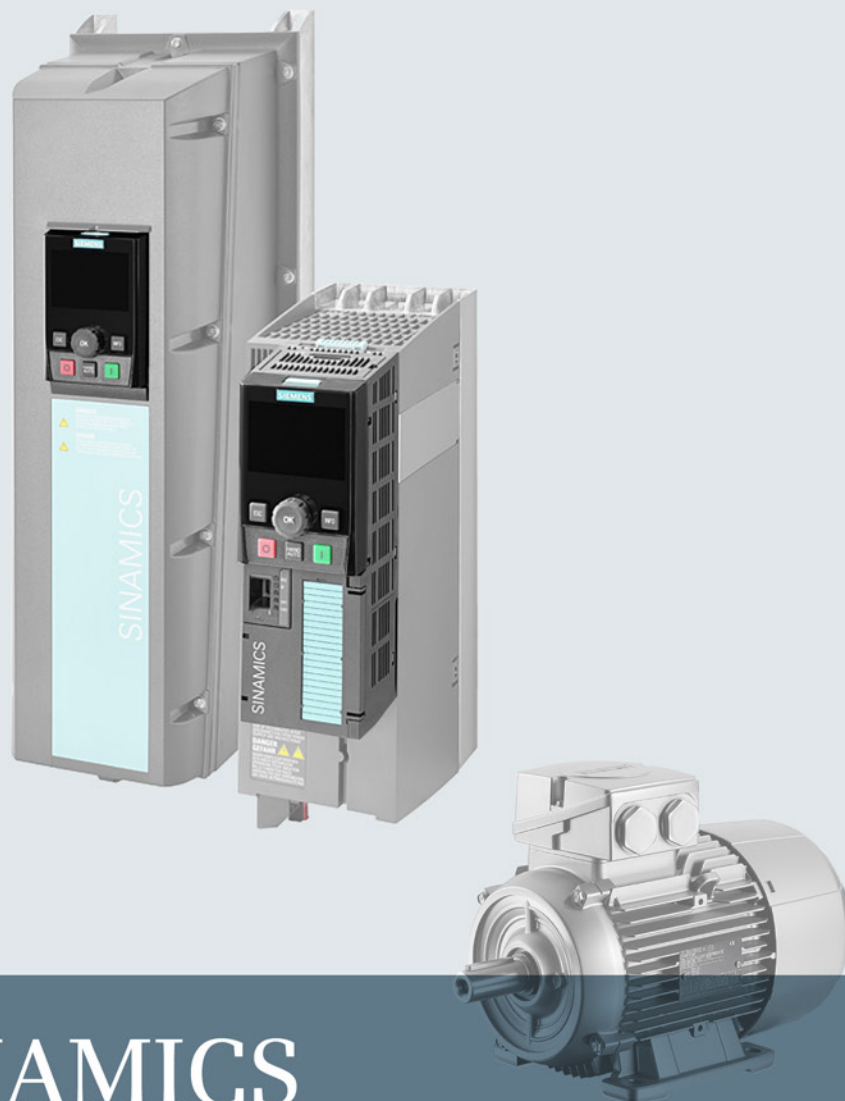

SINAMICS

SINAMICS G120 low voltage converters

Chassis and wall/panel mounted devices with CU230P-2 Control Units

Operating instructions

Edition

04/2014

Answers for industry.

SIEMENS

SINAMICS

SINAMICS G120 Converter with CU230P-2 Control Units

Operating Instructions

Changes in this manual

Fundamental safety instructions	1
Introduction	2
Description	3
Installing	4
Commissioning	5
Adapting the terminal strip	6
Configuring the fieldbus	7
Setting functions	8
Backing up data and series commissioning	9
Corrective maintenance	10
Alarms, faults and system messages	11
Technical data	12
Appendix	A

Edition 04/2014, Firmware V4.7




Original instructions
04/2014, FW V4.7

A5E34257946B AA

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Changes in this manual

Important changes with respect to the Manual, Edition 06/2013

New hardware	In Chapter
New Power Modules PM240-2, FSA ... FSC	Description (Page 23) Technical data, PM240-2 (Page 335)
Output reactors for PM230 and PM240-2 Power Modules	Output reactor (Page 33)

New functions in the V4.7 firmware	In Chapter
Reducing the pulse frequency and increasing the current limit in the case of high-inertia starting.	Inverter temperature monitoring (Page 177)
Supporting the identification & maintenance data (I&M1 ... 4)	Identification & maintenance data (I&M) (Page 307)
New predefined terminal strip assignments	Terminal strips of the CU (Page 68)

An overview of all the new and changed functions in the V4.7 firmware can be found in Section New and extended functions (Page 357).

Corrections	In Chapter
Macro 14 sets PROFIdrive telegram 20 (not telegram 1).	Terminal strips of the CU (Page 68)
Acknowledge input in macros 19 and 20 is at digital input 4 (not at digital input 3).	
When using an analog input as extended digital input, for a low signal, the analog input must be connected to ground (GND). The analog input must be connected to +10 V and GND using a change-over contact. An NO contact is not sufficient.	Digital inputs (Page 105)

Revised descriptions	In Chapter
Communication interfaces	Configuring the fieldbus (Page 117)
The "energy-saving mode" inverter function has been renamed "hibernation mode".	Hibernation mode (Page 241)

Table of contents

	Changes in this manual.....	5
1	Fundamental safety instructions	13
1.1	General safety instructions	13
1.2	Safety instructions for electromagnetic fields (EMF)	17
1.3	Handling electrostatic sensitive devices (ESD)	17
1.4	Industrial security	18
1.5	Residual risks of power drive systems.....	19
2	Introduction.....	21
2.1	About this manual	21
2.2	Guide through this manual.....	22
3	Description.....	23
3.1	Identifying the converter.....	23
3.2	Control Units	25
3.3	Power Module	26
3.3.1	Power Modules in degree of protection IP20 and with push-through system	26
3.3.2	Power Module in IP55 degree of protection / UL Type 12	29
3.4	Components for the Power Modules.....	30
3.4.1	Line filter.....	30
3.4.2	Line reactor	31
3.4.3	Output reactor	33
3.4.4	Sine-wave filter.....	36
3.4.5	dv/dt filter.....	37
3.4.6	Braking Module and braking resistor	38
3.5	Tools to commission the converter	40
4	Installing	41
4.1	Overview of the inverter installation	41
4.2	Installing reactors, filters and braking resistors.....	42
4.3	Installing Power Module.....	43
4.3.1	Dimensions, hole drilling templates, minimum clearances, tightening torques	45
4.3.2	Connecting the line supply, motor and converter components.....	54
4.3.2.1	Permissible line supplies.....	54
4.3.2.2	Connecting the inverter	57
4.3.2.3	Connecting a braking resistor	62
4.3.3	Digital inputs and outputs on the PM330 Power Module.....	63
4.4	Installing Control Unit.....	65
4.4.1	Overview of the interfaces	67

4.4.2	Terminal strips of the CU	68
4.4.3	Factory setting of the terminals	69
4.4.4	Default settings of the terminals.....	71
4.4.5	Wiring terminal strips.....	77
4.4.6	Fieldbus interface allocation.....	78
4.5	Connecting inverters in compliance with EMC.....	79
4.5.1	EMC-compliant connection of the converter	79
4.5.2	Avoiding electromagnetic influence (EMI).....	79
5	Commissioning	85
5.1	Commissioning guidelines	85
5.2	Preparing for commissioning.....	86
5.2.1	Factory setting of the converter control.....	87
5.2.2	Selecting the control mode.....	88
5.2.3	Defining additional requirements for the application	89
5.3	Restoring the factory setting	90
5.4	Basic commissioning.....	91
5.4.1	Basic commissioning with the BOP-2 operator panel.....	91
5.4.2	Basic commissioning with STARTER	96
5.4.2.1	Generating a STARTER project.....	96
5.4.2.2	Transfer inverters connected via USB into the project	97
5.4.2.3	Go online and start wizard for basic commissioning.....	98
5.4.2.4	Carry-out basic commissioning.....	99
5.4.2.5	Identifying motor data.....	100
6	Adapting the terminal strip.....	103
6.1	Overview	103
6.2	Digital inputs.....	105
6.3	Digital outputs	107
6.4	Analog inputs	109
6.5	Analog outputs	113
7	Configuring the fieldbus	117
7.1	Communication via PROFINET	118
7.1.1	What do you need for communication via PROFINET?	119
7.1.2	Integrating inverters into PROFINET	120
7.1.3	Configuring communication to the control.....	120
7.1.4	Activating diagnostics via the control	121
7.2	Communication via PROFIBUS	122
7.2.1	What do you need for communication via PROFIBUS?	123
7.2.2	Integrating inverters into PROFIBUS	123
7.2.3	Configuring the communication using SIMATIC S7 control.....	124
7.2.4	Setting the address	124
7.2.5	Select telegram	125
7.3	PROFIdrive profile for PROFIBUS and PROFINET	126
7.3.1	Cyclic communication	126
7.3.1.1	Control and status word 1	128

7.3.1.2	Control and status word 3	131
7.3.1.3	Extend telegrams and change signal interconnection	133
7.3.1.4	Data structure of the parameter channel	134
7.3.1.5	Slave-to-slave communication	139
7.3.2	Acyclic communication.....	140
8	Setting functions	141
8.1	Overview of the inverter functions.....	141
8.2	Inverter control	143
8.2.1	Switching the motor on and off	143
8.2.2	Inverter control using digital inputs	145
8.2.3	Two-wire control: method 1.....	146
8.2.4	Two-wire control, method 2.....	147
8.2.5	Two-wire control, method 3.....	148
8.2.6	Three-wire control, method 1	149
8.2.7	Three-wire control, method 2.....	150
8.2.8	Running the motor in jog mode (JOG function)	151
8.2.9	Switching over the inverter control (command data set).....	153
8.3	Setpoints	155
8.3.1	Analog input as setpoint source.....	156
8.3.2	Specifying the setpoint via the fieldbus.....	156
8.3.3	Motorized potentiometer as setpoint source	157
8.3.4	Fixed speed as setpoint source	159
8.4	Setpoint calculation.....	162
8.4.1	Overview of setpoint processing.....	162
8.4.2	Invert setpoint.....	162
8.4.3	Enable direction of rotation	163
8.4.4	Skip frequency bands and minimum speed	164
8.4.5	Speed limitation.....	165
8.4.6	Ramp-function generator	166
8.5	Motor control	169
8.5.1	V/f control	169
8.5.1.1	Characteristics of U/f control.....	170
8.5.1.2	Selecting the V/f characteristic.....	171
8.5.1.3	Optimizing with a high break loose torque and brief overload	172
8.5.2	Vector control.....	174
8.5.2.1	Properties of the sensorless vector control.....	174
8.5.2.2	Select motor control	175
8.5.2.3	Optimizing the speed controller	175
8.6	Protection and monitoring functions.....	177
8.6.1	Inverter temperature monitoring.....	177
8.6.2	Motor temperature monitoring using a temperature sensor	180
8.6.3	Protecting the motor by calculating the motor temperature	182
8.6.4	Overcurrent protection	184
8.6.5	Limiting the maximum DC link voltage.....	185
8.7	Application-specific functions	187
8.7.1	Unit changeover	188
8.7.1.1	Changing over the motor standard	189
8.7.1.2	Changing over the unit system	190

8.7.1.3	Changing over process variables for the technology controller	190
8.7.1.4	Switching units with STARTER	191
8.7.2	Calculating the energy saving	193
8.7.3	Electrically braking the motor	195
8.7.3.1	DC braking	197
8.7.3.2	Compound braking	200
8.7.3.3	Dynamic braking	202
8.7.3.4	Braking with regenerative feedback to the line	204
8.7.4	Flying restart – switching on while the motor is running	205
8.7.5	Automatic switch-on	207
8.7.6	Kinetic buffering (Vdc min control)	211
8.7.7	PID technology controller	213
8.7.8	Free technology controllers	216
8.7.9	Monitoring the load torque (system protection)	217
8.7.10	Load failure monitoring	219
8.7.11	Real time clock (RTC)	220
8.7.12	Time switch (DTC)	222
8.7.13	Record temperature via temperature-dependent resistances	223
8.7.14	Essential service mode	225
8.7.15	Multi-zone control	229
8.7.16	Bypass	232
8.7.17	Cascade control and hibernation mode	237
8.7.17.1	Cascade control and hibernation mode	237
8.7.17.2	Cascade control	237
8.7.17.3	Hibernation mode	241
8.7.18	Free function blocks	248
8.8	Switchover between different settings	249
9	Backing up data and series commissioning	251
9.1	Backing up and transferring settings using a memory card	252
9.1.1	Saving setting on memory card	253
9.1.2	Transferring the setting from the memory card	256
9.1.3	Safely remove the memory card	259
9.2	Saving settings on a PC	261
9.3	Saving settings on an operator panel	262
9.4	Other ways to back up settings	263
9.5	Write and know-how protection	264
9.5.1	Write protection	264
9.5.2	Know-how protection	266
9.5.2.1	Settings for the know-how protection	268
9.5.2.2	Creating an exception list for the know-how protection	270
10	Corrective maintenance	271
10.1	Overview of replacing converter components	271
10.2	Replace Control Unit	273
10.3	Replacing the Control Unit without data backup	275
10.4	Replacing a Control Unit with active know-how protection	276
10.5	Replacing a Power Module	278


10.6	Upgrading the firmware.....	279
10.7	Firmware downgrade	281
10.8	Correcting an unsuccessful firmware upgrade or downgrade	283
10.9	If the converter no longer responds	284
11	Alarms, faults and system messages	287
11.1	Operating states indicated on LEDs	288
11.2	System runtime	291
11.3	Alarms	292
11.4	Faults	295
11.5	List of alarms and faults	300
11.6	Identification & maintenance data (I&M).....	307
12	Technical data	309
12.1	Technical data for CU230P-2.....	309
12.2	Technical data, Power Modules.....	311
12.2.1	Technical data, PM230	312
12.2.1.1	General data, PM230 - IP20	313
12.2.1.2	Power-dependent data, PM230, IP20.....	314
12.2.1.3	General data, PM230, IP55	321
12.2.1.4	Power dependent data, PM230, IP55.....	322
12.2.2	Technical data, PM240	327
12.2.2.1	General data, PM240.....	328
12.2.2.2	Power-dependent data, PM240	329
12.2.3	Technical data, PM240-2	335
12.2.3.1	High overload - low overload PM240-2.....	335
12.2.3.2	General data, PM240-2 - 400V	336
12.2.3.3	Power-dependent data PM240-2	337
12.2.4	Technical data, PM250	341
12.2.4.1	High Overload - Low Overload.....	341
12.2.4.2	General data, PM250.....	342
12.2.4.3	Power-dependent data, PM250	343
12.2.5	Technical data, PM260	346
12.2.5.1	High Overload - Low Overload.....	346
12.2.5.2	General data, PM260.....	347
12.2.5.3	Power-dependent data, PM260	348
12.2.6	PM330 technical data	349
12.2.6.1	PM330 general data.....	350
12.2.6.2	Power-dependent data, PM330	351
12.3	Restrictions for special ambient conditions.....	354
A	Appendix.....	357
A.1	New and extended functions.....	357
A.1.1	Firmware version 4.5	357
A.1.2	Firmware version 4.6	358
A.1.3	Firmware version 4.6.6	359
A.1.4	Firmware version 4.7	360

A.2	Star-delta motor connection and application examples	361
A.3	Parameter	362
A.4	Handling the BOP 2 operator panel	365
A.4.1	Changing settings using BOP-2	366
A.4.2	Changing indexed parameters	367
A.4.3	Directly entering the parameter number and value	367
A.4.4	A parameter cannot be changed	368
A.5	Handling STARTER	369
A.5.1	Change settings	369
A.5.2	Optimize the drive using the trace function	370
A.6	Interconnecting signals in the converter	373
A.6.1	Fundamentals	373
A.6.2	Example	375
A.7	Manuals and technical support	377
A.7.1	Manuals for your inverter	377
A.7.2	Configuring support	378
A.7.3	Product Support	378
A.8	Mistakes and improvements	379
Index	381


Fundamental safety instructions

1.1 General safety instructions



	DANGER
	<p>Danger to life due to live parts and other energy sources</p> <p>Death or serious injury can result when live parts are touched.</p> <ul style="list-style-type: none"> • Only work on electrical devices when you are qualified for this job. • Always observe the country-specific safety rules. <p>Generally, six steps apply when establishing safety:</p> <ol style="list-style-type: none"> 1. Prepare for shutdown and notify all those who will be affected by the procedure. 2. Disconnect the machine from the supply. <ul style="list-style-type: none"> – Switch off the machine. – Wait until the discharge time specified on the warning labels has elapsed. – Check that it really is in a no-voltage condition, from phase conductor to phase conductor and phase conductor to protective conductor. – Check whether the existing auxiliary supply circuits are de-energized. – Ensure that the motors cannot move. 3. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water. 4. Isolate or neutralize all hazardous energy sources by closing switches, grounding or short-circuiting or closing valves, for example. 5. Secure the energy sources against switching on again. 6. Ensure that the correct machine is completely interlocked. <p>After you have completed the work, restore the operational readiness in the inverse sequence.</p>



	WARNING
	<p>Danger to life through a hazardous voltage when connecting an unsuitable power supply</p> <p>Touching live components can result in death or severe injury.</p> <ul style="list-style-type: none"> • Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV- (Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.



! WARNING

Danger to life when live parts are touched on damaged devices

Improper handling of devices can cause damage.

For damaged devices, hazardous voltages can be present at the enclosure or at exposed components; if touched, this can result in death or severe injury.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged devices.



! WARNING

Danger to life through electric shock due to unconnected cable shields

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- As a minimum, connect cable shields and the conductors of power cables that are not used (e.g. brake cores) at one end at the grounded housing potential.



! WARNING

Danger to life due to electric shock when not grounded

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

- Ground the device in compliance with the applicable regulations.



! WARNING

Danger to life due to electric shock when opening plug connections in operation

When opening plug connections in operation, arcs can result in severe injury or death.

- Only open plug connections when the equipment is in a no-voltage state, unless it has been explicitly stated that they can be opened in operation.

! WARNING

Danger to life due to fire spreading if housing is inadequate

Fire and smoke development can cause severe personal injury or material damage.

- Install devices without a protective housing in a metal control cabinet (or protect the device by another equivalent measure) in such a way that contact with fire is prevented.
- Ensure that smoke can only escape via controlled and monitored paths.

 **WARNING****Danger to life through unexpected movement of machines when using mobile wireless devices or mobile phones**

Using mobile wireless devices or mobile phones with a transmit power > 1 W closer than approx. 2 m to the components may cause the devices to malfunction, influence the functional safety of machines therefore putting people at risk or causing material damage.

- Switch the wireless devices or mobile phones off in the immediate vicinity of the components.

 **WARNING****Danger to life due to the motor catching fire in the event of insulation overload**

There is higher stress on the motor insulation through a ground fault in an IT system. If the insulation fails, it is possible that death or severe injury can occur as a result of smoke and fire.

- Use a monitoring device that signals an insulation fault.
- Correct the fault as quickly as possible so the motor insulation is not overloaded.

 **WARNING****Danger to life due to fire if overheating occurs because of insufficient ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

 **WARNING****Danger of an accident occurring due to missing or illegible warning labels**

Missing or illegible warning labels can result in accidents involving death or serious injury.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, in the national language if necessary.
- Replace illegible warning labels.

NOTICE

Device damage caused by incorrect voltage/insulation tests

Incorrect voltage/insulation tests can damage the device.

- Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all converters and motors have been subject to a high voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.



WARNING

Danger to life when safety functions are inactive

Safety functions that are inactive or that have not been adjusted accordingly can cause operational faults on machines that could lead to serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

Note

Important safety notices for Safety Integrated functions

If you want to use Safety Integrated functions, you must observe the safety notices in the Safety Integrated manuals.



WARNING

Danger to life or malfunctions of the machine as a result of incorrect or changed parameterization

As a result of incorrect or changed parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the parameterization (parameter assignments) against unauthorized access.
- Respond to possible malfunctions by applying suitable measures (e.g. EMERGENCY STOP or EMERGENCY OFF).

1.2 Safety instructions for electromagnetic fields (EMF)



WARNING

Danger to life from electromagnetic fields

Electromagnetic fields (EMF) are generated by the operation of electrical power equipment such as transformers, converters or motors.

People with pacemakers or implants are at a special risk in the immediate vicinity of these devices/systems.

- Ensure that the persons involved are the necessary distance away (minimum 2 m).

1.3 Handling electrostatic sensitive devices (ESD)

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



NOTICE

Damage through electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g. conductive foam rubber or aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
 - Wearing an ESD wrist strap
 - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

1.4 Industrial security

Note

Industrial security

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit Hotspot-Text (<http://www.siemens.com/industrialsecurity>).

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit Hotspot-Text (<http://support.automation.siemens.com>).

WARNING

Danger as a result of unsafe operating states resulting from software manipulation

Software manipulation (e.g. by viruses, Trojan horses, malware, worms) can cause unsafe operating states to develop in your installation which can result in death, severe injuries and/or material damage.

- Keep the software up to date.
You will find relevant information and newsletters at this address (<http://support.automation.siemens.com>).
- Incorporate the automation and drive components into a holistic, state-of-the-art industrial security concept for the installation or machine.
You will find further information at this address (<http://www.siemens.com/industrialsecurity>).
- Make sure that you include all installed products into the holistic industrial security concept.

1.5 Residual risks of power drive systems

The control and drive components of a drive system are approved for industrial and commercial use in industrial line supplies. Their use in public line supplies requires a different configuration and/or additional measures.

These components may only be operated in closed housings or in higher-level control cabinets with protective covers that are closed, and when all of the protective devices are used.

These components may only be handled by qualified and trained technical personnel who are knowledgeable and observe all of the safety instructions on the components and in the associated technical user documentation.

When assessing the machine's risk in accordance with the respective local regulations (e.g., EC Machinery Directive), the machine manufacturer must take into account the following residual risks emanating from the control and drive components of a drive system:

1. Unintentional movements of driven machine components during commissioning, operation, maintenance, and repairs caused by, for example,
 - Hardware and/or software errors in the sensors, control system, actuators, and cables and connections
 - Response times of the control system and of the drive
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - Parameterization, programming, cabling, and installation errors
 - Use of wireless devices/mobile phones in the immediate vicinity of the control system
 - External influences/damage
2. In the event of a fault, exceptionally high temperatures, including an open fire, as well as emissions of light, noise, particles, gases, etc. can occur inside and outside the inverter, e.g.:
 - Component failure
 - Software errors
 - Operation and/or environmental conditions outside the specification
 - External influences/damage

Inverters of the Open Type/IP20 degree of protection must be installed in a metal control cabinet (or protected by another equivalent measure) such that contact with fire inside and outside the inverter is not possible.

1.5 Residual risks of power drive systems

3. Hazardous shock voltages caused by, for example,
 - Component failure
 - Influence during electrostatic charging
 - Induction of voltages in moving motors
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - External influences/damage
4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too close
5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly

Note

The components must be protected against conductive contamination (e.g. by installing them in a control cabinet with degree of protection IP54 according to IEC 60529 or NEMA 12).

Assuming that conductive contamination at the installation site can definitely be excluded, a lower degree of cabinet protection may be permitted.

For more information about residual risks of the components in a drive system, see the relevant sections in the technical user documentation.

Introduction

2.1 About this manual

Who requires the operating instructions and what for?

These operating instructions primarily address fitters, commissioning engineers and machine operators. The operating instructions describe the devices and device components and enable the target groups being addressed to install, connect-up, set, and commission the converters safely and in the correct manner.









What is described in the operating instructions?

These operating instructions provide a summary of all of the information required to operate the converter under normal, safe conditions.

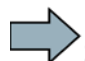The information provided in the operating instructions has been compiled in such a way that it is sufficient for all standard applications and enables drives to be commissioned as efficiently as possible. Where it appears useful, additional information for entry level personnel has been added.


The operating instructions also contain information about special applications. Since it is assumed that readers already have a sound technical knowledge of how to configure and parameterize these applications, the relevant information is summarized accordingly. This relates, e.g. to operation with fieldbus systems and safety-related applications.

What is the meaning of the symbols in the manual?

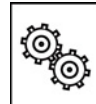-  ¹
₂ An operating instruction starts here.
-  This concludes the operating instruction.
-  The subsequent text is applicable for an operator panel.
-  The following text applies if you are using a PC with STARTER.
-   Examples of the inverter-function symbols
The description of the corresponding inverter function starts with one of these symbols.
-   See also: Overview of the inverter functions (Page 141).

This product contains software that has been developed by the OpenSSL project for use in the OpenSSL toolkit. (See also <http://www.openssl.org> (<http://www.openssl.org/>))

2.2 Guide through this manual

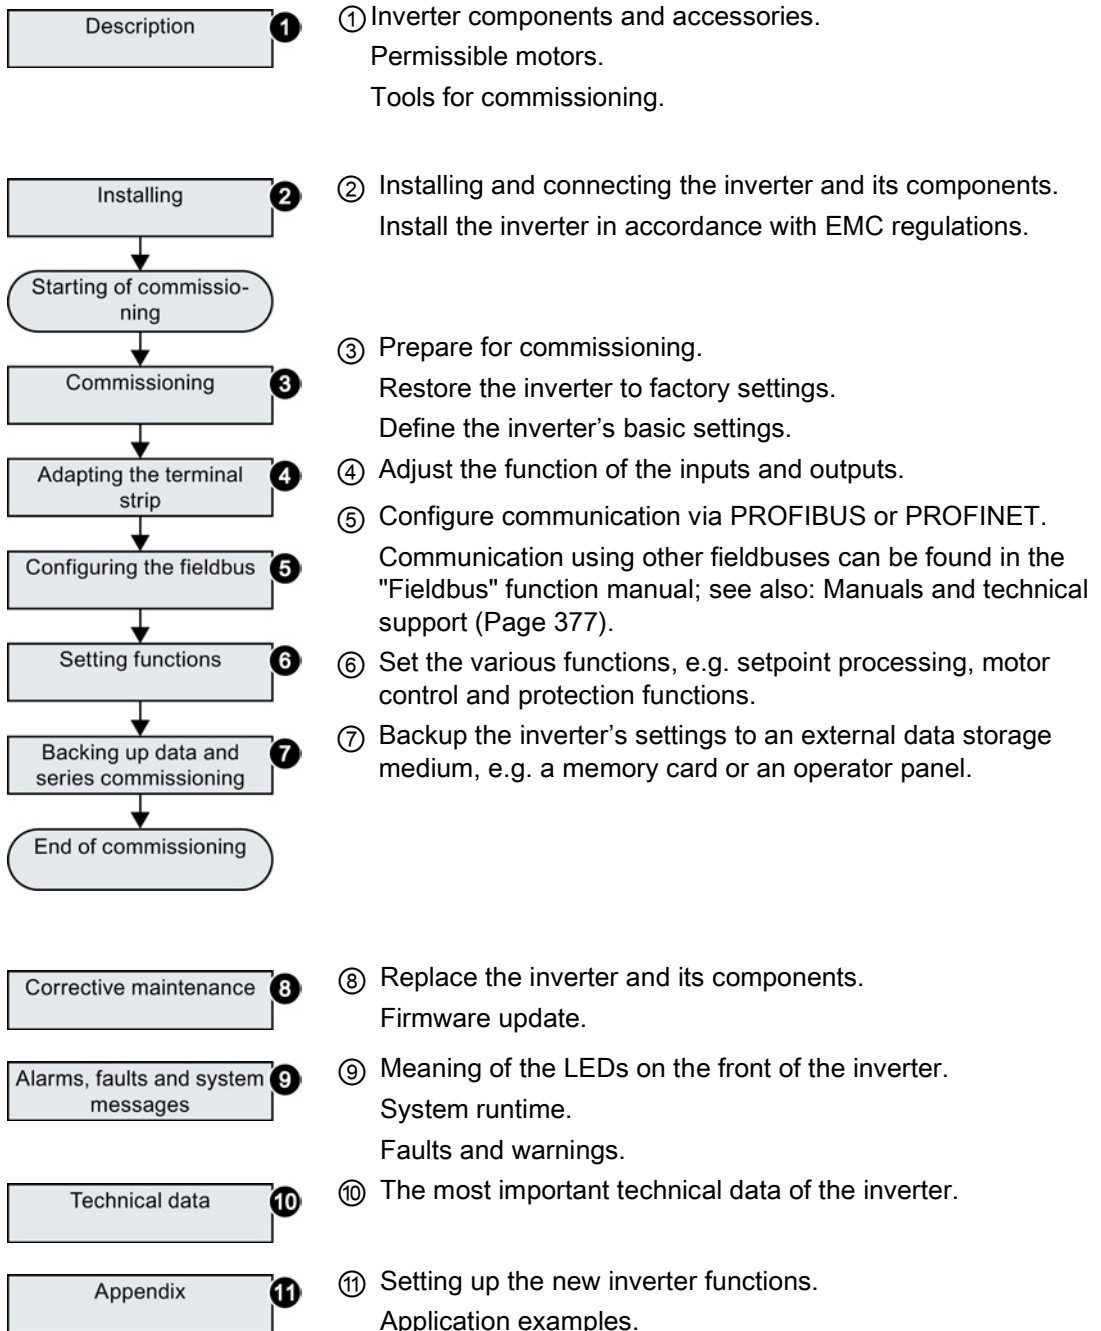

Description

Use for the intended purpose

The inverter described in this manual is a device for controlling an induction motor. The inverter is designed for installation in electrical installations or machines.

It has been approved for industrial and commercial use on industrial networks. Additional measures have to be taken when connected to public grids.


The technical specifications and information about connection conditions are indicated on the rating plate and in the operating instructions.

3.1 Identifying the converter

Main components of the inverter

Each SINAMICS G120 inverter comprises a Control Unit and a Power Module.

- The Control Unit controls and monitors the Power Module and the connected motor.
- The Power Modules are available for motors with a power range of between 0.37 kW and 250 kW.

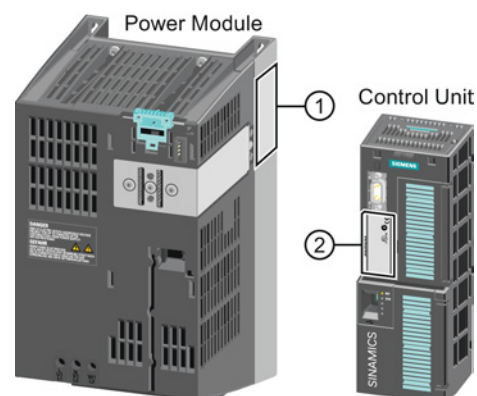

The following data is provided on the Power Module type plate (①):

- Designation: e.g. Power Module 240
- Technical data: Voltage and current
- Order number: e.g. 6SL3224-0BE13-7UA0
- Version: e.g. A02

The following data can be found on the Control Unit type plate (②):

- Designation: e.g. Control Unit CU240E-2 DP-F
- Order number: e.g. 6SL3244-0BB13-1PA0
- Version: e.g. A02 (hardware)

Further inverter components

The following components are available so that you can adapt the inverter to different applications and ambient conditions:

- Line filter (Page 30)
- Line reactor (Page 31)
- Output reactor (Page 33)
- Sine-wave filter (Page 36)
- dv/dt filter (Page 37)
- Braking Module and braking resistor (Page 38)

3.2 Control Units

The Control Units differ with regard to the type of fieldbus.

Designation	CU230P-2 HVAC	CU230P-2 DP	CU230P-2 PN	CU230P-2 CAN	CU230P-2 BT ¹⁾
Order number	6SL3243-0BB30-1HA3	6SL3243-0BB30-1PA3	6SL3243-0BB30-1FA0	6SL3243-0BB30-1CA3	6SL3243-6BB30-1HA3
Fieldbus	USS, Modbus RTU, BACnet MS/TP, P1	PROFIBUS DP	PROFINET IO, EtherNet/IP	CANopen	USS, Modbus RTU, BACnet MS/TP, P1
Digital inputs	6				
Analog inputs	4				
Digital outputs	3				
Analog outputs	2				

¹⁾ Exclusive version for Siemens IC BT

Memory cards

The following memory cards are available as medium to back up converter settings:

- Card without firmware: Order No. 6SL3054-4AG00-2AA0.
- Card with firmware: Order No. 6SL3054-7Ex00-2BA0.

The digit at position x designates the firmware version:

4.6 \triangleq EG, 4.7 \triangleq EH

Shield connection kit for the Control Unit

The shield connection kit is an optional component. The shield connection kit comprises the following components:

- Shield plate
- Elements for optimum shield support and strain relief of the signal and communication cables

Table 3- 1 Order numbers

Shield connection kit 1 for the CU230P-2 Control Units with all fieldbus interfaces except for PROFINET.	6SL3264-1EA00-0FA0
Shield connection kit 3 for the CU230P-2 and CU240E-2 Control Units with PROFINET interface.	6SL3264-1EA00-0HB0

3.3 Power Module

Important data on the Power Modules is provided in this section. Further information is contained in the hardware installation manuals listed in Section Manuals for your inverter (Page 377).

All power data refers to rated values or to power for operation with low overload (LO).

Which Power Module can I use with the Control Unit?

You can operate the CU230P-2 Control Unit with the following Power Modules:

- PM230
- PM240
- PM250
- PM330
- PM240-2
- PM260

3.3.1 Power Modules in degree of protection IP20 and with push-through system



Figure 3-1 Power Module with degree of protection IP20 examples



Figure 3-2 Power Modules with the push-through system FSA ... FSC

PM230, 3 AC 400 V - Pump and fan applications

The PM230 Power Module is available without a filter or with integrated class A line filter.

Range of order numbers:

- Range of order numbers:
- IP20: 6SL3210-1NE...
 - Push through: 6SL3211-1NE...

Frame size	FSA	FSB	FSC	FSD	FSE	FSF	
Power range (kW), IP20	0,37 ... 3	4 ... 7,5	11 ... 18,5	22 ... 37	45 ... 55	75 ... 90	
Power range (kW), PT	3	7,5	18,5	---	---	---	

PM330, 3 AC 400 V - Pump, fan and compressor applications

The PM330 Power Module is available as an unfiltered device with IP20 degree of protection. External line filters are available as an option, see Section

Range of order numbers: 6SL3310-1PE...

Frame size	GX						
Power range (kW)	160 ... 200						

PM240, 3 AC 400 V - Standard areas of application

The PM240 Power Module is available without a filter or with an integrated class A line filter with degree of protection IP20. The PM240 allows dynamic braking via an external braking resistor.

Order number range: 6SL3224-0BE... and 6SL3224-0XE...

Frame size	FSA	FSB	FSC	FSD	FSE	FSF	FSGX
Power range (kW)	0.37 ... 1.5	2.2 ... 4	7.5 ... 15	18.5 ... 30	37 ... 45	55 ... 132	160 ... 250

PM240-2, 3 AC 400 V - standard areas of application

The PM240-2 Power Module is available without a filter or with an integrated class A line filter. The PM240-2 permits dynamic braking via an external braking resistor.

- Range of order numbers:
- IP20: 6SL3210-1PE...
 - Push through: 6SL3211-1PE...

Frame size	FSA	FSB	FSC				
Power range (kW), IP20	0,55 ... 3,0	4,0 ... 7,5	11 ... 15				
Power range (kW), PT	3,0	7,5	15				

PM250, 3 AC 400 V - Application areas with line regeneration

The PM250 Power Module is available without a filter or with an integrated class A line filter with degree of protection IP20. The PM250 permits dynamic braking with energy feedback into the line supply.

Order number range, IP20: 6SL3225-0BE ...

Frame size	FSC	FSD	FSE	FSF			
Power range (kW)	7.5 ... 15	18.5 ... 30	37 ... 45	55 ... 90			

PM260, 3 AC 690 V - Application areas with line regeneration

The PM260 Power Module is available without a filter or with an integrated class A line filter with degree of protection IP20. A sine-wave filter is fitted to the motor. The PM260 permits dynamic braking with energy feedback into the line supply.

Order number range, IP20: 6SL3225-0BH...


Frame size	FSD	FSF					
Power range (kW)	11 ... 18.5	30 ... 55					

Shield connection kit

The shield connection kit offers optimum shield support and strain relief for line and motor cables. It comprises a shield plate with serrated strips with screws.

Shield connection kits are available for frame sizes FSA ... FSF.

- PM230 and PM240-2, FSA up to FSC:
The shield connection kit belongs to the scope of supply of the Power Module.
- All other Power Modules:
The shield connection kit is an optional component and must be ordered separately.

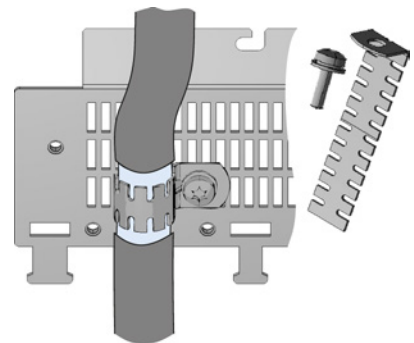


Adapter for rail mounting for PM240, PM250 and PM260, frame sizes FSA and FSF

You can use the adapter for rail mounting to mount the Power Module onto two mounting rails with a center-to-center distance of 100 mm.

Order numbers for shield connection kit and DIN rail mounting adapter

Frame size	Shield connection kit for Power Modules		Adapter for mounting on DIN rails
	PM240, PM250	PM260	
FSA	6SL3262-1AA00-0BA0	-	6SL3262-1BA00-0BA0
FSB	6SL3262-1AB00-0DA0	-	6SL3262-1BB00-0BA0
FSC	6SL3262-1AC00-0DA0	-	-
FSD	6SL3262-1AD00-0DA0	6SL3262-1FD00-0CA0	-
FSE	6SL3262-1AD00-0DA0	-	-
FSF	6SL3262-1AF00-0DA0	6SL3262-1FF00-0CA0	-

3.3.2 Power Module in IP55 degree of protection / UL Type 12

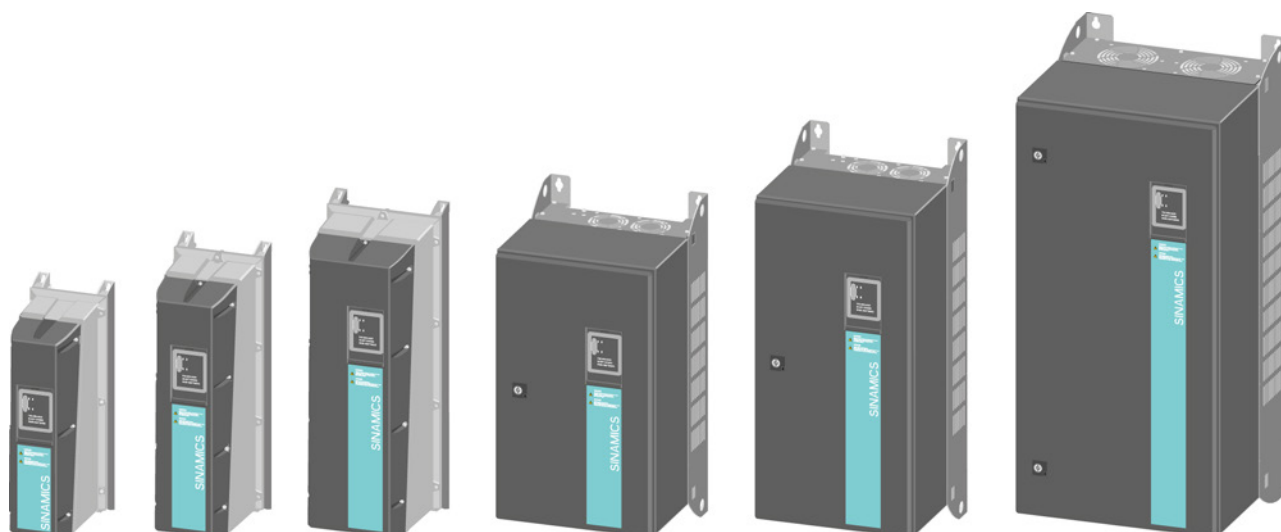

PM230, 3 AC 400 V, degree of protection IP55 / UL Type 12

Frame size		FSA	FSB	FSC	FSD	FSE	FSF
Power range (kW)	Filter Class A	0,37 ... 3	4 ... 7,5	11 ... 18,5	22 ... 30	37 ... 45	55 ... 90
	Filter Class B	0,37 ... 3	4 ... 7,5	11 ... 15	18,5 ... 30	37 ... 45	55 ... 90

The Power Module PM230 IP55/UL Type 12 is suitable for installation close to the motor.
Range of order numbers: 6SL3223-0DE...

3.4 Components for the Power Modules

3.4.1 Line filter

With a line filter, the inverter can achieve a higher radio interference class. An external filter is not required for inverters with integrated line filter.

Adjacent examples of line filters.

Filters comply with Class A, or B according to EN55011: 2009.



External line filters for PM240

Power Module 6SL3224-...		Power	Line filter, class A
FSA	...0BE13-7UA0, ...0BE15-5UA0, ...0BE17-5UA0, ...0BE21-1UA0, ...0BE21-5UA0	0.37 kW ... 1.5 kW	6SE6400-2FA00-6AD0
FSF	...0BE38-8UA0, ...0BE41-1UA0	110 kW ... 132 kW	6SL3203-0BE32-5AA0
FSGX	...0XE41-3UA0, ...0XE41-6UA0	160 kW ... 200 kW	6SL3000-0BE34-4AA0
	...0XE42-0UA0	250 kW	6SL3000-0BE36-0AA0

Power Module 6SL3224-...		Power	Line filter, class B
FSA	...0BE13-7UA0, ...0BE15-5UA0, ...0BE17-5UA0, ...0BE21-1UA0, ...0BE21-5UA0	0.37 kW ... 1.5 kW	6SE6400-2FB00-6AD0
FSB	...0BE22-2AA0, ...0BE23-0AA0, ...0BE24-0AA0	2.2 kW ... 4.0 kW	6SL3203-0BE21-6SA0
FSC	...0BE25-5UA0, ...0BE27-5UA0, ...0BE31-1UA0	7.5 kW ... 15.0 kW	6SL3203-0BD23-8SA0

External line filters for PM250

Power Module 6SL3225-...		Power	Line filter, class B
FSC	...0BE25-5AA0, ...0BE27-5AA0, ...0BE31-1AA0	7.5 kW ... 15.0 kW	6SL3203-0BD23-8SA0

External line filters for PM330

Power Module 6SL3310-...		Power	Line filter, class A
GX	...1PE33-0AA0, ...1PE33-7AA0	160 kW ... 200 kW	6SL3000-0BE33-1AA0

3.4.2 Line reactor

The line reactor supports the overvoltage protection, smoothes the harmonics in the line supply and bridges commutation dips. For the Power Modules subsequently listed, a line reactor is suitable in order to dampen the specified effects.

Adjacent examples of line reactors.



NOTICE	
Damage to the inverter as a result of a missing line reactor	
Depending on the Power Module and line supply, if a line reactor is not used, this can result in damage to the inverter and other components in the electrical plant or system.	
<ul style="list-style-type: none"> • PM240 or PM240-2: Install a line reactor if the relative short-circuit voltage of the line supply is below 1% • PM330: You must always install a line reactor. 	

Line reactors for PM240

Power Module 6SL3224-...		Power	Line reactor
FSA	...0BE13-7UA0, ...0BE15-5UA0	0.37 kW ... 0.55 kW	6SE6400-3CC00-2AD3
	...0BE17-5UA0, ...0BE21-1UA0	0.75 kW ... 1.1 kW	6SE6400-3CC00-4AD3
	...0BE21-5UA0	1.5 kW	6SE6400-3CC00-6AD3
FSB	...0BE22-2□A0, ...0BE23-0□A0	2.2 kW ... 3.0 kW	6SL3203-0CD21-0AA0
	...0BE24-0□A0	4.0 kW	6SL3203-0CD21-4AA0
FSC	...0BE25-5□A0, ...0BE27-5□A0	7.5 kW ... 11.0 kW	6SL3203-0CD22-2AA0
	...0BE31-1□A0	15.0 kW	6SL3203-0CD23-5AA0
FSD	...0BE31-5□A0, ...0BE31-8□A0	18.5 kW ... 22 kW	6SL3203-0CJ24-5AA0
	...0BE32-2□A0	30 kW	6SL3203-0CD25-3AA0
FSE	...0BE33-0□A0, ...0BE33-7□A0	37 kW ... 45 kW	6SL3203-0CJ28-6AA0
FSF	...0BE34-5□A0, ...0BE35-5□A0	55 kW ... 75 kW	6SE6400-3CC11-2FD0
	...0BE37-5□A0	90 kW	6SE6400-3CC11-7FD0
	...0BE38-8UA0	110 kW	6SL3000-0CE32-3AA0
	...0BE41-1UA0	132 kW	6SL3000-0CE32-8AA0
FSGX	...0XE41-3UA0	160 kW	6SL3000-0CE33-3AA0
	...0XE41-6UA0, ...0XE42-0UA0	200 kW ... 250 kW	6SL3000-0CE35-1AA0

Line reactors for PM240-2

Power Module 6SL321□-...		Power	Line reactor
FSA	...1PE11-8□L0, ...1PE12-3□L0, ...1PE13-2□L0	0.55 kW ... 1.1 kW	6SL3203-0CE13-2AA0
	...1PE14-3□L0, ...1PE16-1□L0, ...1PE18-0□L0	1.5 kW ... 3.0 kW	6SL3203-0CE21-0AA0

Line reactors for PM330

Power Module 6SL3310-...		Power	Line reactor
GX	...1PE33-0AA0	160 kW	6SL3000-0CE33-3AA0
	...1PE33-7AA0	200 kW	6SL3000-0CE35-1AA0

3.4.3 Output reactor

Output reactors reduce the voltage stress on the motor windings. Further, they reduce the inverter load as a result of capacitive recharging currents in the cables. An output reactor is required for motor cables longer than 50 m, shielded or 100 m unshielded.

The output reactors are designed for pulse frequencies of 4 kHz.

Adjacent examples of output reactors.



for PM240
FSA, FSB

Power Module PM330 requirements:

An output reactor is required for a motor cable length longer than

- 100 m shielded
- 200 m unshielded

The maximum pulse frequency with an output reactor is 4 kHz.

Output reactors for PM230 Power Modules (IP20)

6SL3210-... Power Modules		Power	Output reactor
FSA	...1NE11-3□L0, ...1NE11-7□L0, ...1NE12-2□L0, ...1NE13-1□L0, ...1NE14-1□L0, ...1NE15-8□L0	0.37 kW ... 2.2 kW	6SL3202-0AE16-1CA0
	...1NE17-7□L0	3.0 kW	6SL3202-0AE18-8CA0
FSB	...1NE21-0□L0, ...1NE21-3□L0, ...1NE21-8□L0	4.0 kW ... 7.5 kW	6SL3202-0AE21-8CA0
	...1NE22-6□L0, ...1NE23-2□L0, ...1NE23-8□L0	11.0 kW ... 18.5 kW	6SL3202-0AE23-8CA0
FSD	...1NE24-5□L0	22 kW	6SE6400-3TC03-8DD0
	...1NE26-0□L0	30 kW	6SE6400-3TC05-4DD0
FSE	...1NE27-5□L0	37 kW	6SE6400-3TC08-0ED0
	...1NE28-8□L0	45 kW	6SE6400-3TC07-5ED0
FSF	...1NE31-1□L0	55 kW	6SE6400-3TC14-5FD0
	...1NE31-5□L0	75 kW	6SE6400-3TC15-4FD0

Output reactors for PM230 push-through Power Modules

6SL3211-... Power Modules		Power	Output reactor
FSA	...1NE17-7□L0	3.0 kW	6SL3202-0AE18-8CA0
FSB	...1NE21-8□L0	7.5 kW	6SL3202-0AE21-8CA0
FSC	...1NE23-8□L0	18.5 kW	6SL3202-0AE23-8CA0

Output reactors for PM230 Power Modules (IP55/UL Type 12)

6SL3223-... Power Modules		Power	Output reactor
FSA	...0DE13-7□A0, ...0DE15-5□A0, ...0DE17-5□A0, ...0DE21-1□A0, ...0DE21-5□A0, ...0DE22-2□A0	0.37 kW ... 2.2 kW	6SL3202-0AE16-1CA0
	...0DE23-0□A0,	3.0 kW	6SL3202-0AE18-8CA0
FSB	...0DE24-0□A0, ...0DE25-5□A0, ...0DE27-5□A0,	4.0 kW ... 7.5 kW	6SL3202-0AE21-8CA0
FSC	...0DE31-1□A0, ...0DE31-5□A0, ...0DE31-8□A0	11.0 kW ... 18.5 kW	6SL3202-0AE23-8CA0
FSD	...0DE32-2□A0	22 kW	6SE6400-3TC03-8DD0
	...0DE33-0□A0	30 kW	6SE6400-3TC05-4DD0
FSE	...0DE33-7□A0	37 kW	6SE6400-3TC08-0ED0
	...0DE34-5□A0	45 kW	6SE6400-3TC07-5ED0
FSF	...0DE35-5□A0	55 kW	6SE6400-3TC14-5FD0
	...0DE37-5□A0	75 kW	6SE6400-3TC15-4FD0
	...0DE38-8□A0	90 kW	6SE6400-3TC14-5FD0

Output reactors for PM240 Power Module

Power Module 6SL3224-...		Power	Output reactor
FSA	...0BE13-7UA0, ...0BE15-5UA0, ...0BE17-5UA0, ...0BE21-1UA0, ...0BE21-5UA0	0.37 kW ... 1.5 kW	6SE6400-3TC00-4AD2
FSB	...0BE22-2□A0, ...0BE23-0□A0, ...0BE24-0□A0	2.2 kW ... 4.0 kW	6SL3202-0AE21-0CA0
FSC	...0BE25-5□A0, ...0BE27-5□A0, ...0BE31-1□A0	7.5 kW ... 15.0 kW	6SL3202-0AJ23-2CA0
FSD	...0BE31-5□A0	18,5 kW	6SE6400-3TC05-4DD0
	...0BE31-8□A0	22 kW	6SE6400-3TC03-8DD0
	...0BE32-2□A0	30 kW	6SE6400-3TC05-4DD0
FSE	...0BE33-0□A0	37 kW	6SE6400-3TC08-0ED0
	...0BE33-7□A0	45 kW	6SE6400-3TC07-5ED0
FSF	...0BE34-5□A0	55 kW	6SE6400-3TC14-5FD0
	...0BE35-5□A0	75 kW	6SE6400-3TC15-4FD0
	...0BE37-5□A0	90 kW	6SE6400-3TC14-5FD0
	...0BE38-8UA0	110 kW	6SL3000-2BE32-1AA0
	...0BE41-1UA0	132 kW	6SL3000-2BE32-6AA0
FSGX	...0XE41-3UA0	160 kW	6SL3000-2BE33-2AA0
	...0XE41-6UA0	200 kW	6SL3000-2BE33-8AA0
	...0XE42-0UA0	250 kW	6SL3000-2BE35-0AA0

Output reactors for PM250 Power Module

Power Module 6SL3225-...		Power	Output reactor
FSC	...0BE25-5□A0, ...0BE27-5□A0, ...0BE31-1□A0	7.5 kW ... 15.0 kW	6SL3202-0AJ23-2CA0
FSD	...0BE31-5□A0	18,5 kW	6SE6400-3TC05-4DD0
	...0BE31-8□A0	22 kW	6SE6400-3TC03-8DD0
	...0BE32-2□A0	30 kW	6SE6400-3TC05-4DD0
FSE	...0BE33-0□A0	37 kW	6SE6400-3TC08-0ED0
	...0BE33-7□A0	45 kW	6SE6400-3TC07-5ED0
FSF	...0BE34-5□A0	55 kW	6SE6400-3TC14-5FD0
	...0BE35-5□A0	75 kW	6SE6400-3TC15-4FD0
	...0BE37-5□A0	90 kW	6SE6400-3TC14-5FD0

Output reactors for PM240-2 Power Modules (IP20)

6SL3210-... Power Modules		Power	Output reactor
FSA	...1PE11-8□L0, ...1PE12-3□L0, ...1PE13-2□L0, ...1PE14-3□L0, ...1PE16-1□L0	0.55 kW ... 2.2 kW	6SL3202-0AE16-1CA0
	...1PE18-0UL0	3.0 kW	6SL3202-0AE18-8CA0

Output reactors for PM240-2 push-through Power Modules

6SL3211-... Power Modules		Power	Output reactor
FSA	...1PE16-1□L0	2.2 kW	6SL3202-0AE16-1CA0
	...1PE18-0UL0	3.0 kW	6SL3202-0AE18-8CA0

Output reactors for PM330 Power Module

Power Module 6SL3310-...		Power	Output reactor
GX	...1PE33-0AA0	160 kW	6SL3310-1PE33-0AA0
	...1PE33-7AA0	200 kW	6SL3310-1PE33-7AA0

3.4.4 Sine-wave filter

The sine-wave filter at the inverter outputs almost sinusoidal voltages to the motor, so that you can use standard motors without special cables. The maximum permissible length of motor feeder cables is increased to 300 m.

The following applies when using a sine-wave filter:

- Operation is only permissible with pulse frequencies from 4 kHz to 8 kHz.
From 110 kW power rating of the Power Modules (according to the rating plate) only 4 kHz is permissible.
- The inverter power is reduced by 5%.
- The maximum output frequency of the inverter is 150 Hz at 380 V to 480 V.
- Operation and commissioning may only be performed with the motor connected, as the sine-wave filter is not no-load proof.
- An output reactor is superfluous.



for FSF

Sine-wave filter for PM240 Power Module

Power Module 6SL3224-...		Power	Sine-wave filter
FSA	...0BE13-7UA0, ...0BE15-5UA0, ...0BE17-5UA0	0.37 kW ... 0.75 kW	6SL3202-0AE20-3SA0
	...0BE21-1UA0, ...0BE21-5UA0	1.1 kW ... 1.5 kW	6SL3202-0AE20-6SA0
FSB	...0BE22-2□A0, ...0BE23-0□A0	2.2 kW ... 3.0 kW	6SL3202-0AE21-1SA0
	...0BE24-0□A0	4.0 kW	6SL3202-0AE21-4SA0
FSC	...0BE25-5□A0	7.5 kW	6SL3202-0AE22-0SA0
	...0BE27-5□A0, ...0BE31-1□A0	11.0 kW ... 15.0 kW	6SL3202-0AE23-3SA0
FSD	...0BE31-5□A0, ...0BE31-8□A0	18.5 kW ... 22 kW	6SL3202-0AE24-6SA0
	...0BE32-2□A0	30 kW	6SL3202-0AE26-2SA0
FSE	...0BE33-0□A0, ...0BE33-7□A0	37 kW ... 45 kW	6SL3202-0AE28-8SA0
FSF	...0BE34-5□A0, ...0BE35-5□A0	55 kW ... 75 kW	6SL3202-0AE31-5SA0
	...0BE37-5□A0	90 kW	6SL3202-0AE31-8SA0
	...0BE38-8UA0, ...0BE41-1UA0	110 kW ... 132 kW	6SL3000-2CE32-3AA0
FSGX	...0XE41-3UA0	160 kW	6SL3000-2CE32-8AA0
	...0XE41-6UA0	200 kW	6SL3000-2CE33-3AA0
	...0XE42-0UA0	250 kW	6SL3000-2CE34-1AA0

Sine-wave filter for PM250 Power Module

Power Modul 6SL3225-...		Power	Sine-wave filter
FSC	...0BE25-5□A0	7.5 kW	6SL3202-0AE22-0SA0
	...0BE27-5□A0, ...0BE31-1□A0	11.0 kW ... 15.0 kW	6SL3202-0AE23-3SA0
FSD	...0BE31-5□A0, ...0BE31-8□A0	18.5 kW ... 22 kW	6SL3202-0AE24-6SA0
	...0BE32-2□A0	30 kW	6SL3202-0AE26-2SA0
FSE	...0BE33-0□A0, ...0BE33-7□A0	37 kW ... 45 kW	6SL3202-0AE28-8SA0
FSF	...0BE34-5□A0, ...0BE35-5□A0	55 kW ... 75 kW	6SL3202-0AE31-5SA0
	...0BE37-5□A0	90 kW	6SL3202-0AE31-8SA0

3.4.5 dv/dt filter

dv/dt filter for PM330 Power Module

When you use a dv/dt filter, the permitted cable length between the filter and the motor increases to 100 m for a shielded cable or 150 m for an unshielded cable. For further details, refer to the description of the dv/dt filter.

Power Module 6SL3310-...		Power	Standard sine-wave filter	Compact sine-wave filter
GX	...1PE33-0AA0	160 kW	6SL3000-2DE35-0AA0	6SL3000-2DE35-0EA0
	...1PE33-7AA0	200 kW	6SL3000-2DE35-0AA0	6SL3000-2DE35-0EA0

3.4.6 Braking Module and braking resistor

The braking resistor allows loads with a high moment of inertia to be quickly braked.

Inverters with power up to 132 kW have an integrated Braking Module that controls the braking resistor.

A Braking Module is available as option for inverters with more power.

An example for a braking resistor is shown at the side.



Braking resistors for PM240

Power Modules		Power	Braking Module	Braking resistor
6SL3224-...			6SL3300-...	
FSA	...0BE13-7UA0, ...0BE15-5UA0, ...0BE17-5UA0, ...0BE21-1UA0, ...0BE21-5UA0	0.37 kW ... 1.5 kW	---	6SE6400-4BD11-0AA0
FSB	...0BE22-2□A0, ...0BE23-0□A0, ...0BE24-0□A0	2.2 kW ... 4.0 kW	---	6SL3201-0BE12-0AA0
FSC	...0BE25-5□A0, ...0BE27-5□A0 ...0BE31-1□A0	7.5 kW ... 15.0 kW	---	6SE6400-4BD16-5CA0
FSD	...0BE31-5□A0, ...0BE31-8□A0, ...0BE32-2□A0	18.5 kW ... 30 kW	---	6SE6400-4BD21-2DA0
FSE	...0BE33-0□A0, ...0BE33-7□A0	37 kW ... 45 kW	---	6SE6400-4BD22-2EA1
FSF	...0BE34-5□A0, ...0BE35-5□A0, ...0BE37-5□A0	55 kW ... 90 kW	---	6SE6400-4BD24-0FA0
	...0BE38-8UA0, ...0BE41-1UA0	110 kW ... 132 kW	---	6SE6400-4BD26-0FA0
FSGX	...0XE41-3UA0	160 kW	---	6SL3000-1BE31-3AA0
	...0XE41-6UA0, ...0XE42-0UA0	200 kW ... 250 kW	...1AE32-5AA0	6SL3000-1BE32-5AA0

Braking resistors for PM240-2


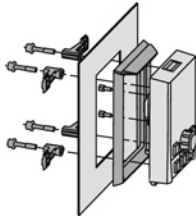




Power Module 6SL321□-...		Power	Braking resistor
FSA	...1PE11-8□L0, ...1PE12-3□L0, ...1PE13-2□L0	0.55 kW ... 1.1 kW	6SL3201-0BE14-3AA0
	...1PE14-3□L0, ...1PE16-1□L0, ...1PE18-0□L0	1.5 kW ... 3.0 kW	6SL3201-0BE21-0AA0

Braking Modules and braking resistors for PM330

Power Module		Braking Module		Braking resistor	
6SL3310-...		Power	6SL3760-...	Power	6SE7032-...
GX	...1PE33-0AA0, ...1PE33-7AA0	160 kW ... 200 kW	...1AE32-6AA0	50 kW	...-5FS87-2DC0

3.5 Tools to commission the converter

The following tools are used to commission, troubleshoot and control the inverter, as well as to backup and transfer the inverter settings.

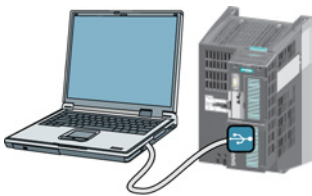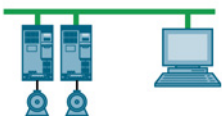Operator panels		Order number
 <p>BOP-2 (Basic Operator Panel) - for snapping onto the inverter</p> <ul style="list-style-type: none"> • Two-line display • Guided basic commissioning 	 <p>Door mounting kit for IOP/BOP-2</p> <ul style="list-style-type: none"> • For installation of the BOP-2 or IOP in a control cabinet door. • Degree of protection with IOP: IP54 or UL Type 12 • Degree of protection with BOP-2: IP55 	<p>BOP-2: 6SL3255-0AA00-4CA1</p> <p>IOP: 6SL3255-0AA00-4JA0</p> <p>Door mounting kit: 6SL3256-0AP00-0JA0</p>
 <p>IOP (Intelligent Operator Panel) - for snapping onto the inverter</p> <ul style="list-style-type: none"> • Plain text display • Menu-based operation and application wizards 		
	<p>For mobile use of the IOP: IOP handheld with power supply unit and rechargeable batteries as well as RS232 connection cable If you are using your own connection cable, carefully note the maximum permissible length of 5 m.</p>	6SL3255-0AA00-4HA0
PC tools		
 	<p>STARTER Connected to the inverter via USB port, PROFIBUS or PROFINET Download: STARTER (http://support.automation.siemens.com/WW/view/en/10804985/130000)</p>	STARTER on DVD: 6SL3072-0AA00-0AG0
	<p>Startdrive Connected to the inverter via USB port, PROFIBUS or PROFINET Download: Startdrive (http://support.automation.siemens.com/WW/view/en/68034568)</p>	Startdrive on DVD: 6SL3072-4CA02-1XG0
	<p>SINAMICS PC Inverter Connection Kit 2 Contains the correct USB cable (3 m) to connect a PC to the inverter.</p>	6SL3255-0AA00-2CA0

Installing

4.1 Overview of the inverter installation

Installing the inverter

Precondition

Before installation, please check:

- Are the required inverter components available?
 - Power Module
 - Control Unit
 - Accessories, e.g. line reactor or braking resistor
- Do you have the necessary tools and small parts/components required to install the inverter?

Procedure

To install the inverter, proceed as follows:

1. Install the accessories (reactors, filter or braking resistor) for the Power Module:
 - Observe the installation instructions that are supplied with the accessories.
 - If you are using more than one base-mounted component, then you must observe the sequence when installing.

See also Installing reactors, filters and braking resistors (Page 42).

2. Install the Power Module.


See also Installing Power Module (Page 43).

You can find information about your Power Module in the corresponding Hardware Installation Manual (<http://support.automation.siemens.com/WW/view/en/30563173/133300>).

3. Install the Control Unit.

See also Installing Control Unit (Page 65).

You have installed all of the inverter components, and you can now commission the inverter.

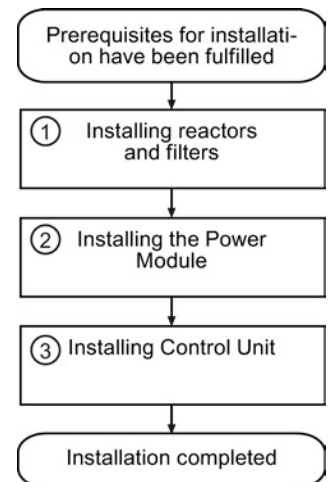

4.2 Installing reactors, filters and braking resistors

Installing reactors, filters and braking resistors

The installation of reactors, filters and braking resistors is described in the documentation provided. See also Section: Manuals and technical support (Page 377).

Installing base components

Reactors, filters and braking resistors are available as base components for the PM240 and PM250 Power Modules, frame sizes FSA, FSB and FSC. You can also install base components next to Power Modules.

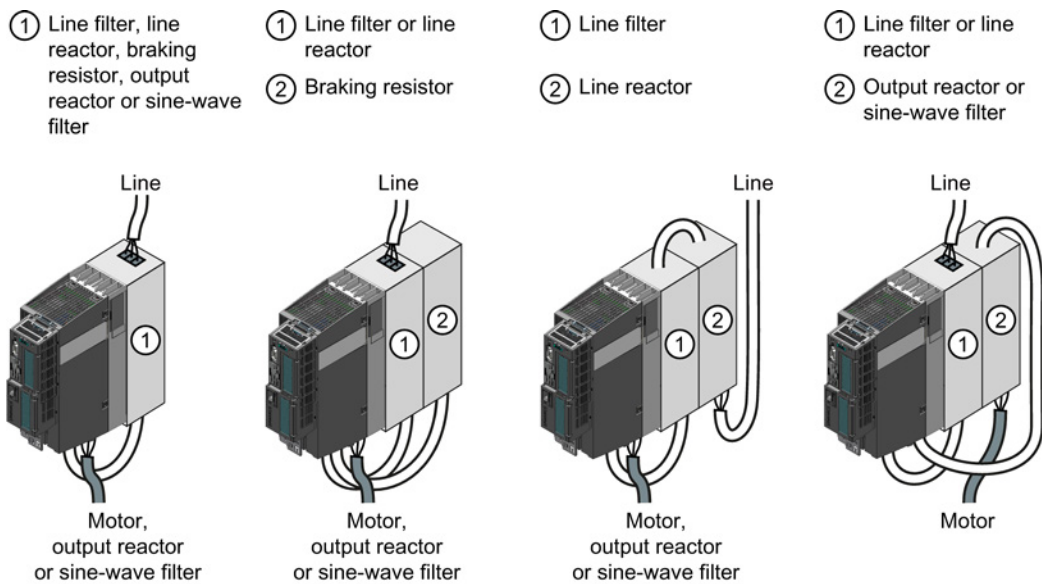


Figure 4-1 Permissible combination of base components

Table 4- 1 Permissible combinations as a function of the inverter frame size

		Base component ①	
		Line filter	Line reactor
Base component ②	Line reactor	FSA ... FSC	---
	Output reactor	FSA ... FSC	FSA ... FSC
	Sine-wave filters	FSA	FSA
	Braking resistor	FSA, FSB	FSA, FSB

4.3 Installing Power Module


Mounting Power Modules with degree of protection IP20

Procedure



Proceed as follows to correctly mount the Power Module:

1. Mount the Power Module in a control cabinet.
2. Maintain the minimum clearances to other components in the control cabinet specified below.
3. Install the Power Modules vertically with the line and motor connections facing downwards. It is not permissible to install them in any other position.

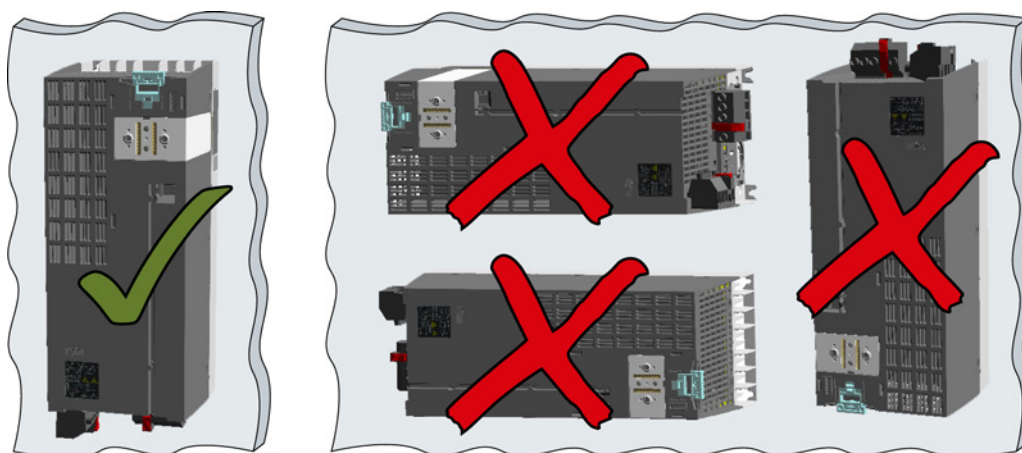

4. Position the Power Module in the control cabinet so that the cables for the motor and line supply are connected in accordance with the terminal layout.
5. Use the mounting devices specified below.
6. Comply with the torques of the mounting devices specified below.



You have correctly mounted the Power Module.

Mounting Power Modules using through-hole technology

We recommend that you use the optionally available mounting frame to mount the push-through unit in a control cabinet. This mounting frame includes the necessary seals and frame to ensure compliance with degree of protection IP54.

If you do not use the optional mounting frames, then you must ensure that the required degree of protection is complied with using other appropriate measures.

You must mount the inverter on unpainted metal surfaces in order to comply with EMC requirements.

Procedure


Proceed as follows to correctly mount the Power Module:



1. Prepare the cutout and the mounting holes for the Power Module and the mounting frame corresponding to the dimension drawings of the mounting frame.

Also note that the PT Power modules must be vertically mounted with the line and motor connections facing downwards.

2. Position the mounting frame at the rear of the control cabinet and attach it to the control cabinet by tightening the corresponding screws by hand.
3. Attach the seal to the inner side of the control cabinet.
4. Mount the frequency inverter and initially tighten all of the mounting screws by hand.
5. Tighten the screws with a torque of 3 Nm.

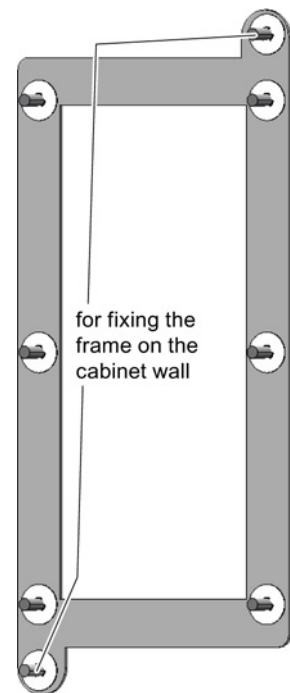

Mounting frame



You have correctly mounted the Power Module.

Mounting additional components

Depending on the application, the following additional components, for example, may be required (also refer to Section Description (Page 23)):

- Line reactors
- Filter
- Braking resistors
- Brake Relay

Information about mounting these components is provided in the instructions supplied.

4.3.1 Dimensions, hole drilling templates, minimum clearances, tightening torques

Dimensions and drilling patterns for the PM230 Power Modules, IP55

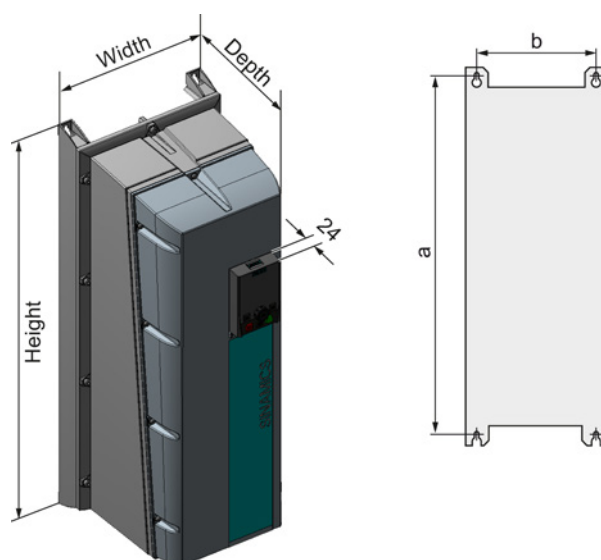


Table 4- 2 Dimensions and clearances for the PM230, IP55

Frame size	Dimensions (mm)					Clearances (mm)		
	Height	Width	Depth	a	b	top	bottom	lateral
FSA	460	154	238	445	132	100	100	0
FSB	540	180	238	524	158	100	100	0
FSC	620	230	238	604	208	125	125	0
FSD	640	320	238	600	285	300	300	0
FSE	751	320	238	710	285	300	300	0
FSF	915	410	238	870	370	300	300	0

Table 4- 3 Mounting hardware for the PM230, IP55

Frame size	Hardware	Tightening torque	Clearances (mm)		
			Top	Bottom	Lateral
FSA	M4 screws	2.5 Nm	100	100	0
FSB	M4 screws	2.5 Nm	100	100	0
FSC	M5 screws	2.5 Nm	125	125	0
FSD	M8 screws	13 Nm	300	300	0
FSE	M8 screws	13 Nm	300	300	0
FSF	M8 screws	13 Nm	300	300	0

Dimensions and drilling patterns for Power Modules with IP20 degree of protection

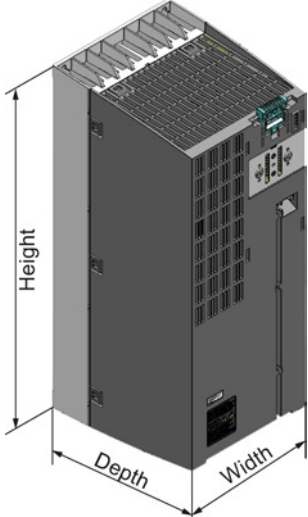
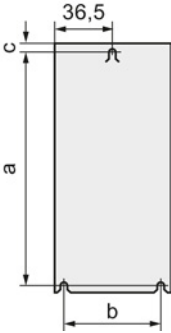
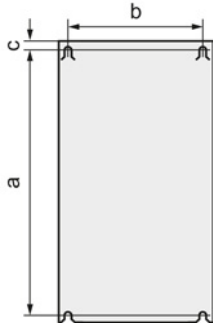
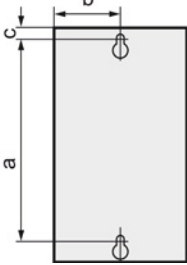
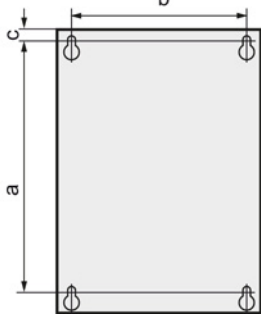
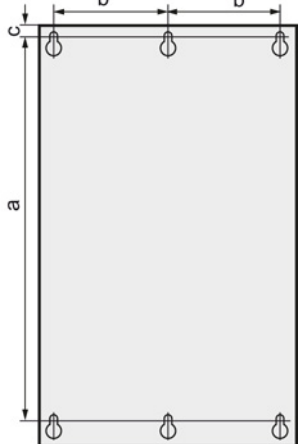
Defining the dimensions	Drilling patterns for the PM230 and PM240-2 Power Modules	
	<p>FSA</p> 	<p>FSB, FSC</p> 
Drilling patterns for all other Power Modules		
<p>FSA</p> 	<p>FSB...FSF</p> 	<p>FSGX</p> 

Table 4- 4 Dimensions for PM230

Frame size	Dimensions (mm)					
	Height ¹⁾	Width	Depth ²⁾	a	b	c
FSA	196	73	165	186	62,3	6
FSB	292	100	165	281	80	6
FSC	355	140	165	343	120	6
FSD without filter	419	275	204	325	235	11
FSD with filter	512	275	204	419	235	11
FSE without filter	499	275	204	405	235	11
FSE with filter	635	275	204	541	235	11
FSF without filter	634	350	316	598	300	11
FSF with filter	934	350	316	899	300	11

1) When using a shield connection kit:
FSA: + 80 mm; FSB: + 78 mm; FSC: + 77 mm; FSD, FSE, FSF: + 123 mm

2) Total depth of the inverter: See below.

Table 4- 5 Mounting hardware and clearances to other devices for PM230

Frame size	Hardware	Tightening torque (Nm)	Clearances (mm)		
			Top	Bottom	Lateral
FSA	M4 screws	2,5	80	100	0 ¹⁾
FSB	M4 screws	2,5	80	100	0 ¹⁾
FSC	M5 screws	3	80	100	0 ¹⁾
FSD without filter	M6 screws	6	300	300	0 ¹⁾
FSD with filter	M6 screws	6	300	300	0 ¹⁾
FSE without filter	M6 screws	6	300	300	0 ¹⁾
FSE with filter	M6 screws	6	300	300	0 ¹⁾
FSF without filter	M8 screws	13	350	350	0 ¹⁾
FSF with filter	M8 screws	13	350	350	0 ¹⁾

1) You can mount the Power Modules without any lateral clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

Table 4- 6 Dimensions for PM240

Frame size	Dimensions (mm)					
	Height ¹⁾	Width	Depth ²⁾	a	b	c
FSA	173	73	145	160	36,5	--
FSB	270	153	165	258	133	--
FSC	355	140	165	343	120	6
FSD without filter	419	275	204	325	235	11
FSD with filter	512	275	204	419	235	11
FSE without filter	499	275	204	405	235	11
FSE with filter	635	275	204	541	235	11
FSF without filter	634	350	316	598	300	11
FSF with filter	934	350	316	899	300	11
FSGX	1533	326	547	1506	125	14,5

- 1) When using a shield connection kit:
FSA: + 80 mm; FSB: + 78 mm; FSC: + 77 mm; FSD, FSE, FSF: + 123 mm
- 2) Total depth of the inverter: See below.

Table 4- 7 Mounting hardware and clearances to other devices for PM240

Frame size	Hardware	Tightening torque (Nm)	Clearances (mm)		
			Top	Bottom	Lateral
FSA	M4 screws	2,5	100	100	30 ¹⁾
FSB	M4 screws	2,5	100	100	40 ¹⁾
FSC	M5 screws	3,5	80	100	50 ¹⁾
FSD	M6 screws	6	300	300	0 ²⁾
FSE	M6 screws	6	300	300	0 ²⁾
FSF	M8 screws	13	350	350	0 ²⁾
FSGX	M8 screws	13	250	150	50

- 1) You can mount the Power Modules without any lateral clearance up to an ambient temperature of 40 °C in operation. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.
- 2) You can mount the Power Modules without any lateral clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

Table 4- 8 Dimensions for PM240-2

Frame size	Dimensions (mm)					
	Height ¹⁾	Width	Depth ²⁾	a	b	c
FSA	196	73	165	186	62,3	6
FSB	292	100	165	281	80	6
FSC	355	140	165	343	120	6

- 1) Additional height with shield connection kit: FSA: + 80 mm; FSB: + 78 mm; FSC: + 77 mm
- 2) Total depth of the inverter: See below.

Table 4- 9 Mounting hardware and clearances to other devices for PM240-2

Frame size	Hardware	Tightening torque (Nm)	Clearances (mm)		
			Top	Bottom	Lateral
FSA	M4 screws	2,5	80	100	0 ¹⁾
FSB	M4 screws	2,5	80	100	0 ¹⁾
FSC	M5 screws	2,5	80	100	0 ¹⁾

1) You can mount the Power Modules without any lateral clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

Table 4- 10 Dimensions for PM250

Frame size	Dimensions (mm)					
	Height ¹⁾	Width	Depth ²⁾	a	b	c
FSC	355	140	165	343	120	6
FSD without filter	419	275	204	325	235	11
FSD with filter	512	275	204	419	235	11
FSE without filter	499	275	204	405	235	11
FSE with filter	635	275	204	541	235	11
FSF without filter	634	350	316	598	300	11
FSF with filter	934	350	316	899	300	11

1) Additional height with shield connection kit: FSC: +89 mm; FSD...FSF: +123 mm

2) Total depth of the inverter: See below.

Table 4- 11 Mounting hardware and clearances to other devices for PM250

Frame size	Hardware	Tightening torque (Nm)	Clearances (mm)		
			Top	Bottom	Lateral
FSC	M5 screws	2,5	80	100	50 ¹⁾
FSD	M6 screws	6	300	300	0 ²⁾
FSE	M6 screws	6	300	300	0 ²⁾
FSF	M8 screws	13	350	350	0 ²⁾

1) You can mount the Power Modules without any lateral clearance up to an ambient temperature of 40 °C in operation. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

2) You can mount the Power Modules without any lateral clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

Table 4- 12 Dimensions for PM260

Frame size	Dimensions (mm)					
	Height ¹⁾	Width	Depth ²⁾	a	b	c
FSD without filter	419	275	204	325	235	11
FSD with filter	512	275	204	419	235	11
FSF without filter	634	350	316	598	300	11
FSF with filter	934	350	316	899	300	11

1) Additional height with shield connection kit: +123 mm

2) Total depth of the inverter: See below.

Table 4- 13 Mounting hardware and clearances to other devices for PM260

Frame size	Hardware	Tightening torque (Nm)	Clearances (mm)		
			Top	Bottom	Lateral
FSD	M6 screws	6	300	300	0 ¹⁾
FSF	M8 screws	13	350	350	0 ¹⁾

1) You can mount the Power Modules without any lateral clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.


Dimensions and drilling patterns for the PM330 GX Power Module with IP20 degree of protection

Installation material:

- M8 screws, 15 Nm tightening torque

Clearances:

- 30 mm at the side and front
- 200 mm at the top and bottom

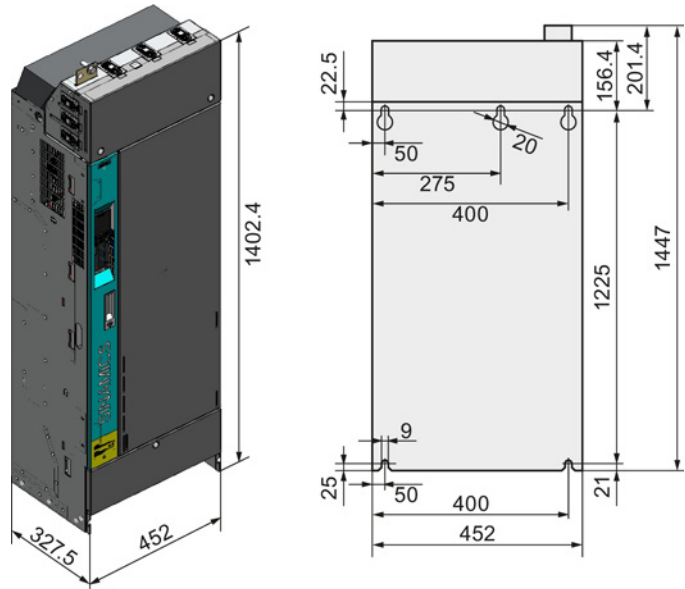

Dimensions and drilling patterns for Power Modules with through-hole technology

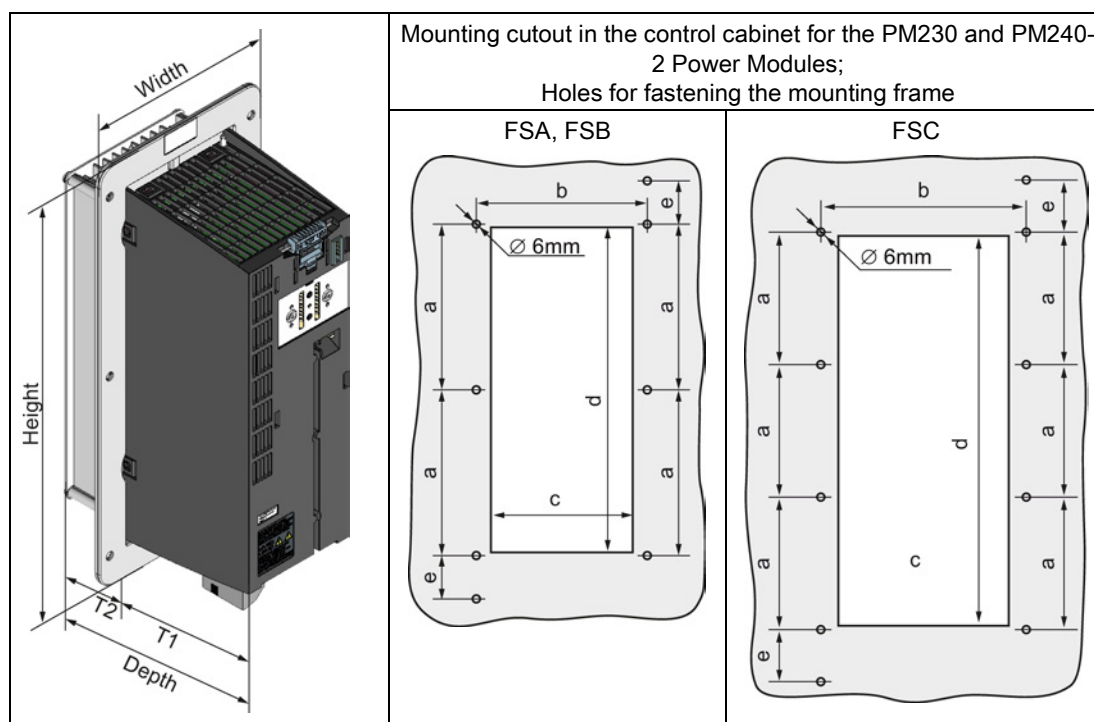


Table 4- 14 Dimensions for PM230 in push-through technology

Frame size	Dimensions (mm)									
	Height ¹⁾	Width	Depth ²⁾	T1	T2	a	b	c	d	e
FSA	238	126	171	118	54	103	106	88	198	27
FSB	345	154	171	118	54	147,5	134	116	304	34,5
FSC	411	200	171	118	54	123	174	156	365	30,5

1) With shield connection kit: FSA: +84 mm; FSB: +85 mm; FSC: +89 mm

3) Total depth of the inverter: See below.

Table 4- 15 Mounting hardware and clearances to other devices for PM230 in push-through technology

Frame size	Hardware	Tightening torque (Nm)	Clearances (mm)		
			Top	Bottom	Lateral
FSA	M5 screws	3	80	100	0 ¹⁾
FSB	M5 screws	3	80	100	0 ¹⁾
FSC	M5 screws	3	80	100	0 ¹⁾

1) You can mount the mounting frames without any lateral clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

Table 4- 16 Dimensions for PM240-2 in push-through technology

Frame size	Dimensions (mm)									
	Height ¹⁾	Width	Depth ²⁾	T1	T2	a	b	c	d	e
FSA	238	126	171	118	54	103	106	88	198	27
FSB	345	154	171	118	54	147,5	134	116	304	34,5
FSC	411	200	171	118	54	123	174	156	365	30,5

1) With shield connection kit: FSA: +84 mm; FSB: +85 mm; FSC: +89 mm

2) Total depth of the inverter: See below.


Table 4- 17 Mounting hardware and clearances to other devices for PM240-2 in push-through technology

Frame size	Hardware	Tightening torque (Nm)	Clearances (mm)		
			Top	Bottom	Lateral
FSA	M5 screws	3	80	100	0 ¹⁾
FSB	M5 screws	3	80	100	0 ¹⁾
FSC	M5 screws	3	80	100	0 ¹⁾

1) You can mount the mounting frames without any lateral clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

Total depth of the inverter

Power Modules frame sizes FSA ... FSF

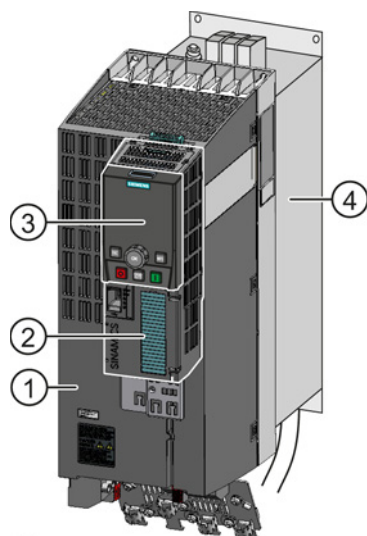

- ① Power Module
- ② Control Unit
- ③ Intelligent Operator Panel IOP
- ④ Base components: Filters, reactors or braking resistors

① + ②

As a minimum, the inverter comprises a Power Module and an inserted Control Unit:

Overall depth of the inverter = depth of the Power Module + 60 mm (Control Unit)

① + ② + ③

Inverter with inserted operator panel:

- Overall depth of the inverter = depth of the Power Module + 73 mm (Control Unit + Basic Operator Panel BOP-2)
- Overall depth of the inverter = depth of the Power Module + 82 mm (Control Unit + Intelligent Operator Panel IOP)

① + ② + ③ + ④

Power Module (degree of protection IP20) on a base component:

The overall inverter depth increases by the depth of the base component.

Power Module with power above 160 kW (FSGX/GX)

For Power Modules with power above 160 kW, the depth of the Power Module corresponds to the overall depth of the inverter.

4.3.2 Connecting the line supply, motor and converter components

4.3.2.1 Permissible line supplies

The inverter is designed for the following power distribution systems according to IEC 60364-1 (2005).

Above an installation altitude of 2000 m, the permissible line supplies are restricted. See also: Restrictions for special ambient conditions (Page 354).

TN line system

A TN line system transfers the PE protective conductor to the installed plant or system using a cable.

Generally, in a TN line system the neutral point is grounded. There are versions of a TN line supply with a grounded line the conductor, e.g. with grounded L1.

A TN line system can transfer the neutral conductor N and the PE protective conductor either separately or combined.

Preconditions and restrictions when connecting an inverter to a TN line system

- Inverter with integrated or external line filter:
 - Operation on TN line supply systems with grounded neutral point permissible.
 - Operation on TN line supply systems with grounded line conductor not permissible.
- Inverter without line filter:
 - Operation permissible on all TN line supplies.

Examples for Power Modules connected to a TN line supply

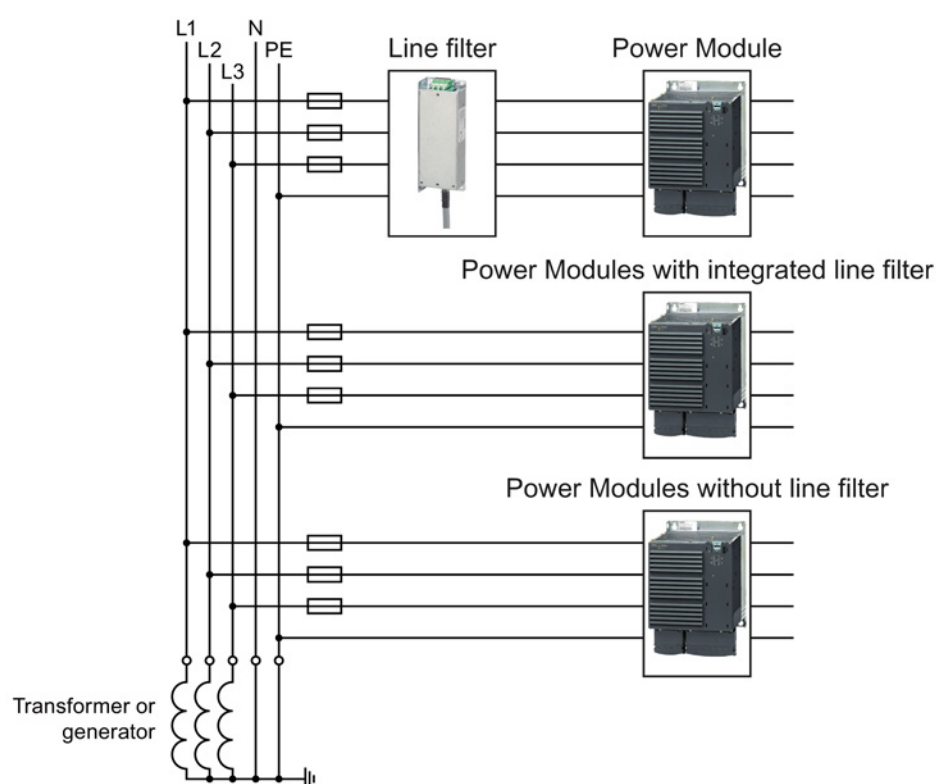


Figure 4-2 TN line supply with separate transfer of N and PE and with a grounded neutral point

TT system

In a TT line system, the transformer grounding and the installation grounding are independent of one another.

There are TT line supplies where the neutral conductor N is either transferred – or not.

Preconditions and restrictions when connecting an inverter to a TT line system

- Inverter with integrated or external line filter:
 - Operation on TT line supply systems with grounded neutral point permissible.
 - Operation on TT line systems without grounded neutral point not permissible.
- Inverter without line filter:
 - Operation on TT line systems is permissible.

Example for Power Modules connected to a TT line supply

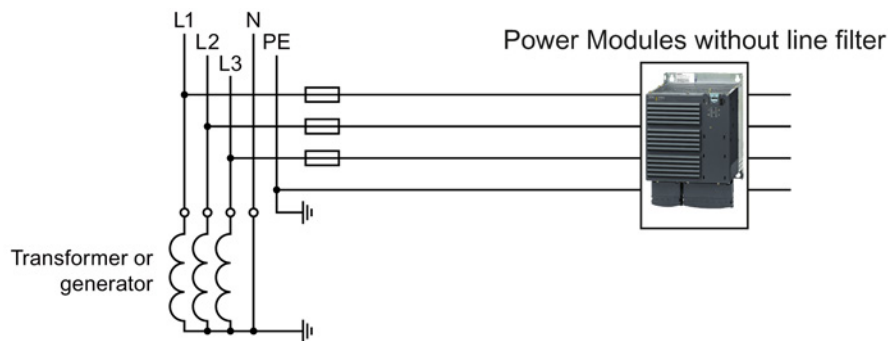


Figure 4-3 TT line system where the neutral conductor N is transferred

IT system

In an IT line system, all of the conductors are insulated with respect to the PE protective conductor – or connected to the PE protective conductor through an impedance.

There are IT line supplies where the neutral conductor N is either transferred – or not.

Preconditions and restrictions when connecting an inverter to an IT line system

- Inverter with integrated or external line filter:
 - Operation on IT line systems is not permissible.
- Inverter without line filter:
 - Operation on IT line systems is permissible.

Example for Power Modules connected to an IT line supply

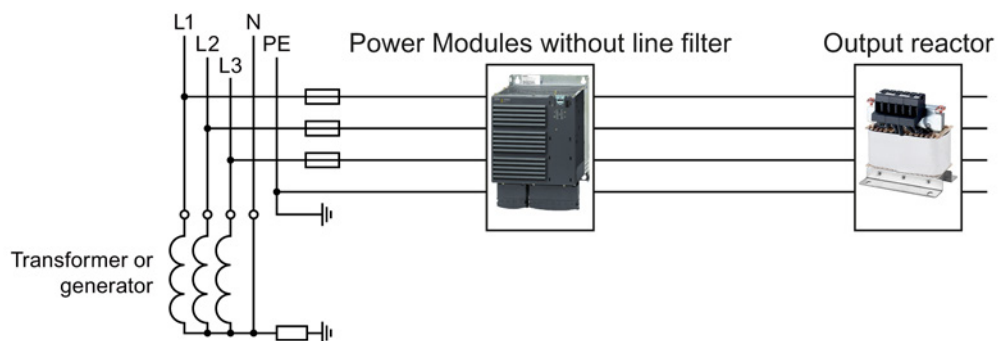


Figure 4-4 IT line supply where the neutral conductor N is transferred and with impedance with respect to the PE protective conductor

Behavior of the inverter when a ground fault occurs

In some instances, even for a ground fault, the inverter should still remain functional. In cases such as these, you must install an output reactor. This prevents an overcurrent trip or damage to the drive.

4.3.2.2 Connecting the inverter

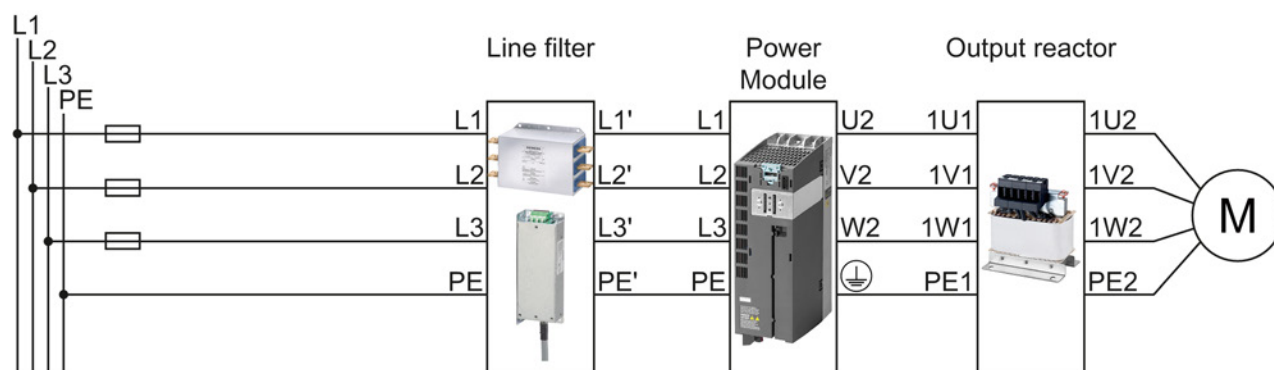


Figure 4-5 Connecting the PM230 IP20 and push-through Power Module

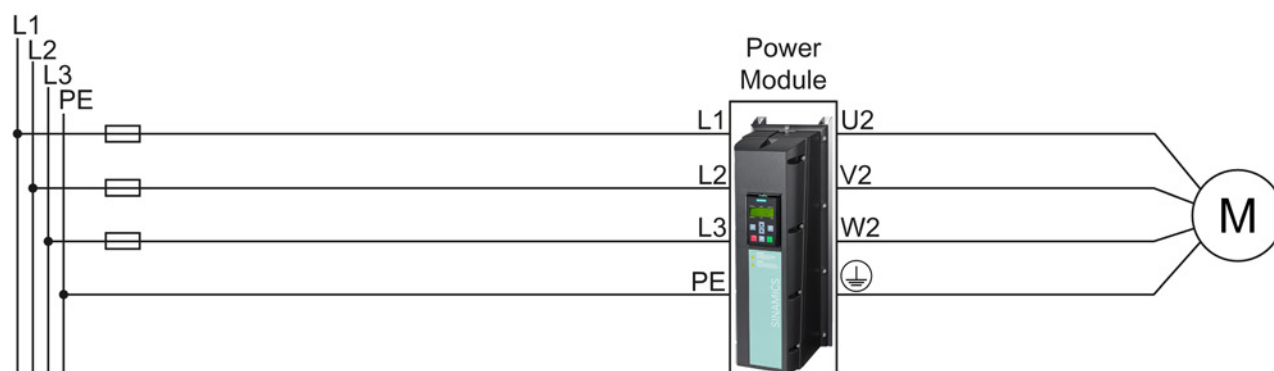


Figure 4-6 Connecting the PM230 IP55 Power Module

4.3 Installing Power Module

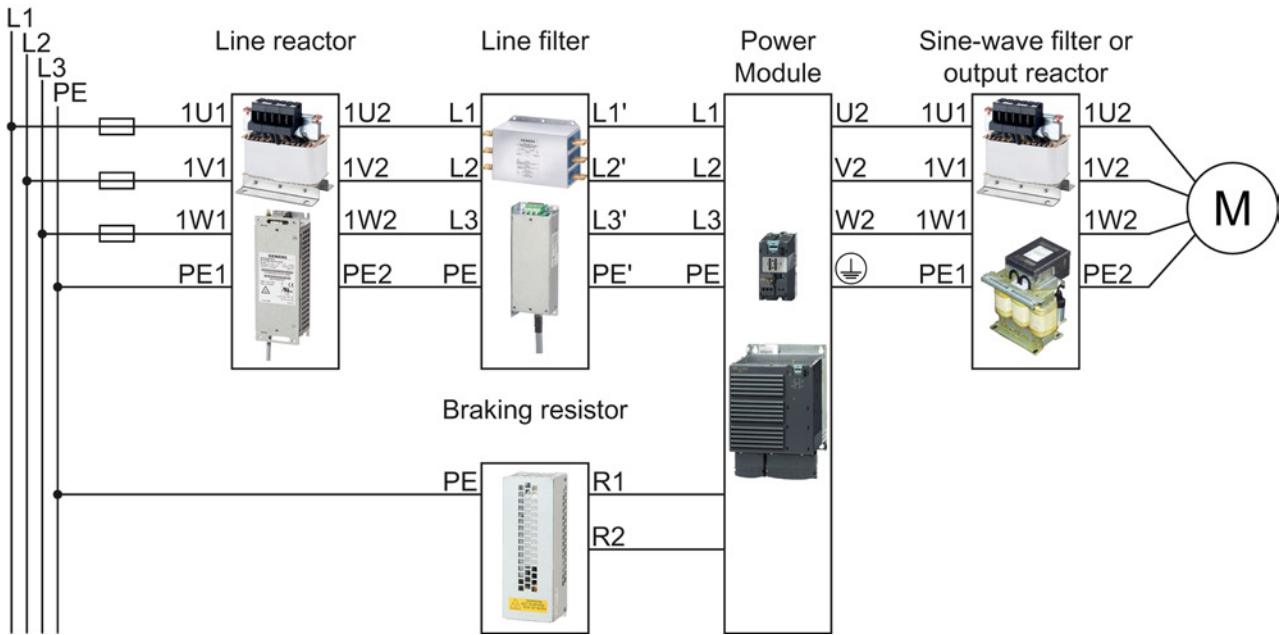


Figure 4-7 Connecting the PM240, PM240-2 IP20 and push-through Power Modules

PM240 and PM240-2 Power Modules are available with and without integrated Class A line filters. For higher EMC requirements you need an external Class B line filter.

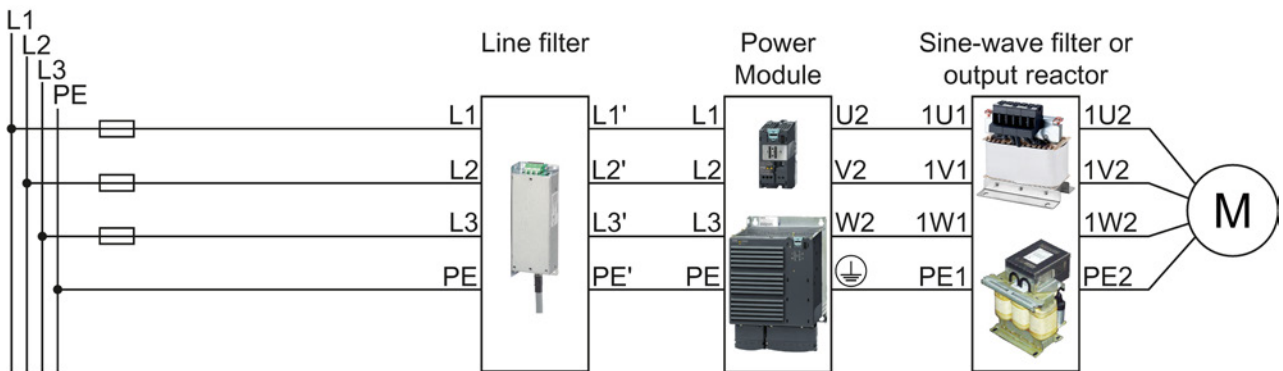


Figure 4-8 Connecting the PM250 Power Module

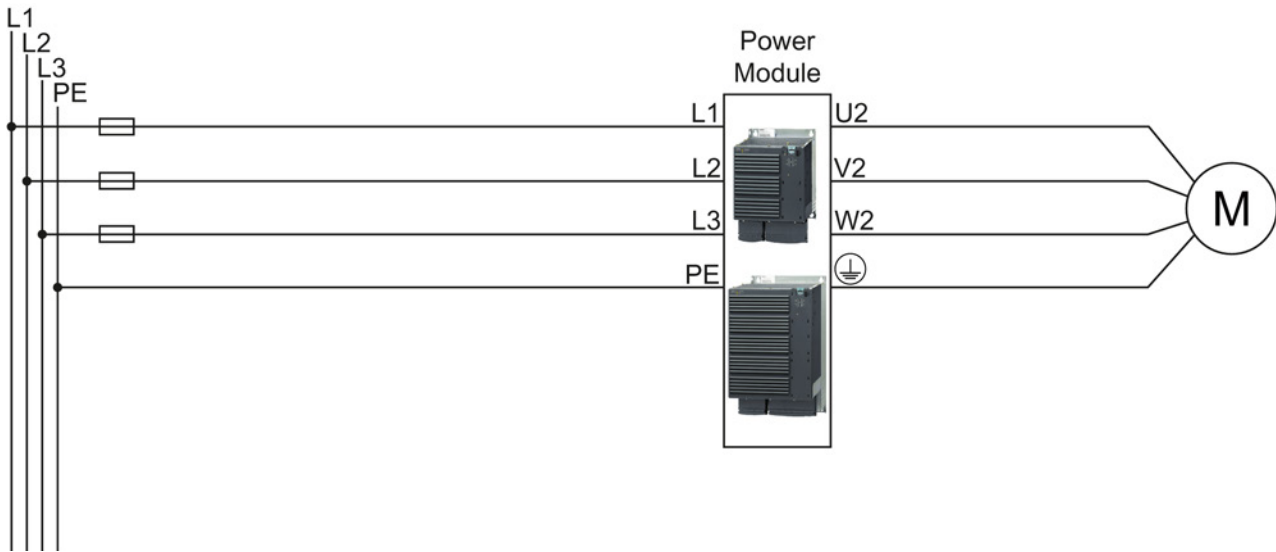


Figure 4-9 Connecting the PM260 Power Module

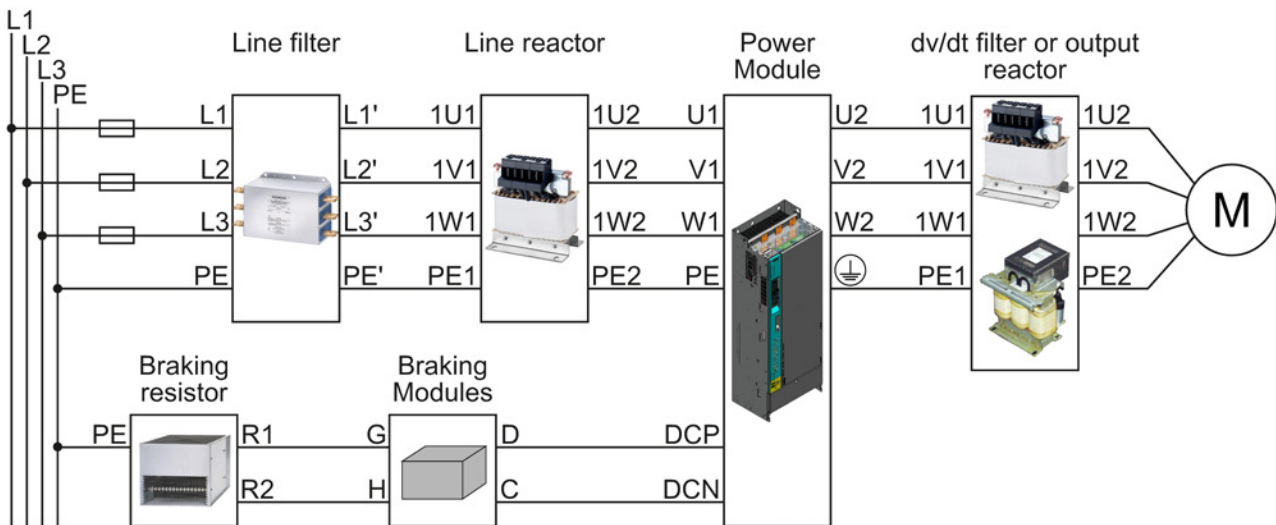


Figure 4-10 Connecting the PM330 Power Module



⚠ DANGER

Electric shock through contact with the motor connections

As soon as the converter is connected to the line supply, the motor connections of the converter may carry dangerous voltages. When the motor is connected to the converter, there is danger to life through contact with the motor terminals if the terminal box is open.

- Close the terminal box of the motor before connecting the converter to the line supply.

Connecting the line supply cable to the converter



Procedure

To connect the converter to the supply system, proceed as follows:

1. If available, open the terminal covers of the converter.
2. Connect the line supply to terminals U1/L1, V1/L2, and W1/L3.
3. Connect the protective conductor of the line supply to terminal PE of the converter.
4. If available, close the terminal covers of the converter.



You have connected the line supply cable to the converter.

Connecting the motor cable to the converter



Procedure

To connect the motor cable to the converter, proceed as follows:

1. If available, open the terminal covers of the converter.
2. Connect the motor to terminals U2, V2, and W2.
Carefully observe the regulations for EMC-compliant wiring:
EMC-compliant connection of the converter (Page 79)
3. Connect the protective conductor of the motor to the ⊥ terminal of the converter.
4. If available, close the terminal covers of the converter.



You have therefore connected the motor line to the converter.

Connecting a motor cable to an induction motor



Procedure

To connect the motor cable to an induction motor proceed as follows:

1. Open the motor terminal box.
2. Connect the motor in either a star or delta connection.
Additional information on this is provided in the Section Star-delta motor connection and application examples (Page 361).
3. If you are using a shielded motor cable, you must do the following:
 - Expose the shield of the motor cable in the area of the cable entry in the terminal box.
 - Attach the cable shield to the motor terminal box using a suitable screw connection.
4. Close the motor terminal box.



You have connected the motor cable to the induction motor.

Permissible cable lengths

The permissible cables and cable lengths are specified in the Hardware Installation Manual of the Power Module or in Catalog D31.

Note

- Please observe the data on the rating plate (type plate) and the associated circuit diagrams.
 - Use shielded control cables.
 - Observe the EMC notes provided by the manufacturer of the converter
-

4.3.2.3 Connecting a braking resistor



! WARNING

Danger to life due to fire spreading because of an unsuitable or improperly installed braking resistor

Fire and smoke development can cause severe personal injury or material damage.

Using an unsuitable braking resistor can cause fires and smoke to develop. Possible consequences are severe personal injury or material damage.

- Only use the braking resistor approved for the inverter.
- Install the braking resistor in accordance with regulations.
- Monitor the temperature of the braking resistor.



! CAUTION

Risk of burns due to touching hot surfaces

The temperature of braking resistors increases substantially during operation.

- Do not touch the braking resistor during operation.

Procedure



To connect the braking resistor and monitor the temperature of the braking resistor, proceed as follows:

1. Connect the braking resistor to terminals R1 and R2 of the inverter.
2. Ground the braking resistor directly to the control cabinet's grounding bar. The braking resistor must not be grounded via the PE terminals on the inverter.
3. If you have to fulfill EMC requirements, observe the rules for shielding.

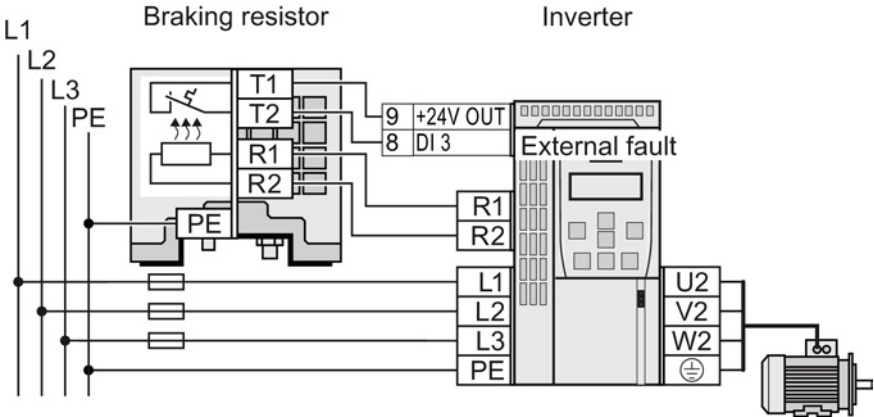


Figure 4-11 Braking resistor connections (example: temperature monitoring via DI 3)

4. Connect the temperature monitoring system of the braking resistor (terminals T1 and T2 on the braking resistor) to a free digital input of your choice on the inverter. Define the function of this digital input as external fault, e.g. for digital input DI 3: p2106 = 722.3.

■ You have connected the braking resistor and ensured that temperature monitoring is set up.

4.3.3 Digital inputs and outputs on the PM330 Power Module

The PM330 Power Module has 4 additional digital inputs and 2 additional digital outputs at terminal strip X9. All of the terminals have a certain function in the factory setting.

Terminal strip X9 is used to connect an external 24 V DC power supply and to connect a main or bypass contactor.

Fault and alarm signals can be connected to the digital inputs. The digital output allows, for example, an external rectifier to be controlled.

The external 24 V DC power supply must be connected if the inverter is connected to the line supply via a main contactor (to start the Control Unit).

The power supply should be located directly next to the inverter (e.g. in the same cabinet) and the cable length to terminal X9 should not exceed 5 m.

Terminal	Name	Meaning	Input/output	Technical data
1	P24	External power supply	Input	24 V DC (20.1 ... 28.8 V)
2	M	Electronics ground	Reference	Current consumption: max. 2 A
3	External alert	External alarm	Input	Voltage: -3 V ... +30 V
4	External fault	External fault	Input	Current drain:
5	Stop 0	Emergency Stop, Category 0	Input	6.4 mA at 24 V DC
6	Stop 1	Emergency Stop category 1	Input	1.3 mA at <5 V
				4 mA at >15 V
				8 mA at 30 V
				Level (including ripple):
				High level: 15 V ... 30 V
				Low level: -3 V ... +5 V
7	M		Reference	
8	DC link charged	Enable signal "U _{DC link} charged"	Output	Voltage: 24 V DC
				Max. load current: 500 mA
				Continuously short-circuit proof
				The output current is taken from the supply at X9, terminal 1.
9	NC	Not connected		
10	NC	Not connected		

Terminal	Name	Meaning	Input/output	Technical data
11	Activation line contactor	Line contactor control	Output	Contact type: NO contact Maximum load current: 4 A, 230 V AC, $\cos\phi = 0.6$
12	Activation line contactor	Line contactor control	Output	Floating A device to protect against overload and short-circuit is required to supply the unprotected output. Surge suppressors must be connected to the excitation coil of the main contactor (e.g. RC element). To control the main contactor, the following contact characteristic values of the relay according to UL apply: <ul style="list-style-type: none"> • 250 V AC, 10 A (NC and NO), general purpose, 85 °C, • 24 V DC, 10 A (NC and NO), general purpose, 85 °C, • 30 V DC, 8 A (NO), 6 A (NC), general purpose, 85 °C • B300 (NC and NO), pilot duty, 85 °C • R300 (NC and NO), pilot duty, 85 °C • 24 V AC, 2.0 A (NC and NO), pilot duty, 85 °C

Maximum connection cross section: 2.5 mm²

Minimum connection cross section: 0.2 mm²

Maximum tightening torque: 0.5 Nm (4.5 ... 5 lb.in)

Note

Inputs are low active

All signal inputs are low active (wire-break-proof).

Note

If terminals 3 ... 6 are not used, then you must connect 24 V DC to these. To do this, use an external power supply or terminal 9 on the Control Unit.

The reference potential is connected to terminal X9:2, 7 and terminal 28 on the Control Unit.

Note

Line contactor control

When supplying the main contactor via terminals 11 and 12, separation from the line supply using a control transformer is not required. A 250 V/8 A fuse in compliance with UL must be used as protection.

Note

Insulated end sleeves

Insulated end sleeves according to DIN 46228-4 must be used.

4.4 Installing Control Unit


Installing the Control Unit on an IP20 Power Module

Procedure



Proceed as follows to connect Power Modules and Control Units:

1. Locate the lugs at the rear of the Control Unit in the matching recesses of the Power Module.
2. Mount the Control Unit onto the Power Module so that it audibly snaps into place.

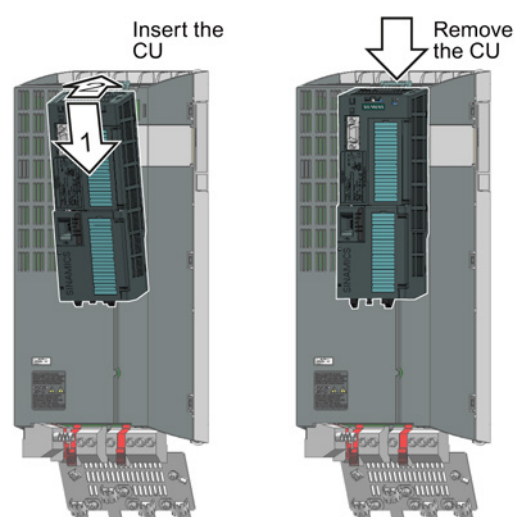

The Power Module and the Control Unit are now connected with one another.

To remove the Control Unit, press on the release button on the Power Module and withdraw the Control Unit.


Installing the Control Unit on an IP55 Power Module

Procedure for installing a Control Unit



Please proceed as follows:

1. Ensure that the device is disconnected from the power supply.
2. Unscrew the cover of the power section.
3. Locate the lugs at the rear of the Control Unit in the matching recesses of the Power Module.
4. Mount the Control Unit onto the Power Module so that it audibly snaps into place.
5. Refasten the cover of the power section.

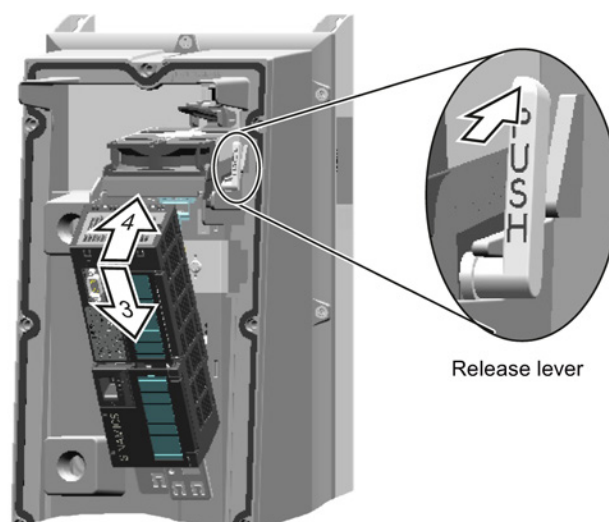

You have now placed the Control Unit on the Power Module.



Procedure for removing a Control Unit

Please proceed as follows:

1. Ensure that the device is disconnected from the power supply.
2. Unscrew the cover of the power section.
3. Depending on the Power Module:
 - FSA ... FSC: Unlock the Control Unit using the lever shown in the figure and withdraw the Control Unit.
 - FSD ... FSF: Press the release button on the Power Module and withdraw the Control Unit.
4. Refasten the cover of the power section.




You have now removed the Control Unit from the Power Module.

4.4.1 Overview of the interfaces

Interfaces at the front of the Control Unit

To access the interfaces at the front of the Control Unit, you must lift the Operator Panel (if one is being used) and open the front doors.

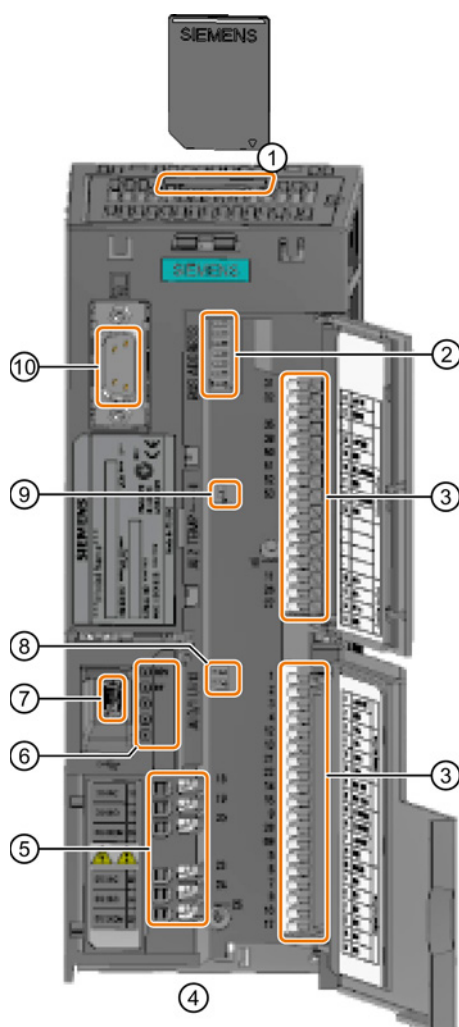

① Memory card slot

② Selecting the fieldbus address:

- CU230P-2 DP
- CU230P-2 CAN
- CU230P-2 HVAC
- CU230P-2 BT

Bit 6 (64)	<input type="checkbox"/>
Bit 5 (32)	<input type="checkbox"/>
Bit 4 (16)	<input type="checkbox"/>
Bit 3 (8)	<input type="checkbox"/>
Bit 2 (4)	<input type="checkbox"/>
Bit 1 (2)	<input type="checkbox"/>
Bit 0 (1)	<input type="checkbox"/>
On	Off

③ Terminal strips

④ Fieldbus interfaces at the lower side

⑤ Terminal strips for the digital outputs

⑥ Status LED

<input type="checkbox"/>	RDY
<input type="checkbox"/>	BF
<input type="checkbox"/>	---
<input type="checkbox"/>	LNK1 (PROFINET)
<input type="checkbox"/>	LNK2 (PROFINET)

⑦ USB interface for connection to a PC

⑧ Switch for AI0 and AI1 (U/I)

- I 0/4 mA ... 20 mA
- U -10/0 V ... 10 V


AI1	<input type="checkbox"/>
AI0	<input type="checkbox"/>
I U	

⑨ Switch for AI2 (current/temperature)

Temp	<input type="checkbox"/>
I	

⑩ Connection to the operator panel

4.4.2 Terminal strips of the CU

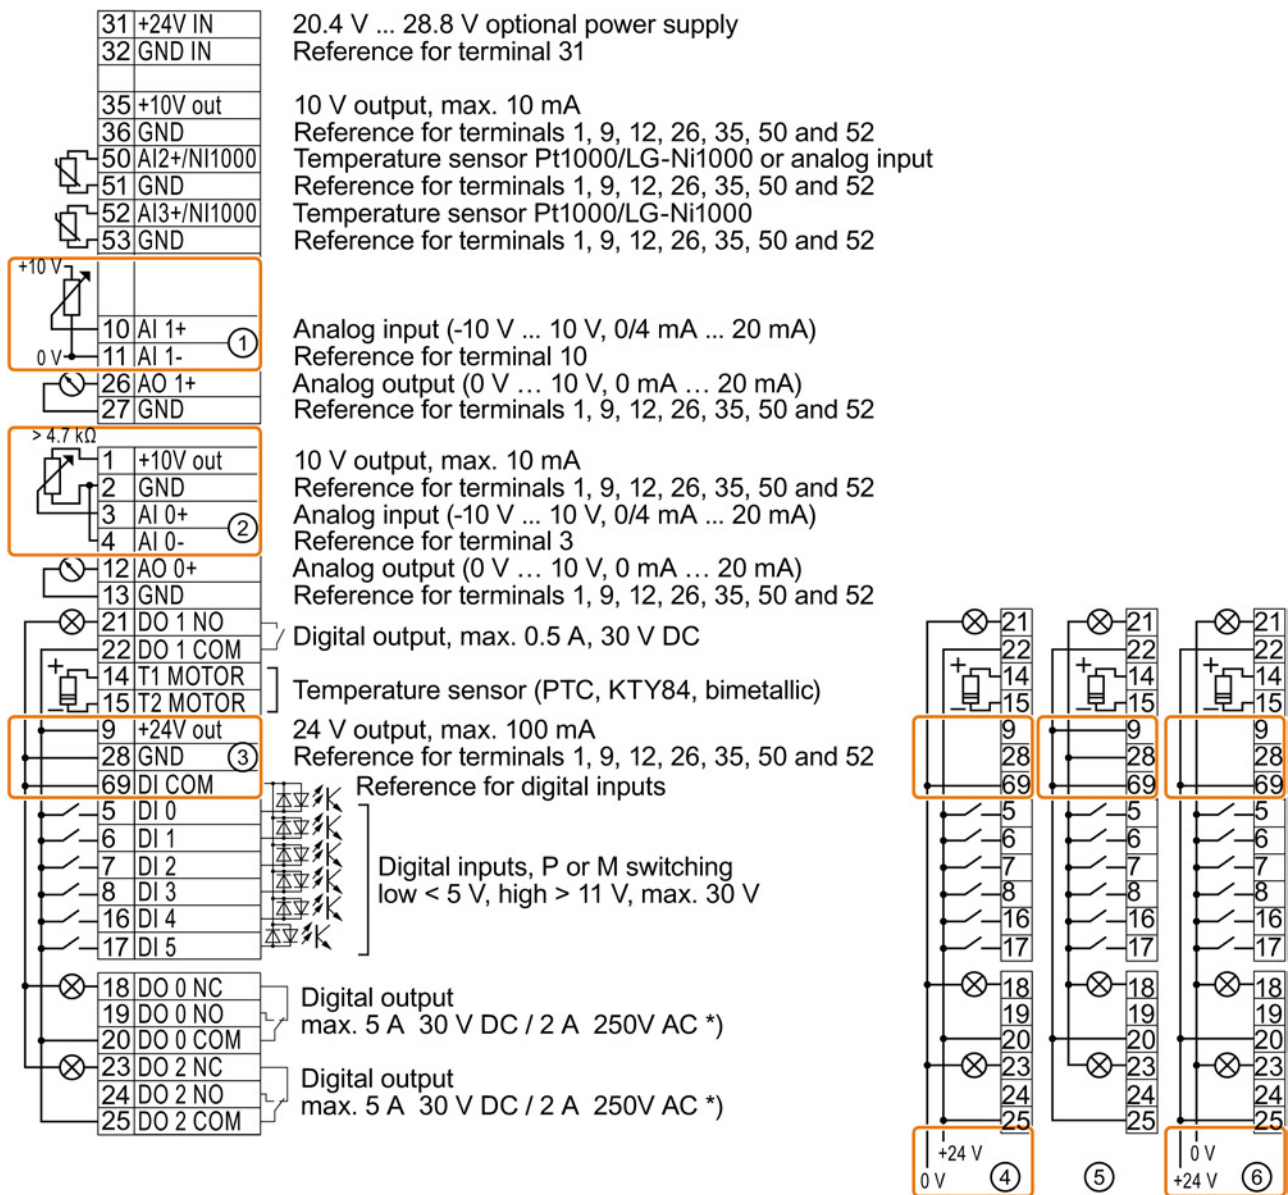

*) The following applies to systems complying with UL: A maximum of 3 A 30 V DC or 2 A 250 V AC may be connected via terminals 18 / 20 (DO 0 NC) and 23 / 25 (DO 2 NC).

- ① The analog input is supplied from an external 10 V voltage.
- ② The analog input is supplied from the internal 10 V voltage.
- ③ Wiring when using the internal power supplies. Connecting a contact switching to P.
- ④ Wiring when using external power supplies. Connecting a contact switching to P.
- ⑤ Wiring when using the internal power supplies. Connecting a contact switching to M.
- ⑥ Wiring when using external power supplies. Connecting a contact switching to M.



Note

When a contact switching to M is connected, a ground fault at the digital input can lead to the input being unintentionally controlled.

4.4.3 Factory setting of the terminals

Factory setting

The factory setting of the terminals depends on whether the Control Unit has a PROFIBUS / PROFINET interface.

Factory setting of the terminals for Control Units with USS, Modbus, BACnet, P1 or CANopen interface	Factory setting of the terminals for Control Units with PROFIBUS or PROFINET interface																																																																																																																																																																																																						
<p>Fieldbus interface is not active.</p> <table border="0"> <tr><td>31</td><td>+24V IN</td><td></td></tr> <tr><td>32</td><td>GND IN</td><td></td></tr> <tr><td>35</td><td>+10V out</td><td></td></tr> <tr><td>36</td><td>GND</td><td></td></tr> <tr><td>50</td><td>NI1000/AI2+</td><td rowspan="2">] --- (no function)</td></tr> <tr><td>51</td><td>GND</td></tr> <tr><td>52</td><td>NI1000/AI3+</td><td rowspan="2">] ---</td></tr> <tr><td>53</td><td>GND</td></tr> <tr><td>10</td><td>AI 1+</td><td rowspan="2">] ---</td></tr> <tr><td>11</td><td>AI 1-</td></tr> <tr><td>26</td><td>AO 1+</td><td rowspan="2">] Current actual value (0 V ... 10 V)</td></tr> <tr><td>27</td><td>GND</td></tr> <tr><td>1</td><td>+10V out</td><td></td></tr> <tr><td>2</td><td>GND</td><td></td></tr> <tr><td>3</td><td>AI 0+</td><td rowspan="2">] Speed setpoint (-10 V ... 10 V)</td></tr> <tr><td>4</td><td>AI 0-</td></tr> <tr><td>12</td><td>AO 0+</td><td rowspan="2">] Speed actual value (0 V ... 10 V)</td></tr> <tr><td>13</td><td>GND</td></tr> <tr><td>21</td><td>DO 1 NO</td><td rowspan="2">] Alarm</td></tr> <tr><td>22</td><td>DO 1 COM</td></tr> <tr><td>14</td><td>T1 MOTOR</td><td rowspan="2">] ---</td></tr> <tr><td>15</td><td>T2 MOTOR</td></tr> <tr><td>9</td><td>+24V out</td><td></td></tr> <tr><td>28</td><td>GND</td><td></td></tr> <tr><td>69</td><td>DI COM</td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>ON/OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>Reverse direction of rotation</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge fault</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> <tr><td>18</td><td>DO 0 NC</td><td rowspan="3">] Fault</td></tr> <tr><td>19</td><td>DO 0 NO</td></tr> <tr><td>20</td><td>DO 0 COM</td></tr> <tr><td>23</td><td>DO 2 NC</td><td rowspan="3">] ---</td></tr> <tr><td>24</td><td>DO 2 NO</td></tr> <tr><td>25</td><td>DO 2 COM</td></tr> </table>	31	+24V IN		32	GND IN		35	+10V out		36	GND		50	NI1000/AI2+] --- (no function)	51	GND	52	NI1000/AI3+] ---	53	GND	10	AI 1+] ---	11	AI 1-	26	AO 1+] Current actual value (0 V ... 10 V)	27	GND	1	+10V out		2	GND		3	AI 0+] Speed setpoint (-10 V ... 10 V)	4	AI 0-	12	AO 0+] Speed actual value (0 V ... 10 V)	13	GND	21	DO 1 NO] Alarm	22	DO 1 COM	14	T1 MOTOR] ---	15	T2 MOTOR	9	+24V out		28	GND		69	DI COM		5	DI 0	ON/OFF1	6	DI 1	Reverse direction of rotation	7	DI 2	Acknowledge fault	8	DI 3	---	16	DI 4	---	17	DI 5	---	18	DO 0 NC] Fault	19	DO 0 NO	20	DO 0 COM	23	DO 2 NC] ---	24	DO 2 NO	25	DO 2 COM	<p>Fieldbus interface depends on DI 3.</p> <table border="0"> <tr><td>31</td><td>+24V IN</td><td></td></tr> <tr><td>32</td><td>GND IN</td><td></td></tr> <tr><td>35</td><td>+10V out</td><td></td></tr> <tr><td>36</td><td>GND</td><td></td></tr> <tr><td>50</td><td>NI1000/AI2+</td><td rowspan="2">] ---</td></tr> <tr><td>51</td><td>GND</td></tr> <tr><td>52</td><td>NI1000/AI3+</td><td rowspan="2">] ---</td></tr> <tr><td>53</td><td>GND</td></tr> <tr><td>10</td><td>AI 1+</td><td rowspan="2">] ---</td></tr> <tr><td>11</td><td>AI 1-</td></tr> <tr><td>26</td><td>AO 1+</td><td rowspan="2">] Current actual value (0 V ... 10 V)</td></tr> <tr><td>27</td><td>GND</td></tr> <tr><td>1</td><td>+10V out</td><td></td></tr> <tr><td>2</td><td>GND</td><td></td></tr> <tr><td>3</td><td>AI 0+</td><td rowspan="2">] Speed setpoint (-10 V ... 10 V)</td></tr> <tr><td>4</td><td>AI 0-</td></tr> <tr><td>12</td><td>AO 0+</td><td rowspan="2">] Speed actual value (0 V ... 10 V)</td></tr> <tr><td>13</td><td>GND</td></tr> <tr><td>21</td><td>DO 1 NO</td><td rowspan="2">] Alarm</td></tr> <tr><td>22</td><td>DO 1 COM</td></tr> <tr><td>14</td><td>T1 MOTOR</td><td rowspan="2">] ---</td></tr> <tr><td>15</td><td>T2 MOTOR</td></tr> <tr><td>9</td><td>+24V out</td><td></td></tr> <tr><td>28</td><td>GND</td><td></td></tr> <tr><td>69</td><td>DI COM</td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>---</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge fault</td></tr> <tr><td>8</td><td>DI 3</td><td>Switchover control</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> <tr><td>18</td><td>DO 0 NC</td><td rowspan="3">] Fault</td></tr> <tr><td>19</td><td>DO 0 NO</td></tr> <tr><td>20</td><td>DO 0 COM</td></tr> <tr><td>23</td><td>DO 2 NC</td><td rowspan="3">] ---</td></tr> <tr><td>24</td><td>DO 2 NO</td></tr> <tr><td>25</td><td>DO 2 COM</td></tr> </table> <p style="text-align: center;">   Inverter receives control signals via PROFIdrive telegram 1 Fieldbus interface is not active </p>	31	+24V IN		32	GND IN		35	+10V out		36	GND		50	NI1000/AI2+] ---	51	GND	52	NI1000/AI3+] ---	53	GND	10	AI 1+] ---	11	AI 1-	26	AO 1+] Current actual value (0 V ... 10 V)	27	GND	1	+10V out		2	GND		3	AI 0+] Speed setpoint (-10 V ... 10 V)	4	AI 0-	12	AO 0+] Speed actual value (0 V ... 10 V)	13	GND	21	DO 1 NO] Alarm	22	DO 1 COM	14	T1 MOTOR] ---	15	T2 MOTOR	9	+24V out		28	GND		69	DI COM		5	DI 0	---	6	DI 1	---	7	DI 2	Acknowledge fault	8	DI 3	Switchover control	16	DI 4	---	17	DI 5	---	18	DO 0 NC] Fault	19	DO 0 NO	20	DO 0 COM	23	DO 2 NC] ---	24	DO 2 NO	25	DO 2 COM
31	+24V IN																																																																																																																																																																																																						
32	GND IN																																																																																																																																																																																																						
35	+10V out																																																																																																																																																																																																						
36	GND																																																																																																																																																																																																						
50	NI1000/AI2+] --- (no function)																																																																																																																																																																																																					
51	GND																																																																																																																																																																																																						
52	NI1000/AI3+] ---																																																																																																																																																																																																					
53	GND																																																																																																																																																																																																						
10	AI 1+] ---																																																																																																																																																																																																					
11	AI 1-																																																																																																																																																																																																						
26	AO 1+] Current actual value (0 V ... 10 V)																																																																																																																																																																																																					
27	GND																																																																																																																																																																																																						
1	+10V out																																																																																																																																																																																																						
2	GND																																																																																																																																																																																																						
3	AI 0+] Speed setpoint (-10 V ... 10 V)																																																																																																																																																																																																					
4	AI 0-																																																																																																																																																																																																						
12	AO 0+] Speed actual value (0 V ... 10 V)																																																																																																																																																																																																					
13	GND																																																																																																																																																																																																						
21	DO 1 NO] Alarm																																																																																																																																																																																																					
22	DO 1 COM																																																																																																																																																																																																						
14	T1 MOTOR] ---																																																																																																																																																																																																					
15	T2 MOTOR																																																																																																																																																																																																						
9	+24V out																																																																																																																																																																																																						
28	GND																																																																																																																																																																																																						
69	DI COM																																																																																																																																																																																																						
5	DI 0	ON/OFF1																																																																																																																																																																																																					
6	DI 1	Reverse direction of rotation																																																																																																																																																																																																					
7	DI 2	Acknowledge fault																																																																																																																																																																																																					
8	DI 3	---																																																																																																																																																																																																					
16	DI 4	---																																																																																																																																																																																																					
17	DI 5	---																																																																																																																																																																																																					
18	DO 0 NC] Fault																																																																																																																																																																																																					
19	DO 0 NO																																																																																																																																																																																																						
20	DO 0 COM																																																																																																																																																																																																						
23	DO 2 NC] ---																																																																																																																																																																																																					
24	DO 2 NO																																																																																																																																																																																																						
25	DO 2 COM																																																																																																																																																																																																						
31	+24V IN																																																																																																																																																																																																						
32	GND IN																																																																																																																																																																																																						
35	+10V out																																																																																																																																																																																																						
36	GND																																																																																																																																																																																																						
50	NI1000/AI2+] ---																																																																																																																																																																																																					
51	GND																																																																																																																																																																																																						
52	NI1000/AI3+] ---																																																																																																																																																																																																					
53	GND																																																																																																																																																																																																						
10	AI 1+] ---																																																																																																																																																																																																					
11	AI 1-																																																																																																																																																																																																						
26	AO 1+] Current actual value (0 V ... 10 V)																																																																																																																																																																																																					
27	GND																																																																																																																																																																																																						
1	+10V out																																																																																																																																																																																																						
2	GND																																																																																																																																																																																																						
3	AI 0+] Speed setpoint (-10 V ... 10 V)																																																																																																																																																																																																					
4	AI 0-																																																																																																																																																																																																						
12	AO 0+] Speed actual value (0 V ... 10 V)																																																																																																																																																																																																					
13	GND																																																																																																																																																																																																						
21	DO 1 NO] Alarm																																																																																																																																																																																																					
22	DO 1 COM																																																																																																																																																																																																						
14	T1 MOTOR] ---																																																																																																																																																																																																					
15	T2 MOTOR																																																																																																																																																																																																						
9	+24V out																																																																																																																																																																																																						
28	GND																																																																																																																																																																																																						
69	DI COM																																																																																																																																																																																																						
5	DI 0	---																																																																																																																																																																																																					
6	DI 1	---																																																																																																																																																																																																					
7	DI 2	Acknowledge fault																																																																																																																																																																																																					
8	DI 3	Switchover control																																																																																																																																																																																																					
16	DI 4	---																																																																																																																																																																																																					
17	DI 5	---																																																																																																																																																																																																					
18	DO 0 NC] Fault																																																																																																																																																																																																					
19	DO 0 NO																																																																																																																																																																																																						
20	DO 0 COM																																																																																																																																																																																																						
23	DO 2 NC] ---																																																																																																																																																																																																					
24	DO 2 NO																																																																																																																																																																																																						
25	DO 2 COM																																																																																																																																																																																																						

Changing the function of terminals

The function of every color-coded terminal can be set.

In order that you do not have to successively change terminal for terminal, several terminals can be jointly set using default settings.

The factory settings described above for USS and PROFIBUS/PROFINET terminals correspond to default setting 12 (two-wire control using method 1) or default setting 7 (switchover between fieldbus and jog using DI 3).

See also: Default settings of the terminals (Page 71).

4.4.4 Default settings of the terminals

Available default settings of the terminals

<p>Default setting 7: Switch over between fieldbus and jogging using DI 3 Selected with</p> <ul style="list-style-type: none"> STARTER: Fieldbus with data set switchover BOP-2: FB cdS <p>Factory setting for inverters with PROFIBUS interface</p>		<p>Default setting 9: Motorized potentiometer (MOP) Selected with</p> <ul style="list-style-type: none"> STARTER: standard I/O with MOP BOP-2: Std MoP 																																																																								
<p>PROFIdrive telegram 1</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>---</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>Low</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	---	4			5	DI 0	---	6	DI 1	---	7	DI 2	Acknowledge	8	DI 3	Low	16	DI 4	---	17	DI 5	---	<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>Jog 1</td></tr> <tr><td>6</td><td>DI 1</td><td>Jog 2</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>High</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	---	4			5	DI 0	Jog 1	6	DI 1	Jog 2	7	DI 2	Acknowledge	8	DI 3	High	16	DI 4	---	17	DI 5	---	<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>ON / OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>MOP raise</td></tr> <tr><td>7</td><td>DI 2</td><td>MOP lower</td></tr> <tr><td>8</td><td>DI 3</td><td>Acknowledge</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	---	4			5	DI 0	ON / OFF1	6	DI 1	MOP raise	7	DI 2	MOP lower	8	DI 3	Acknowledge	16	DI 4	---	17	DI 5	---
3	AI 0	---																																																																								
4																																																																										
5	DI 0	---																																																																								
6	DI 1	---																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	Low																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								
3	AI 0	---																																																																								
4																																																																										
5	DI 0	Jog 1																																																																								
6	DI 1	Jog 2																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	High																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								
3	AI 0	---																																																																								
4																																																																										
5	DI 0	ON / OFF1																																																																								
6	DI 1	MOP raise																																																																								
7	DI 2	MOP lower																																																																								
8	DI 3	Acknowledge																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								
<p>Default setting 12: Two-wire control with method 1 Selected with</p> <ul style="list-style-type: none"> STARTER: Standard I/O with analog setpoint BOP-2: Std ASP <p>Factory setting for inverters with USS interface</p>	<p>Default setting 14: Switch over between fieldbus and motorized potentiometer (MOP) using DI 3 Selected with</p> <ul style="list-style-type: none"> STARTER: Process industry with fieldbus BOP-2: Proc Fb 																																																																									
<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>Setpoint</td></tr> <tr><td>4</td><td></td><td>I □ U -10 V ... 10 V</td></tr> <tr><td>5</td><td>DI 0</td><td>ON / OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>Reversing</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	Setpoint	4		I □ U -10 V ... 10 V	5	DI 0	ON / OFF1	6	DI 1	Reversing	7	DI 2	Acknowledge	8	DI 3	---	16	DI 4	---	17	DI 5	---	<p>PROFIdrive telegram 20</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>---</td></tr> <tr><td>6</td><td>DI 1</td><td>External fault</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>Low</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	---	4			5	DI 0	---	6	DI 1	External fault	7	DI 2	Acknowledge	8	DI 3	Low	16	DI 4	---	17	DI 5	---	<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>ON / OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>External fault</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>High</td></tr> <tr><td>16</td><td>DI 4</td><td>MOP raise</td></tr> <tr><td>17</td><td>DI 5</td><td>MOP lower</td></tr> </table>	3	AI 0	---	4			5	DI 0	ON / OFF1	6	DI 1	External fault	7	DI 2	Acknowledge	8	DI 3	High	16	DI 4	MOP raise	17	DI 5	MOP lower
3	AI 0	Setpoint																																																																								
4		I □ U -10 V ... 10 V																																																																								
5	DI 0	ON / OFF1																																																																								
6	DI 1	Reversing																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	---																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								
3	AI 0	---																																																																								
4																																																																										
5	DI 0	---																																																																								
6	DI 1	External fault																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	Low																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								
3	AI 0	---																																																																								
4																																																																										
5	DI 0	ON / OFF1																																																																								
6	DI 1	External fault																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	High																																																																								
16	DI 4	MOP raise																																																																								
17	DI 5	MOP lower																																																																								

4.4 Installing Control Unit

<p>Default setting 15: Switch over between analog setpoint and motorized potentiometer (MOP) using DI 3 Selected with</p> <ul style="list-style-type: none"> STARTER: Process industry BOP-2: Proc 		<p>Default setting 17: Two-wire control with method 2 Selected with</p> <ul style="list-style-type: none"> STARTER: 2-wire (forward/backward 1) BOP-2: 2-wlrE 1 <p>Default setting 18: Two-wire control with method 3 Selected with</p> <ul style="list-style-type: none"> STARTER: 2-wire (forward/backward 2) BOP-2: 2-wlrE 2 																																																																								
<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>Setpoint</td></tr> <tr><td>4</td><td></td><td>I □ U -10 V ... 10 V</td></tr> <tr><td>5</td><td>DI 0</td><td>ON / OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>External fault</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>Low</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	Setpoint	4		I □ U -10 V ... 10 V	5	DI 0	ON / OFF1	6	DI 1	External fault	7	DI 2	Acknowledge	8	DI 3	Low	16	DI 4	---	17	DI 5	---	<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>ON / OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>External fault</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>High</td></tr> <tr><td>16</td><td>DI 4</td><td>MOP raise</td></tr> <tr><td>17</td><td>DI 5</td><td>MOP lower</td></tr> </table>	3	AI 0	---	4			5	DI 0	ON / OFF1	6	DI 1	External fault	7	DI 2	Acknowledge	8	DI 3	High	16	DI 4	MOP raise	17	DI 5	MOP lower	<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>Setpoint</td></tr> <tr><td>4</td><td></td><td>I □ U -10 V ... 10 V</td></tr> <tr><td>5</td><td>DI 0</td><td>ON/OFF1 clockwise</td></tr> <tr><td>6</td><td>DI 1</td><td>ON / OFF1 counter-clockwise</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	Setpoint	4		I □ U -10 V ... 10 V	5	DI 0	ON/OFF1 clockwise	6	DI 1	ON / OFF1 counter-clockwise	7	DI 2	Acknowledge	8	DI 3	---	16	DI 4	---	17	DI 5	---
3	AI 0	Setpoint																																																																								
4		I □ U -10 V ... 10 V																																																																								
5	DI 0	ON / OFF1																																																																								
6	DI 1	External fault																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	Low																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								
3	AI 0	---																																																																								
4																																																																										
5	DI 0	ON / OFF1																																																																								
6	DI 1	External fault																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	High																																																																								
16	DI 4	MOP raise																																																																								
17	DI 5	MOP lower																																																																								
3	AI 0	Setpoint																																																																								
4		I □ U -10 V ... 10 V																																																																								
5	DI 0	ON/OFF1 clockwise																																																																								
6	DI 1	ON / OFF1 counter-clockwise																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	---																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								
<p>Default setting 19: Three-wire control with method 1 Selected with</p> <ul style="list-style-type: none"> STARTER: 3-wire (enable/forward/backward) BOP-2: 3-wlrE 1 	<p>Default setting 20: Three-wire control with method 2 Selected with</p> <ul style="list-style-type: none"> STARTER: 3-wire (enable/on/reverse) BOP-2: 3-wlrE 2 	<p>Default setting 21: Fieldbus USS Selected with</p> <ul style="list-style-type: none"> STARTER: USS fieldbus BOP-2: FB USS 																																																																								
<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>Setpoint</td></tr> <tr><td>4</td><td></td><td>I □ U -10 V ... 10 V</td></tr> <tr><td>5</td><td>DI 0</td><td>Enable / OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>ON clockwise</td></tr> <tr><td>7</td><td>DI 2</td><td>ON counter-clockwise</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>Acknowledge</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	Setpoint	4		I □ U -10 V ... 10 V	5	DI 0	Enable / OFF1	6	DI 1	ON clockwise	7	DI 2	ON counter-clockwise	8	DI 3	---	16	DI 4	Acknowledge	17	DI 5	---	<p>Fieldbus interface is not active.</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>Setpoint</td></tr> <tr><td>4</td><td></td><td>I □ U -10 V ... 10 V</td></tr> <tr><td>5</td><td>DI 0</td><td>Enable / OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>ON</td></tr> <tr><td>7</td><td>DI 2</td><td>Reversing</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>Acknowledge</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	Setpoint	4		I □ U -10 V ... 10 V	5	DI 0	Enable / OFF1	6	DI 1	ON	7	DI 2	Reversing	8	DI 3	---	16	DI 4	Acknowledge	17	DI 5	---	<p>USS setting: 38400 baud, 2 PZD, PKW variable CANopen setting: 20 kBaud</p> <table border="1"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>---</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table>	3	AI 0	---	4			5	DI 0	---	6	DI 1	---	7	DI 2	Acknowledge	8	DI 3	---	16	DI 4	---	17	DI 5	---
3	AI 0	Setpoint																																																																								
4		I □ U -10 V ... 10 V																																																																								
5	DI 0	Enable / OFF1																																																																								
6	DI 1	ON clockwise																																																																								
7	DI 2	ON counter-clockwise																																																																								
8	DI 3	---																																																																								
16	DI 4	Acknowledge																																																																								
17	DI 5	---																																																																								
3	AI 0	Setpoint																																																																								
4		I □ U -10 V ... 10 V																																																																								
5	DI 0	Enable / OFF1																																																																								
6	DI 1	ON																																																																								
7	DI 2	Reversing																																																																								
8	DI 3	---																																																																								
16	DI 4	Acknowledge																																																																								
17	DI 5	---																																																																								
3	AI 0	---																																																																								
4																																																																										
5	DI 0	---																																																																								
6	DI 1	---																																																																								
7	DI 2	Acknowledge																																																																								
8	DI 3	---																																																																								
16	DI 4	---																																																																								
17	DI 5	---																																																																								

Available default settings of the terminals with CU230P-2 HVAC and CU230P-2 BT

Default setting 101: Universal application Selected with <ul style="list-style-type: none"> STARTER: BT Mac 1: Universal application BOP-2: P_F 6PA 	Default setting 103: Pump pressure control Selected with <ul style="list-style-type: none"> STARTER: BT Mac 3: Pump pressure control BOP-2: P_F dPc 	Default setting 104: Stairwell pressure control (ESM) Selected with <ul style="list-style-type: none"> STARTER: BT Mac 4: ESM stairwell pressure control BOP-2: P_F Stw 																																																																																																																																																									
Fieldbus interface is not active. <table border="1" data-bbox="159 649 271 1142"> <tr><td>50</td><td>NI1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>NI1000</td><td>---</td></tr> <tr><td>53</td><td>/AI3+</td><td>---</td></tr> <tr><td>3</td><td>AI 0</td><td>Setpoint</td></tr> <tr><td>4</td><td></td><td>I <input type="checkbox"/> U 0 V ... 10 V</td></tr> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>ON/OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>External fault</td></tr> <tr><td>7</td><td>DI 2</td><td>Activate ESM</td></tr> <tr><td>8</td><td>DI 3</td><td>Speed = 800 rpm</td></tr> <tr><td>16</td><td>DI 4</td><td>Speed = 1000 rpm</td></tr> <tr><td>17</td><td>DI 5</td><td>Speed = 1200 rpm</td></tr> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>When selecting a fixed speed via DI 3 ... DI 5, the inverter switches on the motor and internally sets the analog setpoint = 0.</p> <p>When ESM is active (Essential Service Mode), the following applies: Fixed setpoint = 1500 rpm.</p> <p>Additional settings:</p> <ul style="list-style-type: none"> "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	NI1000	---	51	/AI 2+	---	52	NI1000	---	53	/AI3+	---	3	AI 0	Setpoint	4		I <input type="checkbox"/> U 0 V ... 10 V	21	DO 1	Alarm	22			5	DI 0	ON/OFF1	6	DI 1	External fault	7	DI 2	Activate ESM	8	DI 3	Speed = 800 rpm	16	DI 4	Speed = 1000 rpm	17	DI 5	Speed = 1200 rpm	23	DO 2	Operation	24			25			Fieldbus interface is not active. <table border="1" data-bbox="600 649 711 1142"> <tr><td>50</td><td>NI1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>NI1000</td><td>---</td></tr> <tr><td>53</td><td>/AI3+</td><td>---</td></tr> <tr><td>3</td><td>AI 0</td><td>Actual value</td></tr> <tr><td>4</td><td></td><td>I <input type="checkbox"/> U 0 ... 10 V</td></tr> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>ON/OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>---</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>The inverter evaluates the pressure sensor via AI 0 (0 % ... 100 %).</p> <p>Additional settings:</p> <ul style="list-style-type: none"> Differential pressure control via the internal technology controller with fixed setpoint = 50 %. "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	NI1000	---	51	/AI 2+	---	52	NI1000	---	53	/AI3+	---	3	AI 0	Actual value	4		I <input type="checkbox"/> U 0 ... 10 V	21	DO 1	Alarm	22			5	DI 0	ON/OFF1	6	DI 1	---	7	DI 2	---	8	DI 3	---	16	DI 4	---	17	DI 5	---	23	DO 2	Operation	24			25			Fieldbus interface is not active. <table border="1" data-bbox="1040 649 1152 1142"> <tr><td>50</td><td>NI1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>NI1000</td><td>---</td></tr> <tr><td>53</td><td>/AI3+</td><td>---</td></tr> <tr><td>3</td><td>AI 0</td><td>Actual value</td></tr> <tr><td>4</td><td></td><td>I <input type="checkbox"/> U -10 V ... 10 V</td></tr> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>Activate ESM</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>---</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>The inverter evaluates the pressure sensor via AI 0 (0 % ... 100 %).</p> <p>When ESM is active (Essential Service Mode), the following applies: Fixed setpoint = 40 %.</p> <p>Additional settings:</p> <ul style="list-style-type: none"> Pressure control via the internal technology controller with fixed setpoint = 40 %. "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	NI1000	---	51	/AI 2+	---	52	NI1000	---	53	/AI3+	---	3	AI 0	Actual value	4		I <input type="checkbox"/> U -10 V ... 10 V	21	DO 1	Alarm	22			5	DI 0	Activate ESM	6	DI 1	---	7	DI 2	---	8	DI 3	---	16	DI 4	---	17	DI 5	---	23	DO 2	Operation	24			25		
50	NI1000	---																																																																																																																																																									
51	/AI 2+	---																																																																																																																																																									
52	NI1000	---																																																																																																																																																									
53	/AI3+	---																																																																																																																																																									
3	AI 0	Setpoint																																																																																																																																																									
4		I <input type="checkbox"/> U 0 V ... 10 V																																																																																																																																																									
21	DO 1	Alarm																																																																																																																																																									
22																																																																																																																																																											
5	DI 0	ON/OFF1																																																																																																																																																									
6	DI 1	External fault																																																																																																																																																									
7	DI 2	Activate ESM																																																																																																																																																									
8	DI 3	Speed = 800 rpm																																																																																																																																																									
16	DI 4	Speed = 1000 rpm																																																																																																																																																									
17	DI 5	Speed = 1200 rpm																																																																																																																																																									
23	DO 2	Operation																																																																																																																																																									
24																																																																																																																																																											
25																																																																																																																																																											
50	NI1000	---																																																																																																																																																									
51	/AI 2+	---																																																																																																																																																									
52	NI1000	---																																																																																																																																																									
53	/AI3+	---																																																																																																																																																									
3	AI 0	Actual value																																																																																																																																																									
4		I <input type="checkbox"/> U 0 ... 10 V																																																																																																																																																									
21	DO 1	Alarm																																																																																																																																																									
22																																																																																																																																																											
5	DI 0	ON/OFF1																																																																																																																																																									
6	DI 1	---																																																																																																																																																									
7	DI 2	---																																																																																																																																																									
8	DI 3	---																																																																																																																																																									
16	DI 4	---																																																																																																																																																									
17	DI 5	---																																																																																																																																																									
23	DO 2	Operation																																																																																																																																																									
24																																																																																																																																																											
25																																																																																																																																																											
50	NI1000	---																																																																																																																																																									
51	/AI 2+	---																																																																																																																																																									
52	NI1000	---																																																																																																																																																									
53	/AI3+	---																																																																																																																																																									
3	AI 0	Actual value																																																																																																																																																									
4		I <input type="checkbox"/> U -10 V ... 10 V																																																																																																																																																									
21	DO 1	Alarm																																																																																																																																																									
22																																																																																																																																																											
5	DI 0	Activate ESM																																																																																																																																																									
6	DI 1	---																																																																																																																																																									
7	DI 2	---																																																																																																																																																									
8	DI 3	---																																																																																																																																																									
16	DI 4	---																																																																																																																																																									
17	DI 5	---																																																																																																																																																									
23	DO 2	Operation																																																																																																																																																									
24																																																																																																																																																											
25																																																																																																																																																											

4.4 Installing Control Unit

<p>Default setting 105: Fan pressure control + ESM with fixed setpoint</p> <p>Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 5: Fan pressure control + ESM with fixed setpoint BOP-2: P_F Pc5 	<p>Default setting 106: Cooling tower with active sensor + hibernation mode</p> <p>Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 6: Cooling tower with active sensor + energy-saving mode BOP-2: P_F ctF1 	<p>Default setting 107: Cooling tower with LG-Ni1000 sensor + hibernation mode</p> <p>Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 7: Cooling tower with LG-Ni1000 sensor + energy-saving mode BOP-2: P_F ctF2 																																																																																																																																																									
<p>Fieldbus interface is not active.</p> <table border="1" data-bbox="121 636 236 748"> <tr><td>50</td><td>NI1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>NI1000</td><td>---</td></tr> <tr><td>53</td><td>/AI3+</td><td>---</td></tr> </table> <table border="1" data-bbox="121 754 464 815"> <tr><td>3</td><td>AI 0</td><td>Actual value</td></tr> <tr><td>4</td><td></td><td>I <input type="checkbox"/> U 0 V ... 10 V</td></tr> </table> <table border="1" data-bbox="121 822 316 882"> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> </table> <table border="1" data-bbox="121 889 403 1046"> <tr><td>5</td><td>DI 0</td><td>ON/OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>Activate ESM</td></tr> <tr><td>7</td><td>DI 2</td><td>---</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table> <table border="1" data-bbox="121 1052 360 1135"> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>The inverter evaluates a pressure sensor via AI 0 (0 % ... 100 %).</p> <p>When ESM is active (Essential Service Mode), the following applies: Fixed setpoint = 1350 rpm.</p> <p>Additional settings:</p> <ul style="list-style-type: none"> Pressure control via the internal technology controller with fixed setpoint = 40 %. "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	NI1000	---	51	/AI 2+	---	52	NI1000	---	53	/AI3+	---	3	AI 0	Actual value	4		I <input type="checkbox"/> U 0 V ... 10 V	21	DO 1	Alarm	22			5	DI 0	ON/OFF1	6	DI 1	Activate ESM	7	DI 2	---	8	DI 3	---	16	DI 4	---	17	DI 5	---	23	DO 2	Operation	24			25			<p>Fieldbus interface is not active.</p> <table border="1" data-bbox="568 636 683 748"> <tr><td>50</td><td>NI1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>NI1000</td><td>---</td></tr> <tr><td>53</td><td>/AI3+</td><td>---</td></tr> </table> <table border="1" data-bbox="568 754 906 815"> <tr><td>3</td><td>AI 0</td><td>Actual value</td></tr> <tr><td>4</td><td></td><td>I <input type="checkbox"/> U 0 V ... 10 V</td></tr> </table> <table border="1" data-bbox="568 822 762 882"> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> </table> <table border="1" data-bbox="568 889 799 1046"> <tr><td>5</td><td>DI 0</td><td>ON/OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>---</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table> <table border="1" data-bbox="568 1052 802 1135"> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>The inverter evaluates a temperature sensor via AI 0 (0 % ... 100 %).</p> <p>Additional settings:</p> <ul style="list-style-type: none"> Temperature control via the internal technology controller with fixed setpoint = 26 %. The "hibernation mode" is active: Start speed = 50 rpm, restart value = 1 %. "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	NI1000	---	51	/AI 2+	---	52	NI1000	---	53	/AI3+	---	3	AI 0	Actual value	4		I <input type="checkbox"/> U 0 V ... 10 V	21	DO 1	Alarm	22			5	DI 0	ON/OFF1	6	DI 1	---	7	DI 2	---	8	DI 3	---	16	DI 4	---	17	DI 5	---	23	DO 2	Operation	24			25			<p>Fieldbus interface is not active.</p> <table border="1" data-bbox="1015 636 1129 748"> <tr><td>50</td><td>NI1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>NI1000</td><td>Actual value</td></tr> <tr><td>53</td><td>/AI3+</td><td>T <input type="checkbox"/> I</td></tr> </table> <table border="1" data-bbox="1015 754 1129 815"> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td>---</td></tr> </table> <table border="1" data-bbox="1015 822 1209 882"> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> </table> <table border="1" data-bbox="1015 889 1246 1046"> <tr><td>5</td><td>DI 0</td><td>ON/OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>---</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> </table> <table border="1" data-bbox="1015 1052 1249 1135"> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>The inverter evaluates a temperature sensor LG-Ni1000 via AI 3 (0 % ... 100 %).</p> <p>Additional settings:</p> <ul style="list-style-type: none"> Temperature control via the internal technology controller with fixed setpoint = 26 %. The "hibernation mode" is active: Start speed = 50 rpm, restart value = 1 %. "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	NI1000	---	51	/AI 2+	---	52	NI1000	Actual value	53	/AI3+	T <input type="checkbox"/> I	3	AI 0	---	4		---	21	DO 1	Alarm	22			5	DI 0	ON/OFF1	6	DI 1	---	7	DI 2	---	8	DI 3	---	16	DI 4	---	17	DI 5	---	23	DO 2	Operation	24			25		
50	NI1000	---																																																																																																																																																									
51	/AI 2+	---																																																																																																																																																									
52	NI1000	---																																																																																																																																																									
53	/AI3+	---																																																																																																																																																									
3	AI 0	Actual value																																																																																																																																																									
4		I <input type="checkbox"/> U 0 V ... 10 V																																																																																																																																																									
21	DO 1	Alarm																																																																																																																																																									
22																																																																																																																																																											
5	DI 0	ON/OFF1																																																																																																																																																									
6	DI 1	Activate ESM																																																																																																																																																									
7	DI 2	---																																																																																																																																																									
8	DI 3	---																																																																																																																																																									
16	DI 4	---																																																																																																																																																									
17	DI 5	---																																																																																																																																																									
23	DO 2	Operation																																																																																																																																																									
24																																																																																																																																																											
25																																																																																																																																																											
50	NI1000	---																																																																																																																																																									
51	/AI 2+	---																																																																																																																																																									
52	NI1000	---																																																																																																																																																									
53	/AI3+	---																																																																																																																																																									
3	AI 0	Actual value																																																																																																																																																									
4		I <input type="checkbox"/> U 0 V ... 10 V																																																																																																																																																									
21	DO 1	Alarm																																																																																																																																																									
22																																																																																																																																																											
5	DI 0	ON/OFF1																																																																																																																																																									
6	DI 1	---																																																																																																																																																									
7	DI 2	---																																																																																																																																																									
8	DI 3	---																																																																																																																																																									
16	DI 4	---																																																																																																																																																									
17	DI 5	---																																																																																																																																																									
23	DO 2	Operation																																																																																																																																																									
24																																																																																																																																																											
25																																																																																																																																																											
50	NI1000	---																																																																																																																																																									
51	/AI 2+	---																																																																																																																																																									
52	NI1000	Actual value																																																																																																																																																									
53	/AI3+	T <input type="checkbox"/> I																																																																																																																																																									
3	AI 0	---																																																																																																																																																									
4		---																																																																																																																																																									
21	DO 1	Alarm																																																																																																																																																									
22																																																																																																																																																											
5	DI 0	ON/OFF1																																																																																																																																																									
6	DI 1	---																																																																																																																																																									
7	DI 2	---																																																																																																																																																									
8	DI 3	---																																																																																																																																																									
16	DI 4	---																																																																																																																																																									
17	DI 5	---																																																																																																																																																									
23	DO 2	Operation																																																																																																																																																									
24																																																																																																																																																											
25																																																																																																																																																											

<p>Default setting 108: Fieldbus USS Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 8: USS fieldbus BOP-2: P_F USS <p>Default setting 109: Modbus RTU fieldbus Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 9: Modbus RTU field BOP-2: P_F Mod 	<p>Default setting 110: BACnet MS/TP fieldbus Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 10: BACnet MS/TP fieldbus BOP-2: P_F bAc <p>Default setting 114: P1 fieldbus Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 14: Communication P1 BOP-2: P_F_P1 																																																			
<p>USS setting: 9600 baud, 2 PZD, 4 PKW. Modbus-RTU setting: 9600 baud). BACnet setting: 9600 baud). P1 setting: 4800 baud).</p> <table border="1"> <tr><td>50</td><td>NI1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>NI1000</td><td>---</td></tr> <tr><td>53</td><td>/AI3+</td><td>---</td></tr> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>21</td><td>DO 1</td><td>---</td></tr> <tr><td>22</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>---</td></tr> <tr><td>6</td><td>DI 1</td><td>---</td></tr> <tr><td>7</td><td>DI 2</td><td>Acknowledge</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> <tr><td>23</td><td>DO 2</td><td>---</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table>		50	NI1000	---	51	/AI 2+	---	52	NI1000	---	53	/AI3+	---	3	AI 0	---	4			21	DO 1	---	22			5	DI 0	---	6	DI 1	---	7	DI 2	Acknowledge	8	DI 3	---	16	DI 4	---	17	DI 5	---	23	DO 2	---	24			25		
50	NI1000	---																																																		
51	/AI 2+	---																																																		
52	NI1000	---																																																		
53	/AI3+	---																																																		
3	AI 0	---																																																		
4																																																				
21	DO 1	---																																																		
22																																																				
5	DI 0	---																																																		
6	DI 1	---																																																		
7	DI 2	Acknowledge																																																		
8	DI 3	---																																																		
16	DI 4	---																																																		
17	DI 5	---																																																		
23	DO 2	---																																																		
24																																																				
25																																																				

<p>Default setting 111: Fixed setpoints Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 11: Fixed setpoint speed BOP-2: P_F_F55 	<p>Default setting 113: Temperature-dependent pressure setpoint Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 13: Temperature-dependent pressure setpoint BOP-2: P_F_tP5 	<p>Default setting 120: PID setting for pumps and fans Selected with</p> <ul style="list-style-type: none"> STARTER: BT Mac 20: PID setting for pumps and fans BOP-2: P_F_PID 																																																																																																						
<p>Fieldbus interface is not active.</p> <table border="1" data-bbox="119 607 236 1104"> <tr><td>50</td><td>Ni1000</td><td>---</td></tr> <tr><td>51</td><td>/AI 2+</td><td>---</td></tr> <tr><td>52</td><td>Ni1000</td><td>---</td></tr> <tr><td>53</td><td>/AI3+</td><td>---</td></tr> <tr><td>3</td><td>AI 0</td><td>---</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>Speed = 300 rpm</td></tr> <tr><td>6</td><td>DI 1</td><td>Speed = 600 rpm</td></tr> <tr><td>7</td><td>DI 2</td><td>Speed = 900 rpm</td></tr> <tr><td>8</td><td>DI 3</td><td>Speed = 1200 rpm</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>When selecting a fixed speed via DI 0 ... DI 3, the inverter switches on the motor.</p> <p>Multiple DIs = high: The inverter adds the corresponding fixed speeds.</p> <p>Additional settings:</p> <ul style="list-style-type: none"> "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	Ni1000	---	51	/AI 2+	---	52	Ni1000	---	53	/AI3+	---	3	AI 0	---	4			21	DO 1	Alarm	22			5	DI 0	Speed = 300 rpm	6	DI 1	Speed = 600 rpm	7	DI 2	Speed = 900 rpm	8	DI 3	Speed = 1200 rpm	16	DI 4	---	17	DI 5	---	23	DO 2	Operation	24			25			<p>Fieldbus interface is not active.</p> <table border="1" data-bbox="566 607 928 1104"> <tr><td>50</td><td>Ni1000</td><td>Setpoint</td></tr> <tr><td>51</td><td>/AI 2+</td><td>Temp <input type="checkbox"/> LG-Ni1000</td></tr> <tr><td>52</td><td>Ni1000</td><td>---</td></tr> <tr><td>53</td><td>/AI 3+</td><td>---</td></tr> <tr><td>3</td><td>AI 0</td><td>Actual value</td></tr> <tr><td>4</td><td></td><td><input type="checkbox"/> U 0 V ... 10 V</td></tr> <tr><td>21</td><td>DO 1</td><td>Alarm</td></tr> <tr><td>22</td><td></td><td></td></tr> <tr><td>5</td><td>DI 0</td><td>ON/OFF1</td></tr> <tr><td>6</td><td>DI 1</td><td>Activate ESM</td></tr> <tr><td>7</td><td>DI 2</td><td>---</td></tr> <tr><td>8</td><td>DI 3</td><td>---</td></tr> <tr><td>16</td><td>DI 4</td><td>---</td></tr> <tr><td>17</td><td>DI 5</td><td>---</td></tr> <tr><td>23</td><td>DO 2</td><td>Operation</td></tr> <tr><td>24</td><td></td><td></td></tr> <tr><td>25</td><td></td><td></td></tr> </table> <p>The inverter receives a temperature setpoint via AI 2 (-20 °C ... 5 °C).</p> <p>The inverter evaluates a pressure sensor via AI 0.</p> <p>Additional settings:</p> <ul style="list-style-type: none"> Temperature control via the internal technology controller with setpoint limiting 20 % ... 50 %. "Flying restart" is enabled. After a power failure, the inverter automatically acknowledges possible faults and switches on the motor (automatic restart). 	50	Ni1000	Setpoint	51	/AI 2+	Temp <input type="checkbox"/> LG-Ni1000	52	Ni1000	---	53	/AI 3+	---	3	AI 0	Actual value	4		<input type="checkbox"/> U 0 V ... 10 V	21	DO 1	Alarm	22			5	DI 0	ON/OFF1	6	DI 1	Activate ESM	7	DI 2	---	8	DI 3	---	16	DI 4	---	17	DI 5	---	23	DO 2	Operation	24			25			<p>Fieldbus interface is not active.</p> <p>The default setting has no effect on the terminal strip function.</p> <p>Settings:</p> <ul style="list-style-type: none"> Ramp-up and ramp-down time of the technology controller = 30 s. Upper limit of the technology controller actual value = 120% Time constant of the actual value filter = 10 s
50	Ni1000	---																																																																																																						
51	/AI 2+	---																																																																																																						
52	Ni1000	---																																																																																																						
53	/AI3+	---																																																																																																						
3	AI 0	---																																																																																																						
4																																																																																																								
21	DO 1	Alarm																																																																																																						
22																																																																																																								
5	DI 0	Speed = 300 rpm																																																																																																						
6	DI 1	Speed = 600 rpm																																																																																																						
7	DI 2	Speed = 900 rpm																																																																																																						
8	DI 3	Speed = 1200 rpm																																																																																																						
16	DI 4	---																																																																																																						
17	DI 5	---																																																																																																						
23	DO 2	Operation																																																																																																						
24																																																																																																								
25																																																																																																								
50	Ni1000	Setpoint																																																																																																						
51	/AI 2+	Temp <input type="checkbox"/> LG-Ni1000																																																																																																						
52	Ni1000	---																																																																																																						
53	/AI 3+	---																																																																																																						
3	AI 0	Actual value																																																																																																						
4		<input type="checkbox"/> U 0 V ... 10 V																																																																																																						
21	DO 1	Alarm																																																																																																						
22																																																																																																								
5	DI 0	ON/OFF1																																																																																																						
6	DI 1	Activate ESM																																																																																																						
7	DI 2	---																																																																																																						
8	DI 3	---																																																																																																						
16	DI 4	---																																																																																																						
17	DI 5	---																																																																																																						
23	DO 2	Operation																																																																																																						
24																																																																																																								
25																																																																																																								

4.4.5 Wiring terminal strips



⚠ WARNING

Danger to life as a result of hazardous voltages when connecting an unsuitable power supply

Death or serious injury can result when live parts are touched in the event of a fault.

- For all connections and terminals of the electronic boards, only use power supplies that provide PELV (Protective Extra Low Voltage) or SELV (Safety Extra Low Voltage) output voltages.

In order to install the inverter in compliance with UL, you may only connect the DO 0 and DO 2 relay outputs of the Control Unit using copper wires approved for 75 °C.



⚠ DANGER

Risk of electric shock from touching live parts

If the insulation is damaged on the lines that are connected to the terminals DO 0 and DO 2, parts of the Control Unit may still be connected to the power supply. When connecting 230 V on terminals DO 0 and DO 2 there is the risk of an electric shock.

- Close the power supplies of 230 V only via lines with double insulation on the relay outputs DO 0 and DO 2 on the control unit.


NOTICE

Damage to the inverter when using long signal cables

Using long cables at the inverter's digital inputs and 24 V power supply can lead to overvoltage during switching operations. Overvoltages can damage the inverter.

- If you use cables of more than 30 m at the digital inputs and 24 V power supply, connect an overvoltage protection element between the terminal and the associated reference potential.
We recommend using the Weidmüller overvoltage protection terminal with designation MCZ OVP TAZ DIODE 24VDC.

Permissible cable and wiring options

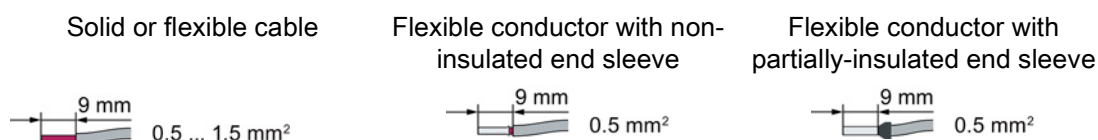

Cables with twin end sleeves are not permissible.

4.4 Installing Control Unit

Procedure



Proceed as follows to connect the terminal strips:

1. Use a cable with the recommended cross-section, which has been appropriately prepared for use:
2. If you use shielded cables, then you must connect the shield to the mounting plate of the control cabinet or with the shield support of the inverter through a good electrical connection and a large surface area.
See also:EMC installation guideline
(<http://support.automation.siemens.com/WW/view/en/60612658>)
3. Use the shield connection plate of the Control Unit as strain relief, also see: Control Units (Page 25).



You have connected the terminal strip.

4.4.6 Fieldbus interface allocation

Interfaces at the lower side of the CU230P-2 Control Unit

CU230P-2 PN	CU230P-2 DP	CU230P-2 CAN	CU230P-2 HVAC
<p>X150 P1 X150 P2</p>	<p>X127 Buchse</p>	<p>X126 Stecker OFF ON Busabschluss</p>	<p>X128 OFF ON Busabschluss</p>
<p>Pin</p> <p>1 RX+, receive data +</p> <p>2 RX-, receive data -</p> <p>3 TX+. Transmit data +</p> <p>4 ---</p> <p>5 ---</p> <p>6 TX-, transmit data -</p> <p>7 ---</p> <p>8 ---</p>	<p>Pin</p> <p>1 Shield, ground connection</p> <p>2 ---</p> <p>3 RxD/TxD-P, receive and transmit (B/B')</p> <p>4 CNTR-P, control signal</p> <p>5 DGND, reference potential for data (C/C')</p> <p>6 VP, supply voltage</p> <p>7 ---</p> <p>8 RxD/TxD-N, receive and transmit (A/A')</p> <p>9 ---</p>	<p>Pin</p> <p>1 ---</p> <p>2 CAN_L, CAN signal (dominant low)</p> <p>3 CAN_GND, CAN ground</p> <p>4 ---</p> <p>5 (CAN_SHLD), optional shield</p> <p>6 (GND), optional ground</p> <p>7 CAN_H, CAN signal (dominant high)</p> <p>8 ---</p> <p>9 ---</p>	<p>Pin</p> <p>1 0 V, reference potential</p> <p>2 RS485P, receive and transmit (+)</p> <p>3 RS485N, receive and transmit (-)</p> <p>4 Cable shield</p> <p>5 ---</p>

4.5 Connecting inverters in compliance with EMC

4.5.1 EMC-compliant connection of the converter

EMC-compliant installation of the inverter and motor are required in order to ensure disturbance-free operation of the drive.

Install and operate inverters with IP20 degree of protection in a closed control cabinet.

Inverters with degree of protection IP55 are suitable for installation outside a control cabinet.

An overview of control cabinet installation and cabling can be found in the following section. For further details, refer to the installation instructions of the Power Module.

The EMC-compliant connection of the inverter itself is described in the following sections.

4.5.2 Avoiding electromagnetic influence (EMI)

The inverters are designed for operation in industrial environments where high values of EMI are expected. Safe, reliable and disturbance-free operation is only guaranteed if the devices are installed by appropriately trained and qualified personnel.

Control cabinet design

- Connect the metallic parts and components of the control cabinet to the frame of the cabinet through a good electrical connection.
 - Side panels
 - Rear panels
 - Cover plate
 - Base plates

Use the largest possible contact area or many individual screw connections.

- Connect the PE busbar and EMC shielding bus to the control cabinet frame using a good electrical connection established through the largest possible surface area.
- Connect all metal enclosures of the devices installed in the control cabinet (such as the inverter and line filter) to the control cabinet frame through a good electrical connection established through the largest possible surface area.

We recommend that these devices are mounted on a bare metal plate with good conducting properties.

4.5 Connecting inverters in compliance with EMC

- For screw connections onto painted or anodized surfaces, establish a good conductive contact using one of the following methods:
 - Use special (serrated) contact washers that cut through the painted or anodized surface.
 - Remove the insulating coating at the contact locations.
- Equip the following components with interference suppression elements:
 - Coils of contactors
 - Relays
 - Solenoid valves
 - Motor holding brakes

Interference suppression elements include RC elements or varistors for AC-operated coils and freewheeling diodes for DC-operated coils.

Connect the interference suppression element directly at the coil.


Cable routing and shielding

- Route all inverter power cables (line supply cables, connecting cables between the braking module and the associated braking resistance as well as the motor cables) separately away from signal and data cables. Maintain a minimum clearance of 25 cm. If cables can be separately routed, use metal partitions that have a good electrical connection to the mounting plate.
- Route the cables from the line supply to the line filter separately away from the following cables:
 - Cables between the line filter and inverter
 - Connecting cables between the braking module and associated braking resistor
 - Motor cables
- Signal and data cables as well as filtered line supply cables may only cross non-filtered power cables at right angles.
- Keep all cables as short as possible.
- Always route signal lines, data cables, and the associated potential equalizing cables in parallel with the shortest possible clearance between them
- Use shielded motor cables.
- Route the shielded motor cable separately from the cables to the motor temperature sensors (PTC/KTY).
- Use shielded signal and data cables.
- Connect the shields to the grounded enclosure at both ends with a good electrical connection through the largest possible surface area
- Connect the cable shields as closely as possible to the point where the cable enters the control cabinet.

- Use EMC shielded busbars for power cables.
Use the shield connection elements in the inverter for signal and data cables.
- Do not interrupt any cable shields by using intermediate terminals.
- Use the appropriate EMC terminals for cable shields.

The EMC terminals connect the cable shield with the EMC shielded busbar or with the shield connection element through a large conductive surface.

EMC-compliant wiring for Power Module with degree of protection IP20

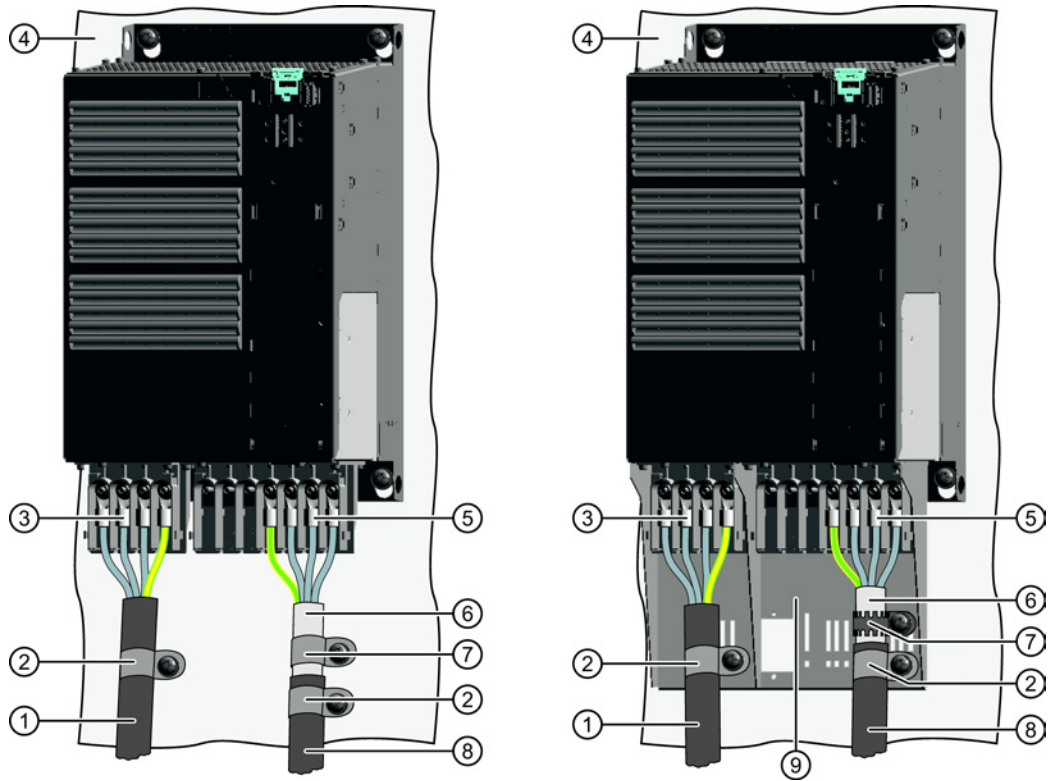

The terminal cover is not shown in the diagram, so that it is easier to see how the cable is connected.

- ① Line connection cable (unshielded) for Power Modules with integrated line filter.
If you use an external line filter, you will need a shielded cable between the line filter and the Power Module.
- ② Strain relief
- ③ Line supply connection
- ④ Metal mounting plate (unpainted and with a good electrical conductivity)
- ⑤ Motor connection
- ⑥ Cable shield
- ⑦ Cable clamps for establishing the connection between the shield and the mounting plate through a large surface area
- ⑧ Motor connection cable (shielded)
- ⑨ Shield plate (option)

Figure 4-12 EMC-compliant wiring of a Power Module frame size E as example

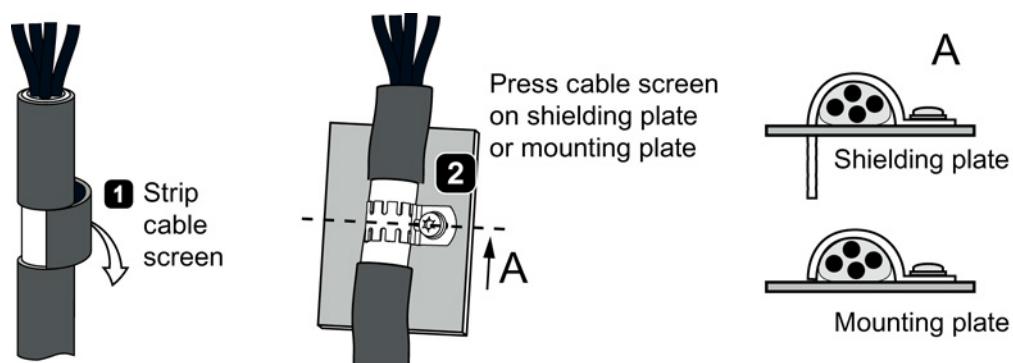


Figure 4-13 Shield connection - detail

Shielding with shield plate:

- Shield connection kits are available for Power Module FSA ... FSF frame sizes (you will find more information in the D11.1 and D35 catalogs). The cable shields must be connected to the shield plate through the greatest possible surface area using shield clamps.

Shielding without shield plate:

- EMC-compliant shielding can also be implemented without using a shield plate. In this case, you must ensure that the cable shields are connected to the ground potential through the largest possible surface area.

EMC-compliant connection of the braking resistor

- Connect the braking resistor using a shielded cable.
- Connect the shield to the mounting plate or to the shield plate.
- To do this, use a cable clamp to establish an electrically conductive connection through a large surface area.

EMC-compliant wiring of Power Modules in degree of protection IP55 / UL type 12

The following diagram shows the EMC-compliant installation of Power Modules with degree of protection IP55 / UL type 12.

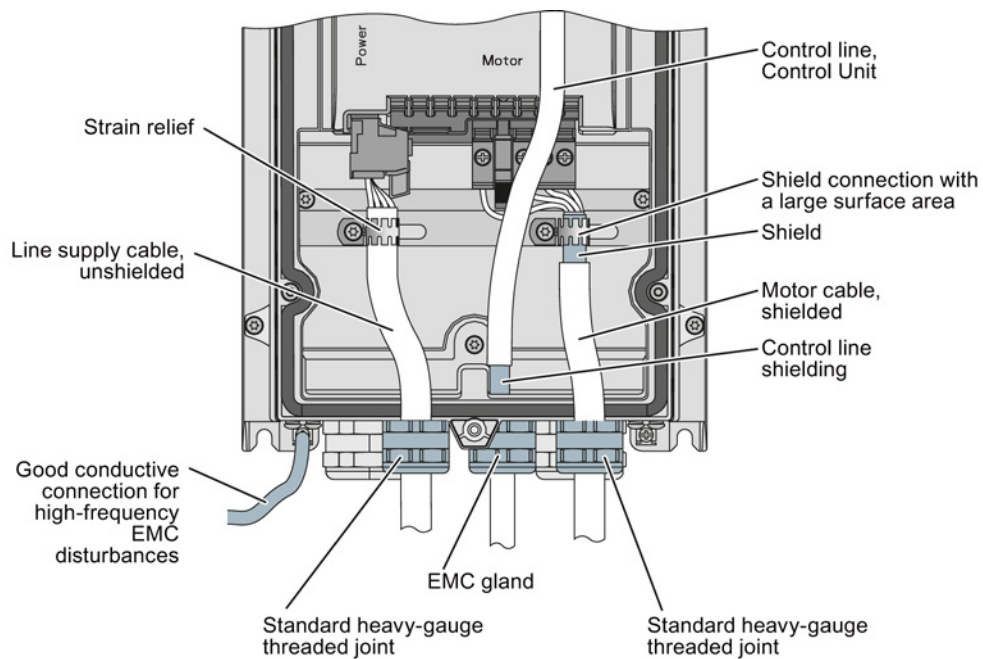


Figure 4-14 EMC-compliant connection of the Power Module PM230, degree of protection IP55 / UL Type 12

Note

You must use a shielded cable if you use the control terminals of the Control Unit. Connect the shield to the gland plate via an EMC screw.

Commissioning

5.1 Commissioning guidelines


Procedure

Proceed as follows to commission the inverter:



1. Define the requirements of your application placed on the drive.
→ (Page 86) .
2. Reset the inverter when required to the factory setting.
→ (Page 90) .
3. Check whether the factory setting of the inverter is appropriate for your application.

If not, start with the basic commissioning.
→ (Page 91).
4. Check whether you need to adapt the functions of the terminal strip that you specify in the basic commissioning.
→ (Page 103).
5. If necessary, adapt the communications interface in the inverter.
→ (Page 117) .
6. If necessary, set further functions in the inverter.
→ (Page 141) .
7. Save your settings.
→ (Page 251) .

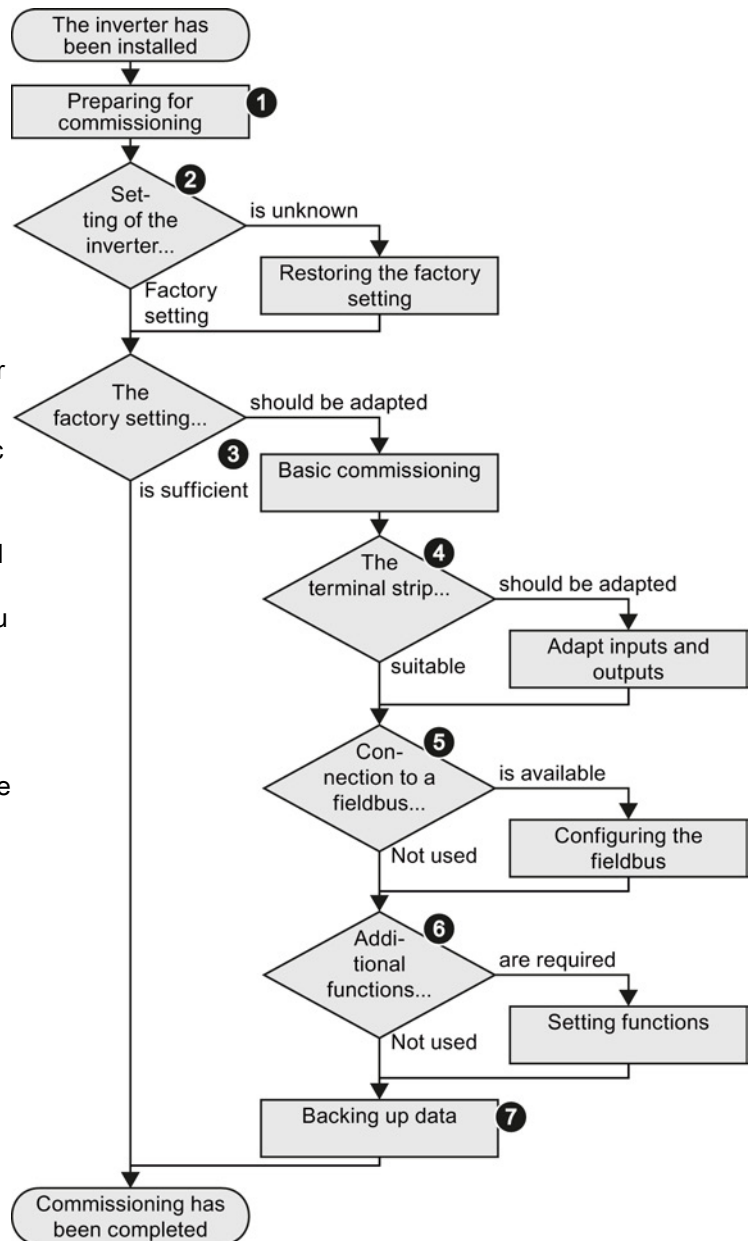

■ You have commissioned the inverter.

5.2 Preparing for commissioning

Overview


Before starting commissioning, you must know the answer to the following questions:

Inverter

- **What are the data specifications of my inverter?**
→ Identifying the converter (Page 23).
- **What inverter interfaces are active?**
→ Overview of the interfaces (Page 67).
- **How is the inverter integrated in the higher-level control system?**
- **How is my inverter set?**
→ Factory setting of the converter control (Page 87).
- **What technological requirements must the drive fulfill?**
→ Selecting the control mode (Page 88).
→ Defining additional requirements for the application (Page 89).

Motor

- **Which motor is connected to the inverter?**
If you are using one of the STARTER commissioning tools or Startdrive and a SIEMENS motor, then you only need the order number of the motor. Otherwise, note down the data on the motor rating plate.

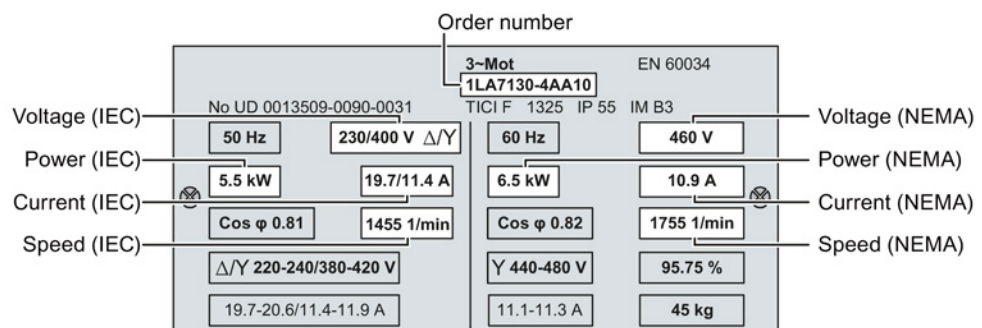

- **In which region of the world will the motor be used?**
- Europe IEC: 50 Hz [kW]
- North America NEMA: 60 Hz [hp] or 60 Hz [kW]
- **How is the motor connected?**
Pay attention to the connection of the motor (star connection [Y] or delta connection [Δ]). Note the appropriate motor data for connecting.
- **What is the ambient temperature of the motor?**
For commissioning, you will need the ambient temperature of the motor if it differs by more than 10 °C from the factory setting (20 °C).

5.2.1 Factory setting of the converter control

Switching the motor on and off

The inverters are set in the factory so that after they have been switched on, the motor accelerates up to its speed setpoint (referred to 1500 rpm) in 10 seconds. After it has been switched off, the motor brakes with a ramp-down time that is also 10 seconds.

Some Power Modules have different ramp-up and ramp-down times. For details, please refer to the List Manual.

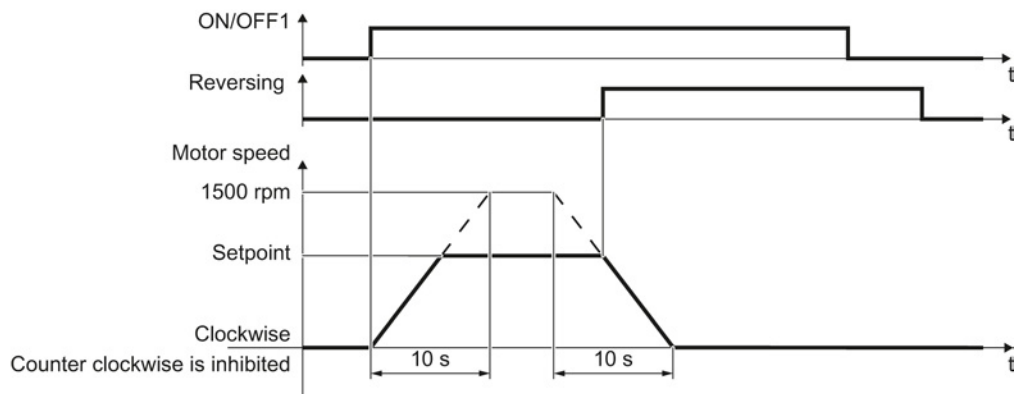


Figure 5-1 Switching on, switching off and reversing the motor in the factory setting

Switch on and switch off the motor in the jog mode

For inverters with PROFIBUS interface, operation can be switched over using digital input DI 3. The motor is either switched on and off via PROFIBUS – or via its digital inputs in the jog mode.

For a control command at the respective digital input, the motor rotates with ± 150 rpm. The ramp-up and ramp-down times are also 10 seconds, referred to 1500 rpm.

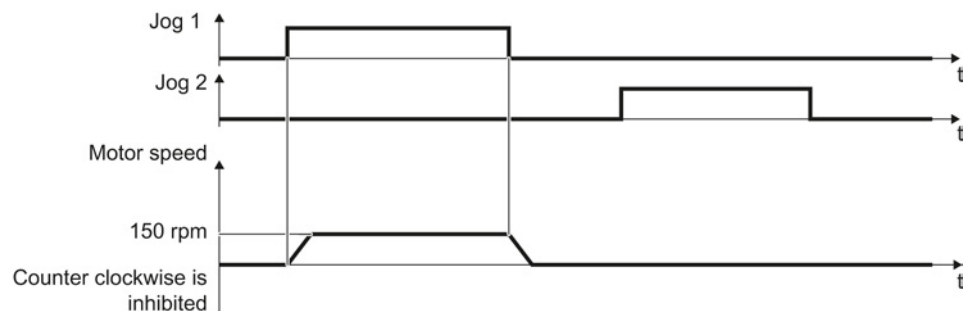
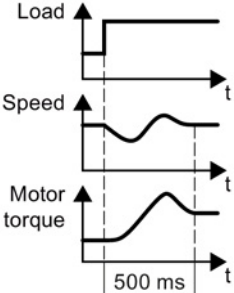
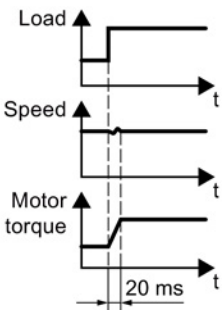


Figure 5-2 Jogging the motor in the factory setting

5.2.2 Selecting the control mode

Criteria for selecting either V/f control or vector control

	U/f control or FCC (flux current control)	Vector control without an encoder
Application examples	<ul style="list-style-type: none"> • Pumps, fans, and compressors with flow characteristic • Wet or dry blasting technology • Mills, mixers, kneaders, crushers, agitators • Horizontal conveyor technology (conveyor belts, roller conveyors, chain conveyors) • Basic spindles 	<ul style="list-style-type: none"> • Pumps and compressors with displacement machines • Rotary furnaces • Extruder • Centrifuge
Motors that can be operated	The rated current of the motor must lie in the range of 13 % ... 100 % of the rated current of the inverter.	
Properties of closed-loop motor control	<ul style="list-style-type: none"> • U/f and FCC are insensitive to inaccurate motor data settings, e.g. the motor temperature • U/f and FCC can be commissioned with just a few settings. • U/f and FCC respond to speed changes with a typical settling time of 100 ms ... 200 ms • U/f and FCC respond to load surges with a typical settling time of 500 ms  <ul style="list-style-type: none"> • U/f and FCC are suitable for the following cases: <ul style="list-style-type: none"> – For motor power ratings < 45 kW – For accelerating times 0 → rated speed > 2 s – For applications with increasing load torque without load surges 	<ul style="list-style-type: none"> • Vector control uses the Power Module, the motor and the mechanical system with a high degree of efficiency (95 % line voltage at the PM240 or PM240-2). • The vector control responds to speed changes with a typical settling time of < 100 ms. • The vector control responds to load surges with a typical settling time of 20 ms.  <ul style="list-style-type: none"> • We recommend vector control for motor power ratings > 45 kW • The vector control is required in the following cases: <ul style="list-style-type: none"> – For accelerating times 0 → rated speed < 2 s – For applications with fast and high load surges – For heavy duty starting using ≤ 90 % of the stall torque of the motor • Vector control typically achieves a torque accuracy of ± 5 % for 10 % ... 100 % of the rated speed
Max. output frequency	240 Hz	200 Hz
Closed-loop torque control	Closed-loop torque control not possible	Closed-loop torque control without higher-level closed-loop speed control is possible

5.2.3 Defining additional requirements for the application

What speed limits should be set (minimum and maximum speed)?

- Minimum speed - factory setting 0 [rpm]
The minimum speed is the lowest speed of the motor independent of the speed setpoint. A minimum speed is, for example, useful for fans or pumps.
- Maximum speed - factory setting 1500 [rpm]
The inverter limits the motor speed to this value.

What motor ramp-up time and ramp-down time are needed for the application?

The ramp-up and ramp-down time define the maximum motor acceleration when the speed setpoint changes. The ramp-up and ramp-down time is the time between motor standstill and the maximum speed, or between the maximum speed and motor standstill.

- Ramp-up time - factory setting depending on the Power Module, 10 seconds or 20 seconds
- Ramp-down time - factory setting depending on the Power Module, 10 seconds or 30 seconds

5.3 Restoring the factory setting

There are cases where something goes wrong when commissioning a drive system e.g.:

- The line voltage was interrupted during commissioning and you were not able to complete commissioning.
- You got confused during the commissioning and you can no longer understand the individual settings that you made.
- You do not know whether the inverter was already operational.


In cases such as these, reset the inverter to the factory settings.

Restoring the inverter to the factory setting

Procedure

 


Proceed as follows to reset the inverter to factory settings:

1. Go online.
2. Select button 



You have reset the inverter to factory settings.



Proceed as follows to reset the inverter to factory settings:

1. In the "Options" menu, select the "DRVRESET" entry
2. Confirm the reset using the OK key



You have reset the inverter to factory settings.

5.4 Basic commissioning

5.4.1 Basic commissioning with the BOP-2 operator panel

To do this, insert the Basic Operator Panel BOP-2 on the Control Unit of the inverter.

Procedure



Proceed as follows to install the BOP-2 operator panel:

1. Locate the lower edge of the BOP-2 housing into the matching recess of the Control Unit.
2. Press the BOP-2 onto the inverter until you hear the latching mechanism engage.



The BOP-2 operator panel is ready for operation when you connect the inverter to the power supply.

Setting the basic commissioning data

Basic commissioning is the first step of the commissioning procedure. The BOP-2 Operator Panel guides you through the basic commissioning process and prompts you to enter the most important data for your inverter.

Precondition

SP	[1/min]
	[1/min]

You have inserted the BOP-2 Operator Panel on the inverter and connected the inverter to a power supply.

The Operator Panel has powered up and displays setpoints and actual values.

Procedure



To enter the data for basic commissioning, proceed as follows:

1. Press the ESC key.
2. Press one of the arrow keys until the BOP-2 displays the "SETUP" menu.
3. In the "SETUP" menu, press the OK key to start basic commissioning.
4. If you wish to restore all of the parameters to the factory setting before the basic commissioning:
 - 4.1. Switch over the display using an arrow key: nO → YES
 - 4.2. Press the OK key.
5.

VF LIN	V/f control with a linear characteristic for basic applications, e.g. horizontal conveyors.
VF QUAD	V/f control with a square-law characteristic for basic pump and fan applications.
SPD N EN	We recommend that you use vector control.

Further information on the control types can be found in Section Selecting the control mode (Page 88)

6. Transfer the data from the motor rating plate to the inverter:


- 6.1. Motor standard
KW 50HZ IEC
HP 60HZ NEMA
KW 60HZ IEC 60 Hz
- 6.2. Rated voltage
- 6.3. Rated current
- 6.4. IEC power (kW)
NEMA (HP)
- 6.5. Rated speed

SIEMENS						
D-91056 Erlangen						
3-Mot. 1LE10011AC434AA0				E0807/0496382		
IEC/EN 60034 100L		IMB3		IP55		
25 kg	Th.Cl. 155(F)		-20°C		Tamb 40°C	
Bearing			UNIREX-N3			
DE	6206-2ZC3		15g	Intervall: 4000hrs		
NE	6206-2ZC3		11g			
60Hz: SF 1.15 CONT NEMA MG1-12						
V	Hz	A	kW	PF	NOM.EFF	rpm
400 Δ	50	3.5	1.5	0.73	84.5%	970
690 Y	50	2.05	1.5	0.73	84.5%	970
460 Δ	60	3.15	1.5	0.69	86.5%	1175
(2)	(1)	(3)	(4)			(5)

7. MOT ID
P1900 OK Motor data identification
 Select the method which the inverter uses to measure the data of the connected motor:
 OFF No measurement of motor data.
 STIL ROT Recommended setting: Measure the motor data at standstill and with the motor rotating.
 STILL Measure the motor data at standstill.
 Select this setting if one of the following cases is applicable:
- You have selected the control mode "SPD N EN". However, the motor cannot rotate freely – for example, if the traversing range is mechanically limited.
 - You have selected V/f control as a control mode, e.g. "VF LIN" or "VF QUAD".
- ROT Measuring the motor data while it is rotating.


8. MAc PAr
P15 OK Select the default setting for the interfaces of the inverter that is suitable for your application. You will find the default settings in Section: Default settings of the terminals (Page 71).

9. MIN RPM
P1080 OK Set the minimum speed of the motor.

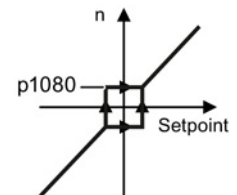

10. RAMP UP
P1120 OK Set the ramp-up time of the motor.

11. RAMP DWN
P1121 OK Set the ramp-down time of the motor.

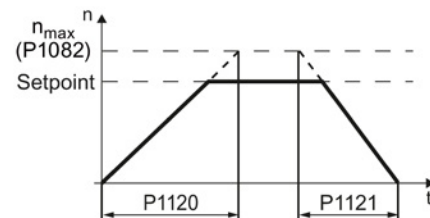

12. FINISH OK Complete the basic commissioning:

12.1. Switch over the display using an arrow key: nO → YES

12.2. Press the OK key.




You have entered all of the data that is necessary for the basic commissioning of your inverter.

Identifying the motor data and optimizing the closed-loop control


Following basic commissioning, the inverter generally has to measure other motor data and optimize its current and speed controllers.

To start motor data identification, you must switch on the motor. It does not matter whether you use the terminal strip, fieldbus, or operator panel to enter the ON command.

 WARNING
Risk of fatal injury as a result of machine movements when switching on the motor Switching on the motor for identification purposes may result in hazardous machine movements. Secure dangerous machine parts before starting motor data identification: <ul style="list-style-type: none">• Before switching on, check that no parts are loose on the machine or can be spun out.• Before switching on, ensure that nobody is working on the machine or located within its working area.• Secure the machine's work area against unintended access.• Lower hanging/suspended loads to the floor.

Preconditions

- In the basic commissioning, you have selected the motor identification (MOT ID). In this case, after the basic commissioning has been completed, the inverter issues the alarm A07991.

	You can recognize an active alarm from the corresponding symbol on the BOP-2.
---	---










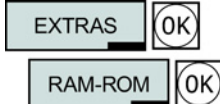
- The motor has cooled down to the ambient temperature.

If the motor is too hot, the motor data identification will provide incorrect values and the vector control can become unstable.

Procedure

1
2

To initiate motor data identification and optimization of the vector control, proceed as follows:

1.  ⇒  Press the HAND/AUTO key. The BOP-2 displays the HAND symbol.
 2.  Switch on the motor.
 3.  Wait until the inverter switches off the motor after completion of the motor data identification. The measurement takes several seconds.
 4.  Save the measurements so that they are protected against power failure.
-  If you have also selected a rotating measurement in addition to the motor data identification, then the inverter again issues the alarm A07991.
5.  Switch the motor on again in order to optimize the vector control.
 6.  Wait until the inverter switches off the motor after completion of the optimization. The optimization can take up to one minute.
 7.  Switch the inverter control from HAND to AUTO.
 8.  Save the measurements so that they are protected against power failure.



You have now completed motor data identification and the vector control has been optimized.

5.4.2 Basic commissioning with STARTER

STARTER and STARTER screen forms

STARTER is a PC-based tool to commission Siemens inverters. The graphic user interface of STARTER supports you when commissioning your inverter. Most inverter functions are combined in screen forms in STARTER.

The STARTER screen forms that are shown in this manual show general examples. The number of setting options available in screen forms depends on the particular inverter type.

Preconditions for basic commissioning

You require the following to commission the inverter using STARTER:

- An installed drive (motor and inverter)
- A computer with Windows XP or Windows 7
- The latest version of STARTER. STARTER download (<http://support.automation.siemens.com/WW/view/en/10804985/133100>)
- An appropriate USB cable. If you are not using the USB interface, but the PROFINET interface of the inverter, you can find information in section: Manuals for your inverter (Page 377).

Overview of basic commissioning

Commissioning using STARTER includes the following basic steps:

1. Create a STARTER project
2. Integrate an inverter into the project
3. Go online and start basic commissioning
4. Carry out basic commissioning
5. Identify motor data

Steps 1-5 are described below.

5.4.2.1 Generating a STARTER project

Procedure



In order to create a new project, proceed as follows:

1. In the STARTER menu, select "Project" → "New...".
2. Specify a name of your choice for the project.




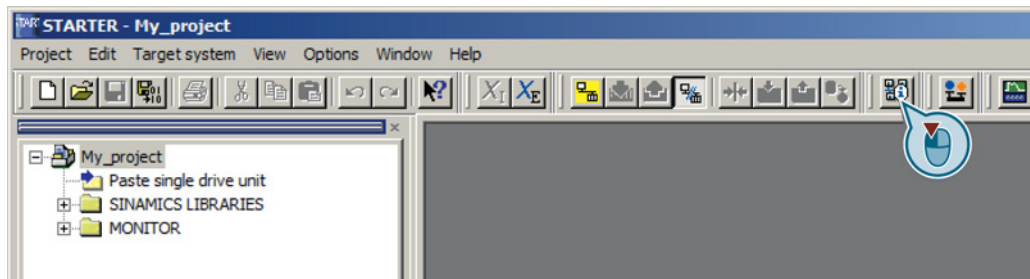
You have created a new STARTER project.

5.4.2.2 Transfer inverters connected via USB into the project


Procedure

Proceed as follows to transfer an inverter connected via USB into your project:

1. Switch on the inverter power supply.
2. First insert a USB cable into your PC and then into the inverter.
3. The PC operating system installs the USB driver when you are connecting the inverter and PC together for the first time.
 - Windows 7 installs the driver automatically.
 - For Windows XP you must acknowledge several system messages.
4. Start the STARTER commissioning software.
5. In STARTER, press the  ("Accessible nodes") button.



6. When the USB interface is appropriately set, then the "Accessible nodes" screen form shows the inverters that can be accessed.

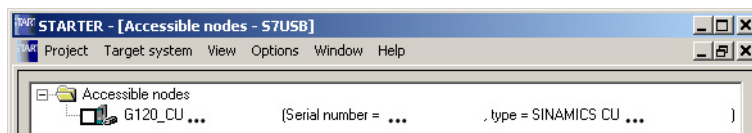

If you have not correctly set the USB interface, then the following "No additional nodes found" message is displayed. In this case, follow the description below.

7. Select the inverter .
8. Press the "Accept" button.




You have transferred an inverter accessible via the USB interface into your project.

Setting the USB interface

Procedure

Proceed as follows to set the USB interface in STARTER:

1. In this case set the "Access point" to "DEVICE (STARTER, Scout)" and the "PG/PC interface" to "S7USB".
2. Press the "Update" button.

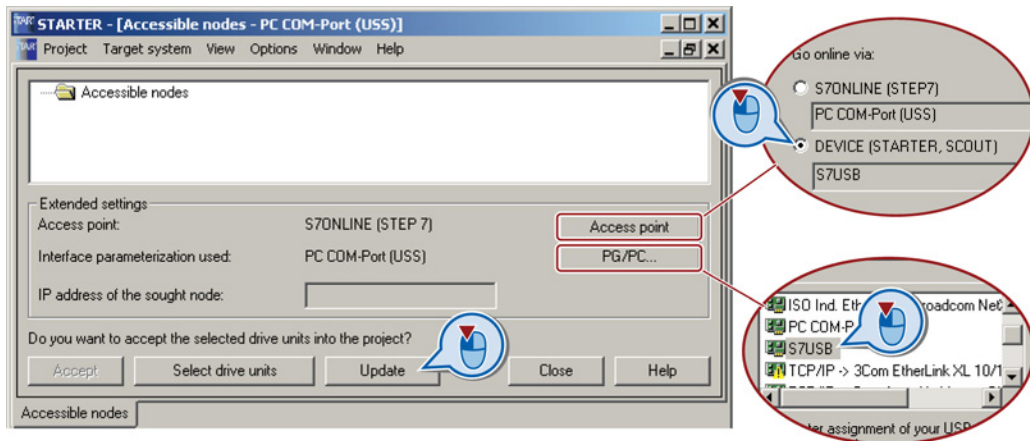

- You have set the USB interface.
- STARTER now shows the inverters connected via USB.



5.4.2.3 Go online and start wizard for basic commissioning

Procedure



Proceed as follows to start the basic commissioning online with the converter:

1. Select your project and go online:
2. Select the device or the devices with which you wish to go online.
3. Download the hardware configuration found online in your project (PG or PC). STARTER shows you which converter it is accessing online and which offline:
 - ② The converter is online
 - ③ The converter is offline
4. When you are online, double-click on "Control Unit".
5. Start the wizard for basic commissioning.

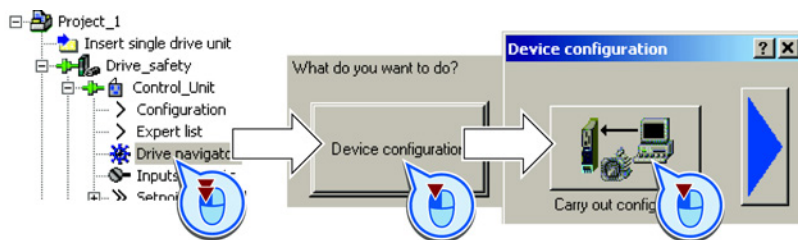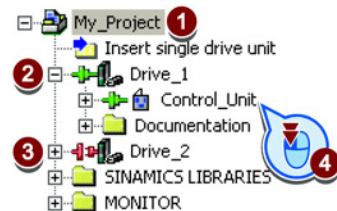

- You are online and have started basic commissioning.

5.4.2.4 Carry-out basic commissioning

 


Procedure

Proceed as follows to carry out basic commissioning:

1. Control structure Select the control mode.
See also Section: Motor control (Page 169)
2. Defaults of the setpoint Select the pre-assignment of the inverter interfaces.
The possible configurations can be found in sections: Factory setting of the terminals (Page 69) and Default settings of the terminals (Page 71).
3. Drive setting Select the application for the inverter:
Low overload for applications that only require a low dynamic performance, e.g.: pumps or fans.
High overload for applications requiring a high dynamic performance, e.g. conveyor systems.
4. Motor Select your motor.
5. Motor data Enter the motor data according to the rating plate of your motor.
If you have selected a motor based on its order number, the data has already been entered.
6. Drive functions If you have set the "Vector control" control mode, then we recommend setting "[1] Identify motor data at standstill and with motor rotating".


With this setting, the inverter optimizes its speed controller.



If one of the following cases is applicable, select the setting "[2] Identify motor data at standstill":


- You have selected "Vector control" as control mode; however, the motor cannot freely rotate, e.g. for mechanically limited traversing sections.
- You have set "V/f control" as control mode.

7. Important parameters Set the most important parameters to suit your application.
8. Calculation of the motor We recommend the setting "Calculate motor data only".

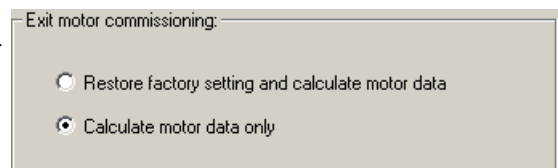

9. Set the check mark for "RAM to ROM (save data in the drive)" in order to save your data in the inverter so that it is not lost when the power fails.

Exit basic commissioning.

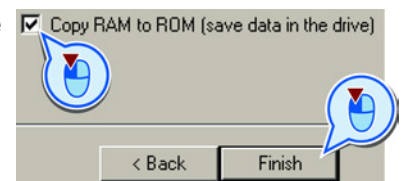

You have entered all of the data that is necessary for the basic commissioning of your inverter.

5.4.2.5 Identifying motor data

Preconditions

- In the basic commissioning, you have selected the motor identification (MOT ID). In this case, after the basic commissioning has been completed, the converter issues the alarm A07991.
- The motor has cooled down to the ambient temperature.

If the motor is too hot, the motor data identification will provide incorrect values and the vector control will become unstable.

⚠ DANGER

Risk of injury or material damage as a result of machine movements when switching on the motor

Switching on the motor for identification purposes may result in hazardous machine movements.

Secure dangerous machine parts before starting motor data identification:

- Before switching on, check that no parts are loose on the machine or can be spun out.
- Before switching on, ensure that nobody is working on the machine or located within its working area.
- Secure the machine's work area against unintended access.
- Lower hanging/suspended loads to the floor.

Procedure





To initiate motor data identification and optimization of the motor control, proceed as follows:

1. Open by double-clicking on the control panel in STARTER.
2. Assume master control for the converter.
3. Set the "Enable signals"
4. Switch on the motor.

The converter starts the motor data identification. This measurement can take several minutes. After the measurement, the converter switches off the motor.

5. Relinquish the master control after the motor data identification.
6. Click the Save (RAM to ROM) button.

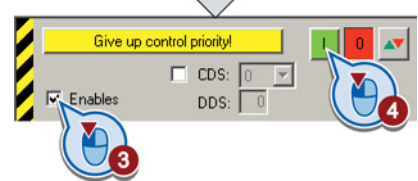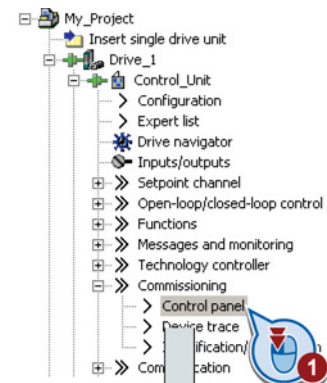

You have now completed motor data identification.

Self-optimization of the closed-loop control

If you have also selected a rotating measurement with self-optimization of the vector control in addition to the motor data identification, then you must switch on the motor again as described above and wait for the optimization run to be completed.


Adapting the terminal strip

6.1 Overview

This chapter describes how you adapt the function of individual digital and analog inputs and outputs of the inverter.

If you adapt the function of an input or output, you overwrite the settings made during the basic commissioning.

6.1 Overview

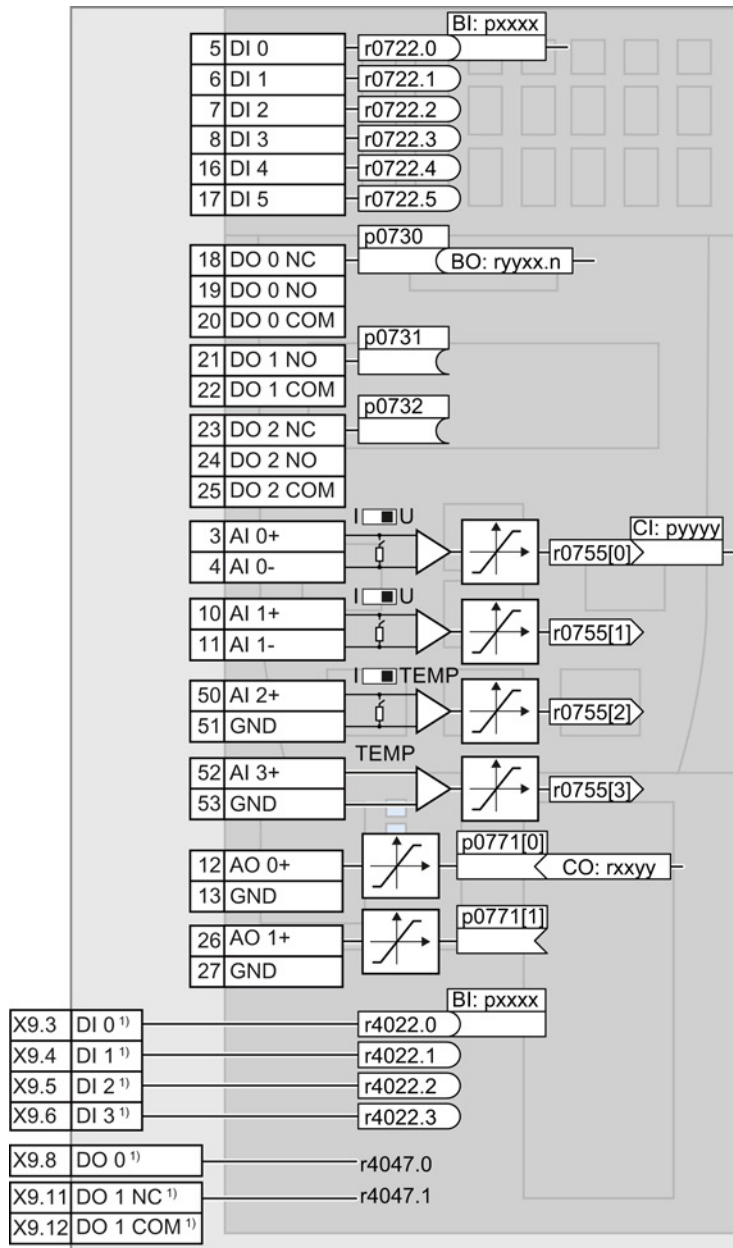


1) When using the PM330 Power Module, the inverter also has terminals on the Control Unit via 4 digital inputs DI and 2 digital outputs DO on the Power Module.

Figure 6-1 Internal interconnection of the inputs and outputs

6.2 Digital inputs

Changing the function of a digital input

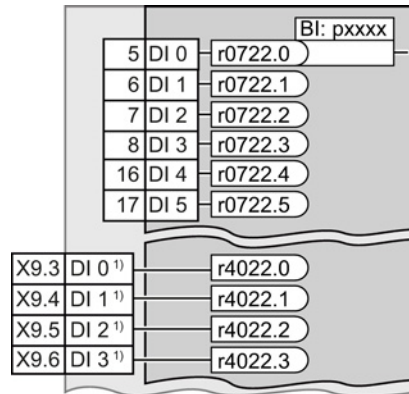

To change the function of a digital input, you must interconnect the status parameter of the digital input with a binector input of your choice.

See also Section: Interconnecting signals in the converter (Page 373).

Binector inputs are marked with "BI" in the parameter list of the List Manual.

¹⁾When using the PM330 Power Module, the inverter has 4 additional digital inputs.

Table 6- 1 Binector inputs (BI) of the inverter (selection)

BI	Significance	BI	Significance
p0810	Command data set selection CDS bit 0	p1036	Motorized potentiometer, setpoint, lower
p0840	ON/OFF1	p1055	Jog bit 0
p0844	OFF2	p1056	Jog bit 1
p0848	OFF3	p1113	Setpoint inversion
p0852	Enable operation	p1201	Flying restart enable signal source
p0855	Unconditionally release holding brake	p2103	1. Acknowledge faults
p0856	Enable speed controller	p2106	External fault 1
p0858	Unconditionally close holding brake	p2112	External alarm 1
p1020	Fixed speed setpoint selection bit 0	p2200	Technology controller enable
p1021	Fixed speed setpoint selection bit 1	p3330	Two/three-wire control, control command 1
p1022	Fixed speed setpoint selection bit 2	p3331	Two/three-wire control, control command 2
p1023	Fixed speed setpoint selection bit 3	p3332	Two/three-wire control, control command 3
p1035	Motorized potentiometer, setpoint, raise		

A complete list of the binector outputs is provided in the List Manual.

Changing the function of a digital input - Example




To acknowledge fault messages of the inverter using digital input DI 1, you must interconnect DI1 with the command to acknowledge faults (p2103): Set p2103 = 722.1.

Advanced settings

You can debounce the digital input signal using parameter p0724.

For more information, please see the parameter list and the function block diagrams 2220 f of the List Manual.


Analog inputs as digital inputs

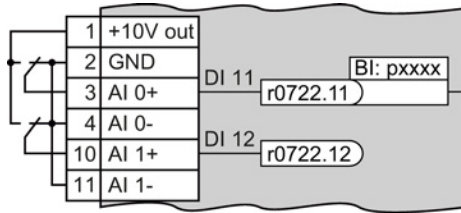

To use an analog input as additional digital input, you must connect the analog input as shown, and interconnect one of the status parameters r0722.11 or r0722.12 with a binector input of your choice.

6.3 Digital outputs

Changing the function of a digital output

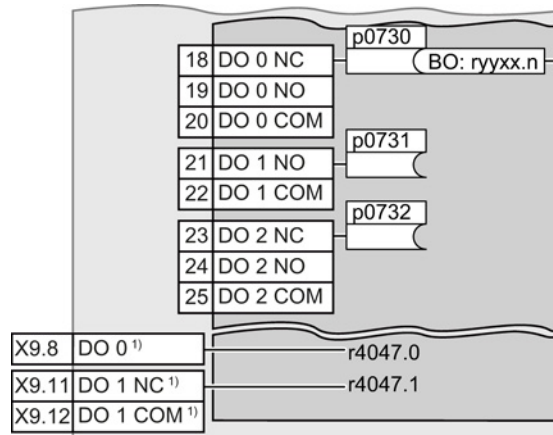

To change the function of a digital output, you must interconnect the digital output with a binector output of your choice.

See also Section: Interconnecting signals in the converter (Page 373).

Binector outputs are marked with "BO" in the parameter list of the List Manual.

¹⁾ When using the PM330 Power Module, the inverter has 2 additional digital outputs. The function of the two additional digital outputs is fixed and cannot be modified:


- DO 0 (X9.8): Inverter DC link is charged
- DO 1 (X9.11, X9.12): Close main contactor

Table 6- 2 Binector outputs (BO) of the inverter (selection)

0	Deactivating digital output	r0052.9	Process data control
r0052.0	Drive ready	r0052.10	f_actual >= p1082 (f_max)
r0052.1	Drive ready for operation	r0052.11	Alarm: Motor current/torque limit
r0052.2	Drive running	r0052.12	Brake active
r0052.3	Drive fault active	r0052.13	Motor overload
r0052.4	OFF2 active	r0052.14	Motor CW rotation
r0052.5	OFF3 active	r0052.15	Inverter overload
r0052.6	Closing lockout active	r0053.0	DC braking active
r0052.7	Drive alarm active	r0053.2	f_actual > p1080 (f_min)
r0052.8	Setpoint/actual value discrepancy	r0053.6	f_actual ≥ setpoint (f_setpoint)

The complete list of binector outputs is provided in the List Manual.

 Changing the function of a digital output - Example



To output inverter fault messages via digital output DO 1, you must interconnect DO1 with the fault messages: Set p0731 = 52.3.


Advanced settings

You can invert the signal of the digital output using parameter p0748.

For more information, please see the parameter list and the function block diagrams 2230 f of the List Manual.

6.4 Analog inputs

Overview

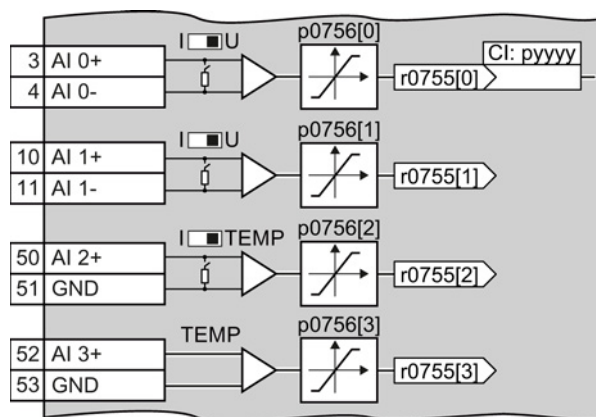

Changing the function of an analog input:

1. Define the analog input type using parameter p0756[x] and the switch on the inverter.
2. Define the function of the analog input by interconnecting parameter p0755[x] with a connector input CI of your choice.

See also Section: Interconnecting signals in the converter (Page 373).


Defining the analog input type

The variable speed drive offers a series of default settings, which you can select using parameter p0756:


AI 0	Unipolar voltage input	0 V ... +10 V	p0756[0] =	0
	Unipolar voltage input monitored:	+2 V ... +10 V		1
	Unipolar current input	0 mA ... +20 mA		2
	Unipolar current input monitored	+4 mA ... +20 mA		3
	Bipolar voltage input (factory setting)	-10 V ... +10 V		4
AI 1	Unipolar voltage input	0 V ... +10 V	p0756[1] =	0
	Unipolar voltage input monitored:	+2 V ... +10 V		1
	Unipolar current input	0 mA ... +20 mA		2
	Unipolar current input monitored	+4 mA ... +20 mA		3
	Bipolar voltage input (factory setting)	-10 V ... +10 V		4
AI 2	Unipolar current input (factory setting)	0 mA ... +20 mA	p0756[2] =	2
	Unipolar current input monitored	+4 mA ... +20 mA		3
	Temperature sensor LG-Ni1000			6
	Temperature sensor Pt1000			7
	No sensor connected			8
AI 3	Temperature sensor LG-Ni1000		p0756[3] =	6
	Temperature sensor Pt1000			7
	No sensor connected (factory setting)			8

In addition, you must also set the switch associated with the analog input. You can find the switch on the Control Unit behind the front doors.

- The DIP switch for AI0 and AI1 (current / voltage) on the Control Unit behind the lower front door.

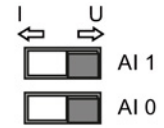

 - The DIP switch for AI2 (temperature / current) on the Control Unit behind the upper front door.



Characteristics

If you change the analog input type using p0756, then the inverter automatically selects the appropriate scaling of the analog input. The linear scaling characteristic is defined using two points (p0757, p0758) and (p0759, p0760). Parameters p0757 ... p0760 are assigned to an analog input via their index, e.g. parameters p0757[0] ... p0760[0] belong to analog input 0.

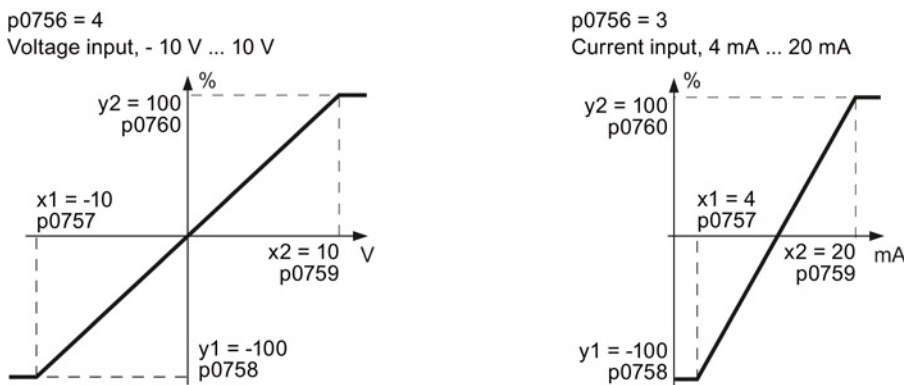


Figure 6-2 Examples for scaling characteristics

Parameter	Description
p0757	x-coordinate of 1st characteristic point [V or mA]
p0758	y coordinate of the 1st characteristic point [% of p200x] p200x are the parameters of the reference variables, e.g. p2000 is the reference speed
p0759	x-coordinate of 2nd characteristic point [V or mA]
p0760	y-coordinate of 2nd characteristic point [% of p200x]
p0761	Wire breakage monitoring response threshold

Adapting the characteristic

You must define your own characteristic if none of the default types match your particular application.

Example

The inverter should convert a 6 mA ... 12 mA signal into the value range -100 % ... 100 % via analog input 0. The wire break monitoring of the inverter should respond when 6 mA is fallen below.


Precondition

You have set analog input 0 as a current input ("I") via the DIP switch on the Control Unit.



Procedure

Current input, 6 mA ... 12 mA

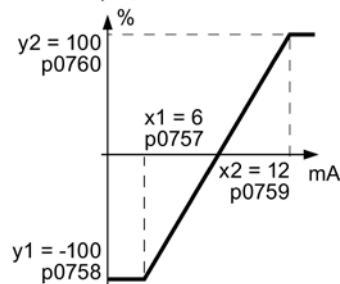

Set the following parameters to set the analog input as current input with monitoring:

1. Set p7056[0] = 3
This defines analog input 0 as a current input with wire-break monitoring.
2. Set p0757[0] = 6.0 (x1)
3. Set p0758[0] = -100.0 (y1)
4. Set p0759[0] = 12.0 (x2)
5. Set p0760[0] = 100.0 (y2)

Defining the function of an analog input


You define the analog input function by interconnecting a connector input of your choice with parameter p0755. Parameter p0755 is assigned to the particular analog input based on its index, e.g. parameter p0755[0] is assigned to analog input 0.

Table 6- 3 Connector inputs (CI) of the inverter (selection)

CI	Significance	CI	Significance
p1070	Main setpoint	p1522	Torque limit, upper
p1075	Supplementary setpoint	p2253	Technology controller setpoint 1
p1503	Torque setpoint	p2264	Technology controller actual value
p1511	Supplementary torque 1		

A complete list of the connector inputs is provided in the List Manual.

 Defining the function of an analog input - example



To enter a supplementary setpoint via analog input AI 0, you must interconnect AI 0 with the signal source for the supplementary setpoint:

Set p1075 = 755[0].


Advanced settings

Signal smoothing

When required, you can smooth the signal, which you read-in via an analog input, using parameter p0753.

For more information, see the parameter list and in the function block diagrams 9566 ff of the List Manual.

Skip frequency band

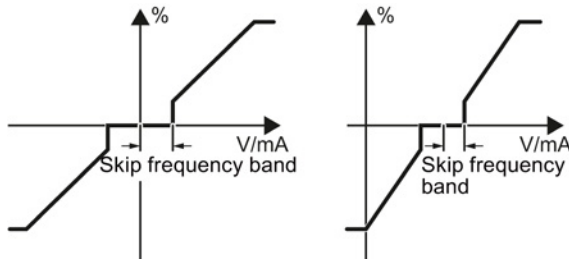


Interferences in the cable can corrupt small signals of a few millivolts. To be able to enter a setpoint of exactly 0 V via an analog input, you must specify a skip frequency band.

Skip frequency band of the analog input

p0764[0]	Skip frequency band of the analog input AI 0 (factory setting: 0)
p0764[1]	Skip frequency band of the analog input AI 1 (factory setting: 0)

6.5 Analog outputs

Overview

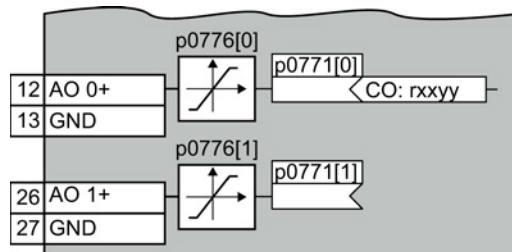

Changing the function of an analog output:

1. Define the analog output type using parameter p0776.
2. Interconnect parameter p0771 with a connector output of your choice.

See also Section: Interconnecting signals in the converter (Page 373).

Connector outputs are marked with "CO" in the parameter list of the List Manual.

Defining the analog output type

The inverter offers a series of default settings, which you can select using parameter p0776:

AO 0	Current output (factory setting)	0 mA ... +20 mA	p0776[0] =	0
	Voltage output	0 V ... +10 V		1
	Current output	+4 mA ... +20 mA		2
AO 1	Current output (factory setting)	0 mA ... +20 mA	p0776[1] =	0
	Voltage output	0 V ... +10 V		1
	Current output	+4 mA ... +20 mA		2

Characteristics

If you change the analog output type, then the inverter automatically selects the appropriate scaling of the analog output. The linear scaling characteristic is defined using two points (p0777, p0778) and (p0779, p0780).

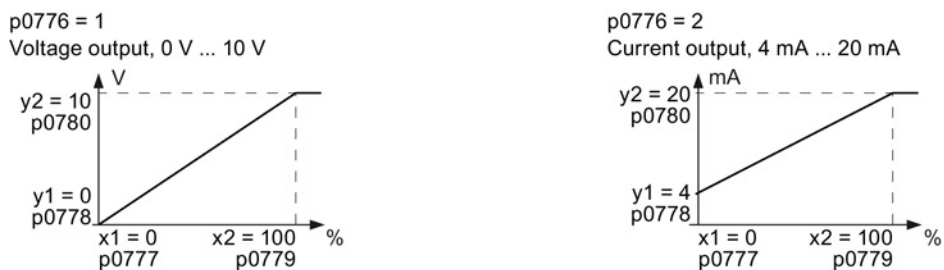


Figure 6-3 Examples for scaling characteristics

Parameters p0777 ... p0780 are assigned to an analog output via their index, e.g. parameters p0777[0] ... p0770[0] belong to analog output 0.

Table 6- 4 Parameters for the scaling characteristic

Parameter	Description
p0777	X coordinate of the 1st characteristic point [% of p200x] p200x are the parameters of the reference variables, e.g. p2000 is the reference speed.
p0778	Y coordinate of the 1st characteristic point [V or mA]
p0779	X coordinate of the 2nd characteristic point [% of p200x]
p0780	Y coordinate of the 2nd characteristic point [V or mA]


Setting the characteristic

You must define your own characteristic if none of the default types match your particular application.

Example:

The inverter should convert a signal in the value range -100% ... 100% into a 6 mA ... 12 mA output signal via analog output 0.

Procedure

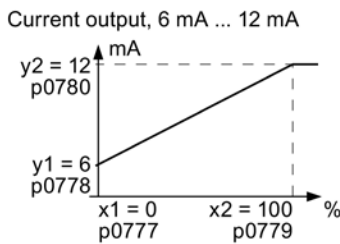

Set the following parameters to set the characteristic to match the example:

1. Set p0776[0] = 2
This defines analog output 0 as a current output.
2. Set p0777[0] = 0.0 (x1)
3. Set p0778[0] = 6.0 (y1)
4. Set p0779[0] = 100.0 (x2)
5. Set p0780[0] = 12.0 (y2)

Defining the function of an analog output

You define the analog output function by interconnecting parameter p0771 with a connector output of your choice. Parameter p0771 is assigned to the particular analog input via its index, e.g. parameter p0771[0] is assigned to analog output 0.


Table 6- 5 Connector outputs (CO) of the inverter (selection)

CO	Significance	CO	Significance
r0021	Actual frequency	r0026	Actual DC-link voltage
r0024	Output actual frequency	r0027	Output current
r0025	Output actual frequency		

A complete list of the connector outputs is provided in the List Manual.

For more information, please see the parameter list and the function block diagrams 2261 of the List Manual.

 Defining the function of an analog output - example



To output the inverter output current via analog output 0, you must interconnect AO 0 with the signal for the output current:

Set p0771 = 27.

Advanced settings

You can manipulate the signal that you output via an analog output, as follows:

- Absolute-value generation of the signal (p0775)
- Signal inversion (p0782)

Additional information is provided in the parameter list of the List Manual.

Configuring the fieldbus

Fieldbus interfaces of the Control Units

The Control Units are available in different versions for communication with higher-level controls with the fieldbus interfaces listed as follows:


Fieldbus	Profiles		S7 communication ¹⁾	Control Unit
	PROFIdrive	PROFIenergy ¹⁾		
PROFIBUS DP (Page 122)	✓	---	✓	CU230P-2 DP
PROFINET IO (Page 118)	✓	✓	✓	CU230P-2 PN
EtherNet/IP ¹⁾	---	---	---	CU230P-2 HVAC
USS ¹⁾	---	---	---	
Modbus RTU ¹⁾	---	---	---	
BACnet MS/TP ¹⁾	---	---	---	
P1 ¹⁾	---	---	---	
CANopen ¹⁾	---	---	---	CU230P-2 CAN

¹⁾ Information on the these fieldbuses, profiles and communication types can be found in the Fieldbuses Function Manual, also see Section: Manuals for your inverter (Page 377).


7.1 Communication via PROFINET

You can either communicate via Ethernet using the inverter, or integrate the inverter in a PROFINET network.

- The inverter as an Ethernet station (Page 377)

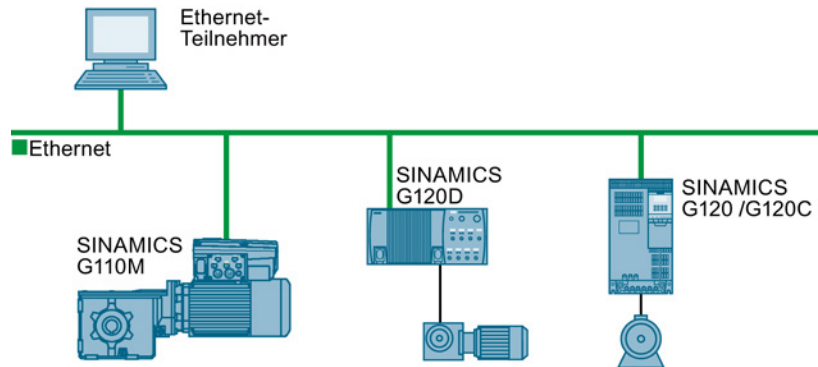

- PROFINET IO operation (Page 119)

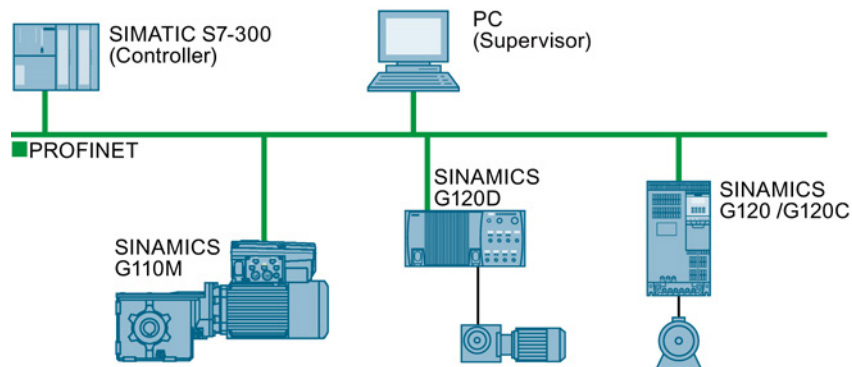

In PROFINET IO operation, the inverter supports the following functions:

- RT
- IRT
The inverter transmits the clock synchronism but does not support clock synchronism.
- MRP
Media redundancy, impulsed with 200 ms
Requirement: Ring topology
- MRPD
Media redundancy, impulse-free
Requirement: IRT and the ring topology created in the control
- Diagnostic alarm
in accordance with the fault classes specified in the PROFIdrive profile. See Activating diagnostics via the control (Page 121).
- Device replacement without removable medium
Requirement: Topology created in the control
- Shared device
only in the case of control units with fail-safe functions (see Safety function manual)

Further information on PROFINET can be found on the Internet using the following links:

- General information about PROFINET can be found at Industrial Communication (<http://www.automation.siemens.com/mcms/automation/en/industrial-communications/profinet/Pages/Default.aspx>).
- The configuration of the functions is described in the PROFINET system description (<http://support.automation.siemens.com/WW/view/en/19292127>) manual.

This manual describes the control of the inverter using primary control. How to access the inverter as an Ethernet station is described in the Fieldbus function manual (Page 377) in the section "The inverter as an Ethernet station".

7.1.1 What do you need for communication via PROFINET?

Check the communication settings using the following table. If you answer "Yes" to the questions, you have correctly set the communication settings and can control the converter via the fieldbus.

Questions	Answer/description	Example
Is the inverter correctly connected to the bus network?	See: Integrating inverters into PROFINET (Page 120)	
Do the IP address and device name in the converter and controller match?	See Configuring communication to the control (Page 120)	See manuals for your inverter, fieldbus communication manual (Page 377)
Is the same telegram set in the converter as in the higher-level controller?	Set the telegram in the converter, see: Auto-Hotspot	
Are the signals that the converter and the controller exchange via PROFINET correctly interconnected?	PROFIdrive-compliant interconnection in the converter, see: PROFIdrive profile for PROFIBUS and PROFINET (Page 126)	

7.1.2 Integrating inverters into PROFINET

Procedure



To connect the inverter to a control via PROFINET, proceed as follows:

1. Integrate the inverter in the bus system (e.g. ring topology) of the control using PROFINET cables and the two PROFINET sockets X150-P1 and X150-P2.

The position of the sockets and the pin assignment can be found in Section Overview of the interfaces (Page 67).

The maximum permitted cable length from the previous station and to the subsequent one is 100 m.

2. Externally supply the inverter with 24 V DC through terminals 31 and 32.

The external 24 V supply is only required if communications with the control should also run when the mains voltage is switched off.



You have connected the inverter to the control using PROFINET.

7.1.3 Configuring communication to the control

Configuring the communication using SIMATIC S7 control

- If the inverter is included in the hardware library of HW-Config, you can configure the inverter.
- You have the following options, if the inverter is not included in the hardware library:
 - Install the more up to date STARTER version
 - Install the GSDML of the inverter via "Install options/GSDML file" in HW Config.

Additional information on this topic is provided in the "Fieldbuses" Function Manual, also see Manuals for your inverter (Page 377).

Configuring the communication using a non-Siemens control

1. Import the device file (GSDML) of the inverter into the configuring tool of your control system.
2. Configure the communication.

Installing GSDML

Procedure



To install the GSDML of the inverter into the configuring tool of your control system, proceed as follows:

1. Load the GSDML to your PC.
 - On the Internet: GSDML
(<http://support.automation.siemens.com/WW/view/en/22339653/133100>).
 - From your inverter:
 - Insert a memory card into the converter.
 - Set p0804 = 12.
 - The inverter writes the GSDML as zipped file (*.zip) into directory /SIEMENS/SINAMICS/DATA/CFG on the memory card.
2. Unzip the GSDML file to a folder on your computer.
3. Import the GSDML into the configuring tool of your control system.



You have now installed the GSDML.

PROFIdrive telegrams

The following telegrams are available:

p0922 =

- 1: Standard telegram 1, PZD-2/2 (factory setting)
- 20: Standard telegram 20, PZD-2/6
- 350: SIEMENS telegram 350, PZD-4/4
- 352: SIEMENS telegram 352, PZD-6/6
- 353: SIEMENS telegram 353, PZD-2/2, PKW-4/4
- 354: SIEMENS telegram 354, PZD-6/6, PKW-4/4
- 999: Extend telegrams and change signal interconnection (Page 133)

A more detailed depiction of the individual telegrams can be found in Section Cyclic communication (Page 126).

Selecting a telegram

Procedure



Proceed as follows to set a specific telegram in the inverter:

Using STARTER or an operator panel, set parameter p0922 to the appropriate value.




You have set a specific telegram in the inverter.

7.1.4 Activating diagnostics via the control

The converter provides the functionality to transmit fault and alarm messages (diagnostic messages) to the higher-level control according to the PROFIdrive error classes.

You must select the functionality in the higher-level control (see Manuals for your inverter (Page 377)) and activate it by booting up.

7.2 Communication via PROFIBUS

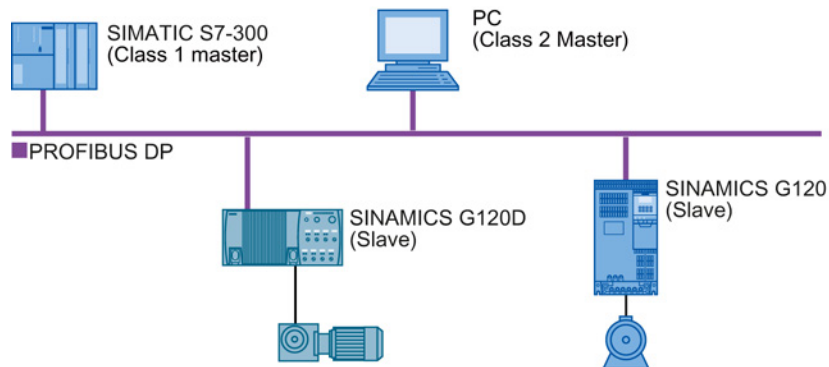

The PROFIBUS DP interface has the following functions:

- Cyclic communication
- Acyclic communication
- Diagnostic alarms

General information on PROFIBUS DP can be found on the Internet at the following links:

- Information about PROFIBUS DP (http://www.automation.siemens.com/net/html_76/support/printkatalog.htm).
- PROFIBUS user organization (<http://www.profibus.com/downloads/installation-guide/>).

Communication with the controller even when the supply voltage on the Power Module is switched off

You must supply the Control Unit with 24 V DC at terminals 31 and 32 if you wish to maintain communication with the control system when the line voltage is switched off.

In the case of brief interruptions of the 24 V power supply, the inverter may signal a fault without communications with the control system being interrupted.

7.2.1 What do you need for communication via PROFIBUS?

Check the communication settings using the following table. If you answer "Yes" to the questions, you have correctly set the communication settings and can control the converter via the fieldbus.

Questions	Description	Examples
Is the inverter correctly connected to the PROFIBUS?	See Section: Integrating inverters into PROFIBUS (Page 123).	---
Have you configured the communication between the inverter and the higher-level controller?	See Section: Configuring the communication using SIMATIC S7 control (Page 124)	See Manuals for your inverter (Page 377)
Do the addresses in the inverter and the higher-level controller match?	See Section: Setting the address (Page 124).	
Is the same telegram set in the higher-level controller and in the inverter?	Adapt the telegram in the inverter. See Section: Select telegram (Page 125).	
Are the signals that the inverter and the controller exchange via PROFIBUS correctly interconnected?	Adapt the interconnection of the signals in the controller to the inverter. For the PROFIdrive-compliant interconnection in the inverter, see also Section: PROFIdrive profile for PROFIBUS and PROFINET (Page 126).	

7.2.2 Integrating inverters into PROFIBUS

Procedure



To connect the inverter to a control via PROFIBUS DP, proceed as follows:

1. Integrate the inverter into the bus system (e.g. line topology) of the control using PROFIBUS cables via socket X126.

The position of the sockets and the pin assignment can be found in Section Overview of the interfaces (Page 67).

The maximum permitted cable length to the previous station and the subsequent one is 100 m at a baud rate of 1 Mbit/s.

2. Externally supply the inverter with 24 V DC through terminals 31 and 32.

The external 24 V supply is only required if communications with the control should also run when the line voltage is switched off.



You have now connected the inverter to the control using PROFIBUS DP.

Communication with the control, even when the line voltage is switched off



If, in your plant or system, communication with the control system should continue to function even when the line voltage is switched off, then you must externally supply the inverter/Control Unit with 24 V DC. To do this, use terminals 31 and 32 – or connector X01. You can find additional details in the operating instructions for the inverter or the Control Unit.

7.2.3 Configuring the communication using SIMATIC S7 control

- If the inverter is listed in the hardware library of HW-Conifg, you can configure the communication in the SIMATIC control.
- If the inverter is not listed in the hardware library, you can either install the newest STARTER version or install the GSD of the inverter through "Extras/GSD-Install file" in HW-Config. See also GSD (<http://support.automation.siemens.com/WW/view/en/22339653/133100>).

When you have installed the GSD, configure the communication in the SIMATIC control.

7.2.4 Setting the address

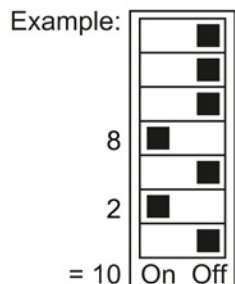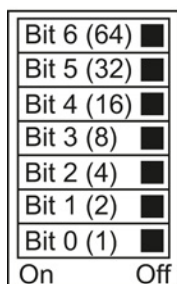

You set the PROFIBUS address of the inverter using the address switch on the Control Unit, in parameter p0918 or in STARTER. In parameter p0918 (factory setting: 126) or in STARTER, you can only set the address, if all address switches are set to "OFF" (0) or "ON" (1). If you have specified a valid address with the address switches, this address will always be the one that takes effect and parameter p0918 cannot be changed.

Valid address range: 1 ... 125

The positions of the address switches are described in Section: Overview of the interfaces (Page 67).

Procedure



To change the bus address, proceed as follows:

1. Set the address using one of the subsequently listed options:
 - using the address switch
 - from an operator panel using parameter p0918
 - in STARTER using screen form "Control Unit/Communication/PROFIBUS" – or using the expert list in parameter p0918

After you have changed the address in STARTER, carry out RAM to ROM ().

2. Switch on the inverter power supply and, if available, the 24 V power supply for the Control Unit.
3. Switch on the voltages again after all LEDs at the inverter have gone dark.



You have now changed the bus address.

7.2.5 Select telegram

PROFIdrive telegrams

The following telegrams are available:

- p0922 =
- 1: Standard telegram 1, PZD-2/2 (factory setting)
 - 20: Standard telegram 20, PZD-2/6
 - 350: SIEMENS telegram 350, PZD-4/4
 - 352: SIEMENS telegram 352, PZD-6/6
 - 353: SIEMENS telegram 353, PZD-2/2, PKW-4/4
 - 354: SIEMENS telegram 354, PZD-6/6, PKW-4/4
 - 999: Extend telegrams and change signal interconnection (Page 133)

A more detailed depiction of the individual telegrams can be found in Section Cyclic communication (Page 126).

Selecting a telegram

Procedure



Proceed as follows to set a specific telegram in the inverter:

Using STARTER or an operator panel, set parameter p0922 to the appropriate value.



You have set a specific telegram in the inverter.

7.3 PROFdrive profile for PROFIBUS and PROFINET

7.3.1 Cyclic communication

The send and receive telegrams of the inverter for the cyclic communication are structured as follows:

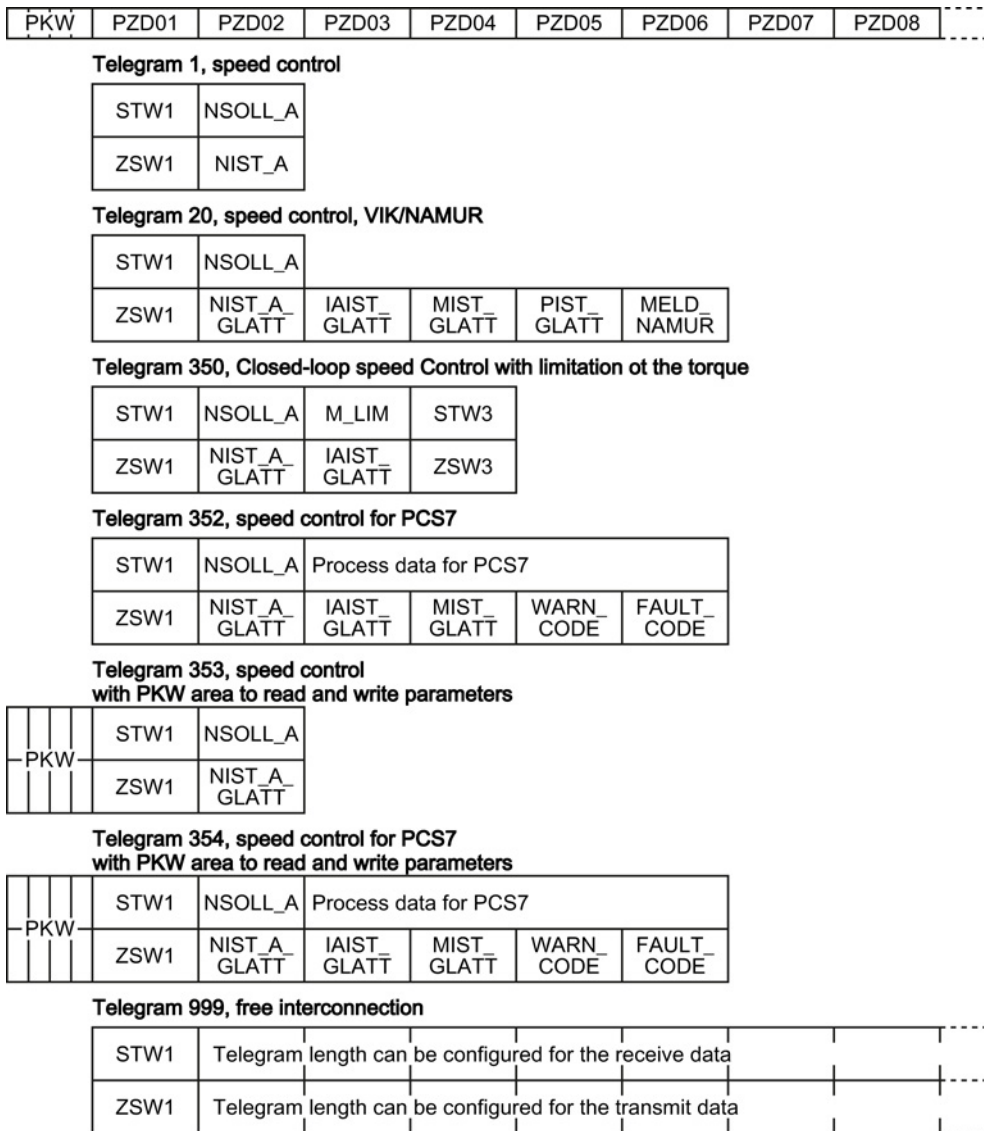


Figure 7-1 Telegrams for cyclic communication

Table 7- 1 Explanation of the abbreviations

Abbreviation	Explanation	Abbreviation	Explanation
STW	Control word	MIST_GLATT	Actual smoothed torque
ZSW	Status word	PIST_GLATT	Actual smoothed active power
NSOLL_A	Speed setpoint	M_LIM	Torque limit value
NIST_A	Speed actual value	FAULT_CODE	Fault number
NIST_A_GLATT	Smoothed actual speed value	WARN_CODE	Alarm number
IAIST_GLATT	Smoothed current actual value	MELD_NAMUR	Control word according to the VIK-NAMUR definition

Interconnection of the process data

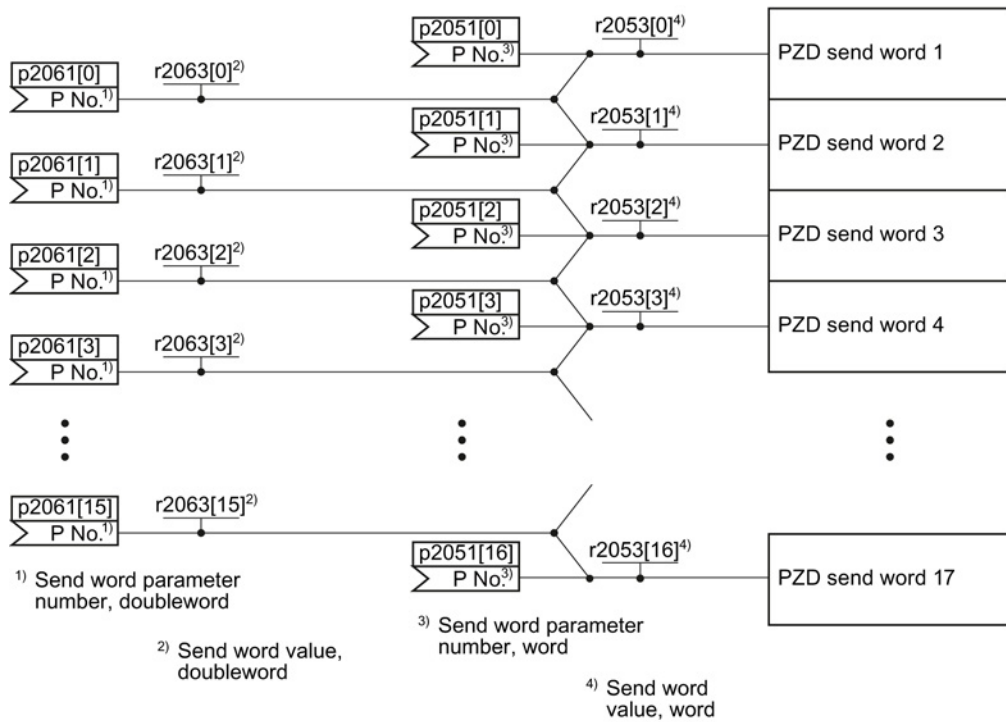


Figure 7-2 Interconnection of the send words

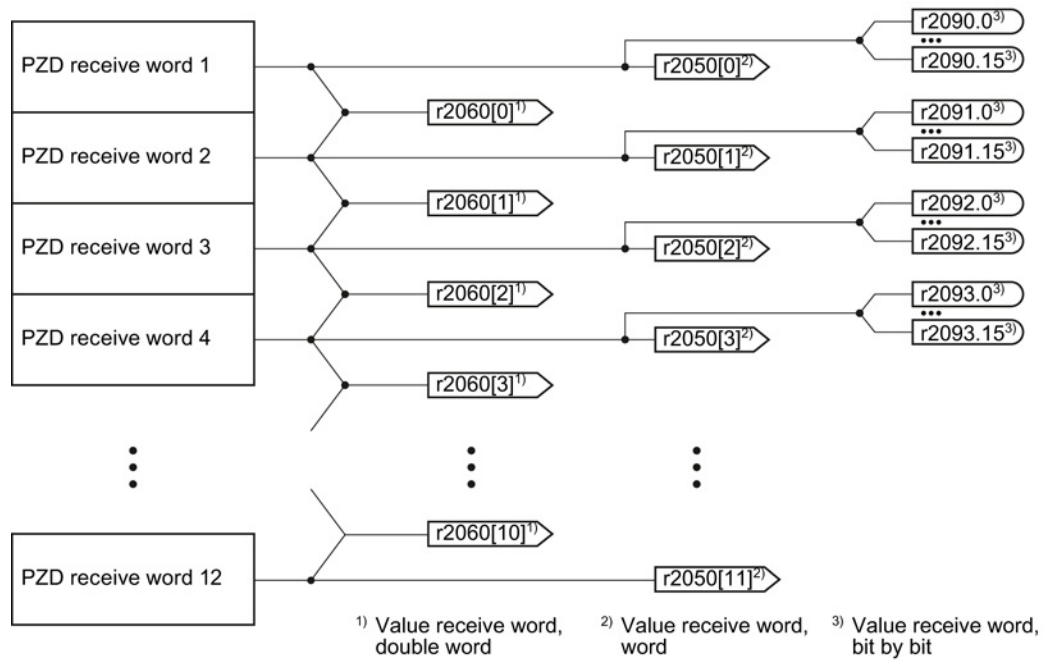


Figure 7-3 Interconnection of the receive words

The telegrams use - with the exception of telegram 999 (free interconnection) - the word-by-word transfer of send and receive data (r2050/p2051).

If you require an individual telegram for your application (e.g. for transferring double words), you can adjust one of the predefined telegrams via parameters p0922 and p2079. For details, please refer to the List Manual, function diagrams 2420 and 2472.

7.3.1.1 Control and status word 1

Control word 1 (STW1)

The control word 1 is pre-assigned as follows.

- Telegram 20 (VIK/NAMUR):
 - Bit 0 ... 11 corresponds to PROFIdrive profile,
 - Bit 12... 15 manufacturer-specific
- Other telegrams:
 - Bit 0 ... 10 corresponds to PROFIdrive profile,
 - Bit 11... 15 manufacturer-specific

Bit	Significance		Explanation	Signal interconnection in the inverter
	Telegram 20	All other telegrams		
0	0 = OFF1		The motor brakes with the ramp-down time p1121 of the ramp-function generator. The inverter switches off the motor at standstill.	p0840[0] = r2090.0
	0 → 1 = ON		The inverter goes into the "ready" state. If, in addition bit 3 = 1, then the inverter switches on the motor.	
1	0 = OFF2		Switch off the motor immediately, the motor then coasts down to a standstill.	p0844[0] = r2090.1
	1 = No OFF2		The motor can be switched on (ON command).	
2	0 = Quick stop (OFF3)		Quick stop: The motor brakes with the OFF3 ramp-down time p1135 down to standstill.	p0848[0] = r2090.2
	1 = No quick stop (OFF3)		The motor can be switched on (ON command).	
3	0 = Inhibit operation		Immediately switch-off motor (cancel pulses).	p0852[0] = r2090.3
	1 = Enable operation		Switch-on motor (pulses can be enabled).	
4	0 = Disable RFG		The inverter immediately sets its ramp-function generator output to 0.	p1140[0] = r2090.4
	1 = Do not disable RFG		The ramp-function generator can be enabled.	
5	0 = Stop RFG		The output of the ramp-function generator stops at the actual value.	p1141[0] = r2090.5
	1 = Enable RFG		The output of the ramp-function generator follows the setpoint.	
6	0 = Inhibit setpoint		The inverter brakes the motor with the ramp-down time p1121 of the ramp-function generator.	p1142[0] = r2090.6
	1 = Enable setpoint		Motor accelerates with the ramp-up time p1120 to the setpoint.	
7	0 → 1 = Acknowledge faults		Acknowledge fault. If the ON command is still active, the inverter switches to "closing lockout" state.	p2103[0] = r2090.7
8, 9	Reserved			
10	0 = No control via PLC		Inverter ignores the process data from the fieldbus.	p0854[0] = r2090.10
	1 = Control via PLC		Control via fieldbus, inverter accepts the process data from the fieldbus.	
11	0 = Direction reversal		Invert setpoint in the inverter.	p1113[0] = r2090.11
12	Not used			
13	--- ¹⁾	1 = MOP up	Increase the setpoint saved in the motorized potentiometer.	p1035[0] = r2090.13
14	--- ¹⁾	1 = MOP down	Reduce the setpoint saved in the motorized potentiometer.	p1036[0] = r2090.14
15	CDS bit 0	Reserved	Changes over between settings for different operation interfaces (command data sets).	p0810 = r2090.15

¹⁾ If you change over from another telegram to telegram 20, then the assignment of the previous telegram is kept.

Status word 1 (ZSW1)

The status word 1 is pre-assigned as follows.

- Bit 0 ... 10 corresponds to PROFIdrive profile
- Bit 11... 15 manufacturer-specific

Bit	Significance		Comments	Signal interconnection in the inverter
	Telegram 20	All other telegrams		
0	1 = Ready to start		Power supply switched on; electronics initialized; pulses locked.	p2080[0] = r0899.0
1	1 = Ready		Motor is switched on (ON/OFF1 = 1), no fault is active. With the command "Enable operation" (STW1.3), the inverter switches on the motor.	p2080[1] = r0899.1
2	1 = Operation enabled		Motor follows setpoint. See control word 1, bit 3.	p2080[2] = r0899.2
3	1 = Fault active		The inverter has a fault. Acknowledge fault using STW1.7.	p2080[3] = r2139.3
4	1 = OFF2 inactive		Coast down to standstill is not active.	p2080[4] = r0899.4
5	1 = OFF3 inactive		Quick stop is not active.	p2080[5] = r0899.5
6	1 = Closing lockout active		It is only possible to switch on the motor after an OFF1 followed by ON.	p2080[6] = r0899.6
7	1 = Alarm active		Motor remains switched on; no acknowledgement is necessary.	p2080[7] = r2139.7
8	1 = Speed deviation within the tolerance range		Setpoint / actual value deviation within the tolerance range.	p2080[8] = r2197.7
9	1 = Master control requested		The automation system is requested to accept the inverter control.	p2080[9] = r0899.9
10	1 = Comparison speed reached or exceeded		Speed is greater than or equal to the corresponding maximum speed.	p2080[10] = r2199.1
11	1 = current or torque limit reached	1 = torque limit reached	Comparison value for current or torque has been reached or exceeded.	p2080[11] = r0056.13 / r1407.7
12	--- ¹⁾	1 = Holding brake open	Signal to open and close a motor holding brake.	p2080[12] = r0899.12
13	0 = Alarm, motor overtemperature		--	p2080[13] = r2135.14
14	1 = Motor rotates clockwise		Internal inverter actual value > 0	p2080[14] = r2197.3
	0 = Motor rotates counterclockwise		Internal inverter actual value < 0	
15	1 = CDS display	0 = Alarm, inverter thermal overload		p2080[15] = r0836.0 / r2135.15

¹⁾ If you change over from another telegram to telegram 20, then the assignment of the previous telegram is kept.

7.3.1.2 Control and status word 3

Control word 3 (STW3)

The control word 3 is pre-assigned as follows.

- Bit 0... 15 manufacturer-specific

Bit	Value	Significance	Explanation	Signal interconnection in the inverter ¹⁾
		Telegram 350		
0	1	Fixed setpoint, bit 0	Selects up to 16 different fixed setpoints.	p1020[0] = r2093.0
1	1	Fixed setpoint, bit 1		p1021[0] = r2093.1
2	1	Fixed setpoint, bit 2		p1022[0] = r2093.2
3	1	Fixed setpoint, bit 3		p1023[0] = r2093.3
4	1	DDS selection, bit 0	Changes over between settings for different motors (drive data sets).	p0820 = r2093.4
5	1	DDS selection, bit 1		p0821 = r2093.5
6	–	Not used		
7	–	Not used		
8	1	Technology controller enable	--	p2200[0] = r2093.8
9	1	DC braking enable	--	p1230[0] = r2093.9
10	–	Not used		
11	1	1 = Enable droop	Enable or inhibit speed controller droop.	p1492[0] = r2093.11
12	1	Torque control active	Changes over the control mode for vector control.	p1501[0] = r2093.12
	0	Closed-loop speed control active		
13	1	No external fault	--	p2106[0] = r2093.13
	0	External fault is active (F07860)		
14	–	Not used		
15	1	CDS bit 1	Changes over between settings for different operation interfaces (command data sets).	p0811[0] = r2093.15

¹⁾ If you switch from telegram 350 to a different one, then the inverter sets all interconnections p1020, ... to "0". Exception: p2106 = 1.

Status word 3 (ZSW3)

The status word 3 is pre-assigned as follows.

- Bit 0... 15 manufacturer-specific

Bit	Value	Significance	Description	Signal interconnection in the inverter
0	1	DC braking active	--	p2051[3] = r0053
1	1	$ n_act > p1226$	Absolute current speed > stationary state detection	
2	1	$ n_act > p1080$	Absolute actual speed > minimum speed	
3	1	$i_act \geq p2170$	Actual current \geq current threshold value	
4	1	$ n_act > p2155$	Absolute actual speed > speed threshold value 2	
5	1	$ n_act \leq p2155$	Absolute actual speed < speed threshold value 2	
6	1	$ n_act \geq r1119$	Speed setpoint reached	
7	1	DC link voltage $\leq p2172$	Actual DC link voltage \leq threshold value	
8	1	DC link voltage > p2172	Actual DC link voltage > threshold value	
9	1	Ramping completed	Ramp-function generator is not active.	
10	1	Technology controller output at lower limit	Technology controller output $\leq p2292$	
11	1	Technology controller output at upper limit	Technology controller output > p2291	
12		Not used		
13		Not used		
14		Not used		
15		Not used		

7.3.1.3 Extend telegrams and change signal interconnection

When you have selected a telegram, the inverter interconnects the corresponding signals with the fieldbus interface. Generally, these interconnections are protected so that they cannot be changed. With the appropriate inverter settings, these interconnections can be changed.

Extend telegram

Every telegram can be extended, by "attaching" additional signals.

Procedure

Proceed as follows to extend a telegram:

1. Using STARTER or an operator panel, set parameter p0922 = 999.
2. Set parameter p2079 to the appropriate value of the corresponding telegram.
3. Interconnect additional PZD send words and PZD receive words with signals of your choice via parameters r2050 and p2051.

You have extended the telegram.

Parameter	Description
p0922	PROFdrive telegram selection
	999: Free telegram (message frame) configuration
p2079	PROFdrive PZD telegram selection extended
	1: Standard telegram 1, PZD-2/2
	20: Standard telegram 20, PZD-2/6
	350: SIEMENS telegram 350, PZD-4/4
	352: SIEMENS telegram 352, PZD-6/6
	353: SIEMENS telegram 353, PZD-2/2, PKW-4/4
354: SIEMENS telegram 354, PZD-6/6, PKW-4/4	
r2050[0...11]	PROFdrive PZD receive word Connector output to interconnect the PZD (setpoints) in the word format received from the PROFdrive controller.
p2051[0...16]	PROFdrive PZD send word Selection of the PZD (actual values) in the word format to be sent to the PROFdrive controller.

Selection of the PZD (actual values) in the word format to be sent to the PROFdrive controller. For further information refer to the function block diagrams 2468 and 2470 of the List Manual.

Freely selecting the signal interconnection of the telegram

The signals in the telegram can be freely interconnected.

Procedure



Proceed as follows to change the signal interconnection of a telegram:

1. Using STARTER or an operator panel, set parameter p0922 = 999.
2. Using STARTER or an operator panel, set parameter p2079 = 999.
3. Interconnect additional PZD send words and PZD receive words with signals of your choice via parameters r2050 and p2051.



You have freely interconnected the signals transferred in the telegram.

Parameter	Description
p0922	PROFdrive telegram selection
	999: Free telegram (message frame) configuration
p2079	PROFdrive PZD telegram selection extended
	999: Free telegram (message frame) configuration
r2050[0...11]	PROFdrive PZD receive word Connector output to interconnect the PZD (setpoints) in the word format received from the PROFdrive controller.
p2051[0...16]	PROFdrive PZD send word Selection of the PZD (actual values) in the word format to be sent to the PROFdrive controller.


For further information refer to the function block diagrams 2468 and 2470 of the List Manual.

7.3.1.4 Data structure of the parameter channel

Structure of the parameter channel

The parameter channel consists of four words. 1. and 2nd word transfer the parameter number and index as well as the type of job (read or write) The 3rd and 4th word contains the parameter contents. The parameter contents can be 16-bit values (such as baud rate) or 32-bit values (e.g. CO parameters).

Bit 11 in the 1st word is reserved and is always assigned 0.

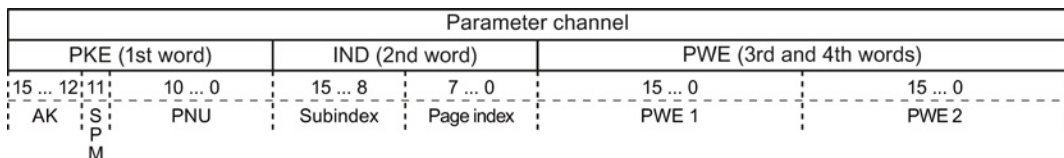

You can find examples of telegrams at the end of this section.

Request and response IDs

Bits 12 to 15 of the 1st word of the parameter channel contain the request and response identifier.

Table 7- 2 Request identifiers, control → inverter

Request identifier	Description	Response identifier	
		positive	negative
0	No request	0	7 / 8
1	Request parameter value	1 / 2	7 / 8
2	Change parameter value (word)	1	7 / 8
3	Change parameter value (double word)	2	7 / 8
4	Request descriptive element ¹⁾	3	7 / 8
6 ²⁾	Request parameter value (field) ¹⁾	4 / 5	7 / 8
7 ²⁾	Change parameter value (field, word) ¹⁾	4	7 / 8
8 ²⁾	Change parameter value (field, double word) ¹⁾	5	7 / 8
9	Request number of field elements	6	7 / 8

¹⁾ The required element of the parameter is specified in IND (2nd word).

²⁾ The following request IDs are identical: 1 ≡ 6, 2 ≡ 7 3 ≡ 8.
We recommend that you use identifiers 6, 7, and 8.

Table 7- 3 Response identifiers, inverter → control

Response identifier	Description
0	No response
1	Transfer parameter value (word)
2	Transfer parameter value (double word)
3	Transfer descriptive element ¹⁾
4	Transfer parameter value (field, word) ²⁾
5	Transfer parameter value (field, double word) ²⁾
6	Transfer number of field elements
7	Inverter cannot process the request. In the most significant word of the parameter channel, the inverter sends an error number to the control, refer to the following table.
8	No master controller status / no authorization to change parameters of the parameter channel interface

¹⁾ The required element of the parameter is specified in IND (2nd word).

²⁾ The required element of the indexed parameter is specified in IND (2nd word).

Table 7- 4 Error numbers for response identifier 7

No.	Description
00 hex	Illegal parameter number (access to a parameter that does not exist)
01 hex	Parameter value cannot be changed (change request for a parameter value that cannot be changed)
02 hex	Lower or upper value limit exceeded (change request with a value outside the value limits)
03 hex	Incorrect subindex (access to a subindex that does not exist.)
04 hex	No array (access with a subindex to non-indexed parameters)
05 hex	Incorrect data type (change request with a value that does not match the data type of the parameter)
06 hex	Setting not permitted, only resetting (change request with a value not equal to 0 without permission)
07 hex	Descriptive element cannot be changed (change request to a descriptive element error value that cannot be changed)
0B hex	No master control (change request but with no master control, see also p0927.)
0C hex	Keyword missing
11 hex	Request cannot be executed due to the operating state (access is not possible for temporary reasons that are not specified)
14 hex	Inadmissible value (change request with a value that is within the limits but which is illegal for other permanent reasons, i.e. a parameter with defined individual values)
65 hex	Parameter number is currently deactivated (depending on the mode of the inverter)
66 hex	Channel width is insufficient (communication channel is too small for response)
68 hex	Illegal parameter value (parameter can only assume certain values)
6A hex	Request not included / task is not supported (the valid request identifications can be found in table "Request identifications controller → inverter")
6B hex	No change access for a controller that is enabled. (operating status of the inverter prevents a parameter change)
86 hex	Write access only for commissioning (p0010 = 15) (operating status of the inverter prevents a parameter change)
87 hex	Know-how protection active, access locked
C8 hex	Change request below the currently valid limit (change request to a value that lies within the "absolute" limits, but is however below the currently valid lower limit)
C9 hex	Change request above the currently valid limit (example: a parameter value is too large for the inverter power)
CC hex	Change request not permitted (change is not permitted as the access code is not available)

Offset and page index of the parameter numbers

- Parameter numbers < 2000 PNU = parameter number.
Write the parameter number into the PNU (PKE bit 10 ... 0).
- Parameter numbers ≥ 2000 PNU = parameter number - offset.
Write the parameter number minus the offset into the PNU (PKE bit 10 ... 0).
Write the offset in the page index (IND bit 7 ... 0).

Parameter number	Offset	Page index								
		Hex	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0000 ... 1999	0	0 hex	0	0	0	0	0	0	0	0
2000 ... 3999	2000	80 hex	1	0	0	0	0	0	0	0
6000 ... 7999	6000	90 hex	1	0	0	1	0	0	0	0
8000 ... 9999	8000	20 hex	0	0	1	0	0	0	0	0
10000 ... 11999	10000	A0 hex	1	0	1	0	0	0	0	0
20000 ... 21999	20000	50 hex	0	1	0	1	0	0	0	0
30000 ... 31999	30000	F0 hex	1	1	1	1	0	0	0	0
60000 ... 61999	60000	74 hex	0	1	1	1	0	1	0	0

Indexed parameters

For indexed parameters, you must write the index as hex value into the subindex (IND bit 15 ... 8).

Parameter contents

Parameter contents can be parameter values or connectors.

Table 7- 5 Parameter values in the parameter channel

PWE, 3rd word	PWE, 4th word	
Bit 15 ... 0	Bit 15 ... 8	Bit 7 ... 0
0	0	8-bit value
0	16-bit value	
32-bit value		

Table 7- 6 Connectors in the parameter channel

PWE, 3rd word	PWE, 4th word	
Bit 15 ... 0	Bit 15 ... 10	Bit 9 ... 0
Number of the connector	3F hex	The index or bit field number of the connector

Telegram examples

Read request: Read out serial number of the Power Module (p7841[2])

To obtain the value of the indexed parameter p7841, you must fill the telegram of the parameter channel with the following data:

- **PKE, bit 12 ... 15 (AK): = 6** (request parameter value (field))
- **PKE, bit 0 ... 10 (PNU): = 1841** (Parameter number without offset)
Parameter number = PNU + offset (page index)
(7841 = 1841 + 6000)
- **IND, bit 8 ... 15 (subindex): = 2** (Index of the parameter)
- **IND, bit 0 ... 7 (page index): = 90 hex** (offset 6000 \pm 90 hex)
- Because you want to read the parameter value, words 3 and 4 in the parameter channel for requesting the parameter value are irrelevant. They should be assigned a value of 0, for example.

Parameter channel						
PKE, 1st word		IND, 2nd word		PWE1 - high, 3rd word	PWE2 - low, 4th word	
15 ... 12	11 ... 10 ... 0	15 ... 8	7 ... 0	15 ... 0	15 ... 10	9 ... 0
AK	Parameter number	Subindex	Page index	Parameter value	Drive object	Index
0 1 1 0 0 1 1 1 0 0 1 1 0 0 0 1	0 0 0 0 0 0 0 1 0 1 0 0 1 0 0 0 0	0 0 0 0 0 0 0 1 0 1 0 0 1 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

Figure 7-4 Telegram for a read request from p7841[2]

Write request: Change restart mode (p1210)

The restart mode is inhibited in the factory setting (p1210 = 0). In order to activate the automatic restart with "acknowledge all faults and restart for an ON command", p1210 must be set to 26:

- **PKE, bit 12 ... 15 (AK): = 7** (change parameter value (field, word))
- **PKE, bit 0 ... 10 (PNU): = 4BA hex** (1210 = 4BA hex, no offset, as 1210 < 1999)
- **IND, bit 8 ... 15 (subindex): = 0 hex** (parameter is not indexed)
- **IND, bit 0 ... 7 (page index): = 0 hex** (offset 0 corresponds to 0 hex)
- **PWE1, bit 0 ... 15: = 0 hex**
- **PWE2, bit 0 ... 15: = 1A hex** (26 = 1A hex)

Parameter channel						
PKE, 1st word		IND, 2nd word		PWE1 - high, 3rd word	PWE2 - low, 4th word	
15 ... 12	11 ... 10 ... 0	15 ... 8	7 ... 0	15 ... 0	15 ... 0	
AK	Parameter number	Subindex	Page index	Parameter value (bit 16 ... 31)	Parameter value (bit 0 ... 15)	
0 1 1 1 0 1 0 0 1 0 1 1 1 1 0 1 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 1 1 0 1 0

Figure 7-5 Telegram, to activate the automatic restart with p1210 = 26

Write request: Assign digital input 2 with the function ON/OFF1 (p0840[1] = 722.2)

In order to link digital input 2 with ON/OFF1, you must assign parameter p0840[1] (source, ON/OFF1) the value 722.2 (DI 2). To do this, you must fill the telegram of the parameter channel as follows:

- PKE, bit 12 ... 15 (AK): = 7 hex (change, parameter value (field, word))
- PKE, bit 0 ... 10 (PNU): = 348 hex (840 = 348 hex, no offset, as 840 < 1999)
- IND, bit 8 ... 15 (subindex): = 1 hex (CDS1 = index1)
- IND, bit 0 ... 7 (page index): = 0 hex (offset 0 \triangleq 0 hex)
- PWE1, bit 0 ... 15: = 2D2 hex (722 = 2D2 hex)
- PWE2, bit 10 ... 15: = 3F hex (drive object - for SINAMICS G120, always 63 = 3f hex)
- PWE2, bit 0 ... 9: = 2 hex (index of parameter (DI 2 = 2))

Parameter channel																																																														
PKE, 1st word				IND, 2nd word				PWE1 - high, 3rd word				PWE2 - low, 4th word																																																		
15 ... 12	11	10 ... 0		15 ... 8	7 ... 0			15 ... 0				15 ... 10	9 ... 0																																																	
AK		Parameter number		Subindex	Page index			Parameter value				Drive Object	Index																																																	
0	1	1	1	0	0	1	1	0	1	0	1	0	0	1	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	1	0	1	1	0	1	0	1	0	1	0	1	1	1	1	1	0	0	0	0	0	0	0	0	1	0

Figure 7-6 Telegram, to assign DI 2 with ON/OFF1

"Reading and writing parameters" application example

See: Reading and writing parameters via PROFIBUS

(<http://support.automation.siemens.com/WW/view/en/8894584>).

7.3.1.5 Slave-to-slave communication

"Direct data exchange" is sometimes called "slave-to-slave communication" or "data exchange broadcast". Here, slaves exchange data without any direct involvement of the master.

You can find more information in: "Manuals for your inverter in the fieldbus communications manual (Page 377)".

7.3.2 Acyclic communication

The inverter supports the writing and reading of parameters via acyclic communication:

- For PROFIBUS:

Acyclic communication via data set47:
up to 240 bytes per write or read request

- For PROFINET:

Acyclic communication via B02E hex and B02F hex

More information on acyclic communication can be found in the Fieldbus function manual; see also Section: Manuals for your inverter (Page 377).

Setting functions

8.1 Overview of the inverter functions







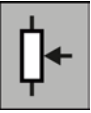




Figure 8-1 Overview of inverter functions

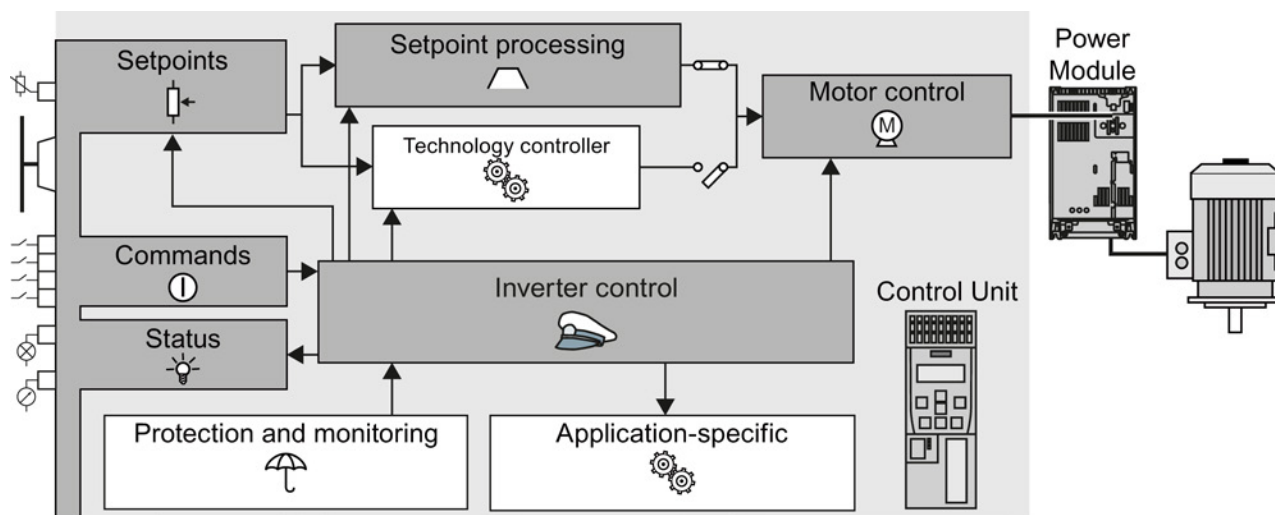8.1 Overview of the inverter functions

Functions relevant to all applications		Functions required in special applications only	
<p>The functions that you require in each application are shown in a dark color in the function overview above.</p> <p>In the quick commissioning, the parameters of these functions are assigned an appropriate basic setting, so that in many cases the motor can be operated without having to assign any other parameters.</p>		<p>The functions whose parameters you only need to adapt when actually required are shown in white in the function overview above.</p>	
	<p>Inverter control is responsible for all of the other inverter functions. Among other things, it defines how the inverter responds to commands from the higher-level control system.</p> <p>Inverter control (Page 143)</p>		<p>The protection functions prevent damage to the motor, inverter and driven load, e.g. using temperature monitoring or torque monitoring.</p> <p>Protection and monitoring functions (Page 177)</p>
	<p>The commands from the higher-level control are sent to the inverter via digital inputs or the fieldbus. The inverter returns its status signals to the outputs of the Control Unit or to the fieldbus.</p> <p>Adapting the terminal strip (Page 103)</p> <p>Configuring the fieldbus (Page 117)</p>		<p>Functions suitable for the application permit, for example, a higher-level closed-loop pressure or temperature control using the technology controller.</p> <p>Further, the inverter provides solution options specifically for applications in the area of pumps, fans and climate control systems (HVAC).</p> <p>Application-specific functions (Page 187)</p>
			
	<p>You must define a setpoint, which defines the motor speed, for example.</p> <p>Setpoints (Page 155)</p>		
	<p>The setpoint processing uses a ramp-function generator to prevent speed steps occurring and to limit the speed to a permissible maximum value.</p> <p>Setpoint calculation (Page 162)</p>		
	<p>The motor closed-loop control ensures that the motor follows the speed setpoint. You can select either vector control or U/f control.</p> <p>Motor control (Page 169)</p>		


8.2 Inverter control

8.2.1 Switching the motor on and off



After switching the supply voltage on, the converter normally goes into the "ready to start" state. In this state, the converter waits for the command to switch-on the motor:

- The converter switches on the motor with the ON command. The converter changes to the "Operation" state.
- The converter brakes the motor after the OFF1 command. The converter switches off the motor once standstill has been reached. The converter is again "ready to start".

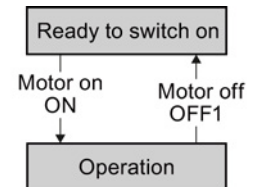

Converter states and commands for switching the motor on and off

In addition to the OFF1 command, there are other commands that are used to switch off the motor:

- OFF2 - the converter immediately switches off the motor without first braking it.
- OFF3 - this command means "quick stop". After OFF3, the converter brakes the motor with the OFF3 ramp-down time. After reaching standstill, the converter switches off the motor.

The command is frequently used for exceptional operating situations where it is necessary to brake the motor especially quickly. Collision protection is a typical application for this function.

- Disable operation – The converter switches off the motor and blocks the setpoint.
- Enable operation – The converter switches on the motor and enables the setpoint.

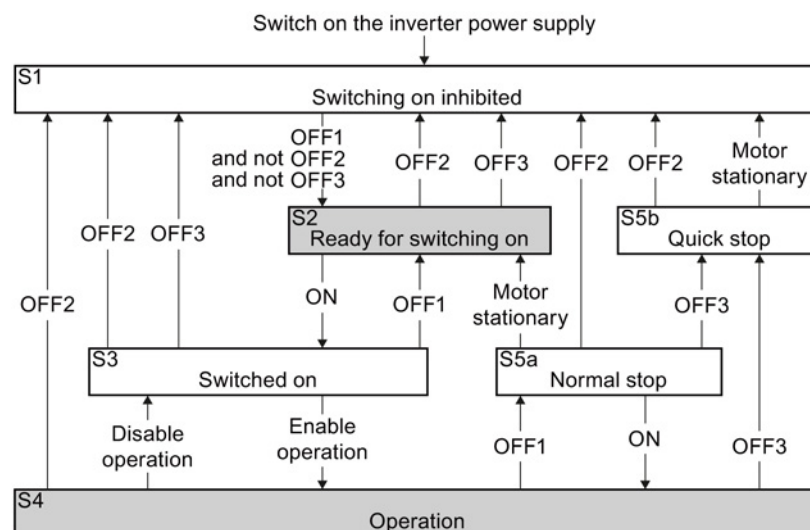


Figure 8-2 Internal sequence control of the converter when the motor is switched on and off






The abbreviations S1 ... S5b to identify the converter states are defined in the PROFIdrive profile.

Converter status	Explanation
S1	In this state, the converter does not respond to the ON command. The converter goes into this state under the following conditions: <ul style="list-style-type: none">• ON was active when switching on the converter. Exception: When the automatic start function is active, ON must be active after switching on the power supply.• OFF2 or OFF3 is selected.
S2	This state is required to switch on the motor.
S3	The converter waits for the operating enable.
S4	The motor is switched on.
S5a	The motor was switched off with OFF1 and brakes with the ramp-down time of the ramp-function generator.
S5b	The motor was switched off with OFF3 and brakes with the OFF3 ramp-down time.

8.2.2 Inverter control using digital inputs

Five different methods are available for controlling the motor via digital inputs.

Table 8- 1 Two-wire control and three-wire control

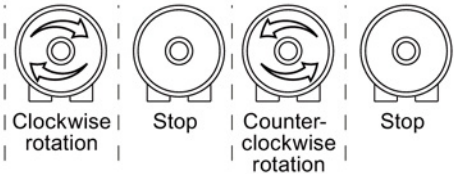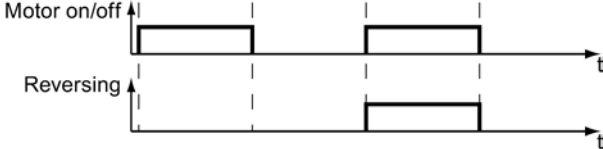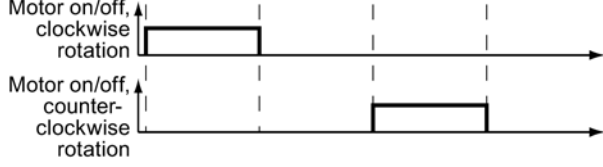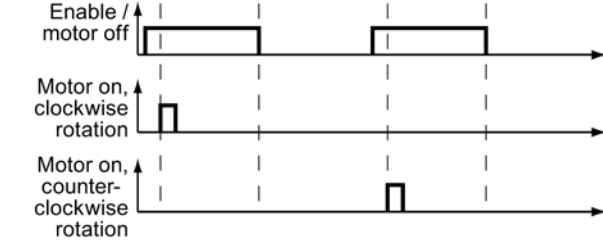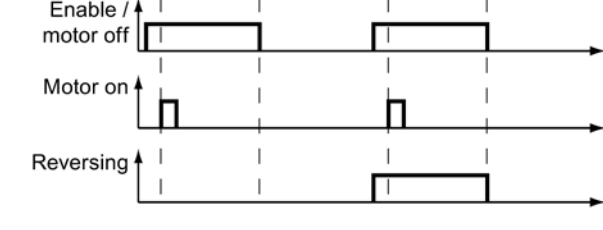Behavior of the motor		
 <p>Clockwise rotation Stop Counter-clockwise rotation Stop</p>	Control commands	Typical application
	Two-wire control, method 1 <ol style="list-style-type: none"> 1. Switching the motor on and off (ON/OFF1). 2. Reverse the motor direction of rotation. 	Local control in conveyor systems.
	Two-wire control, method 2 and two-wire control, method 3 <ol style="list-style-type: none"> 1. Switch the motor on and off (ON/OFF1), clockwise rotation. 2. Switch the motor on and off (ON/OFF1), counter-clockwise rotation. 	Traction drives with control via joystick
	Three-wire control, method 1 <ol style="list-style-type: none"> 1. Enable signal for switching the motor on and off (OFF1). 2. Switch on the motor (ON), clockwise rotation. 3. Switch on the motor (ON), counter-clockwise rotation. 	Traction drives with control via joystick
	Three-wire control, method 2 <ol style="list-style-type: none"> 1. Enable signal for switching the motor on and off (OFF1). 2. Switch on motor (ON). 3. Reverse the motor direction of rotation. 	-

Reversing is disabled in the factory setting. To use the "Reverse" function, you must release the negative rotational direction, see Section Enable direction of rotation (Page 163).

8.2.3 Two-wire control: method 1

You switch the motor on and off using a control command (ON/OFF1) while the other control command reverses the motor direction of rotation.

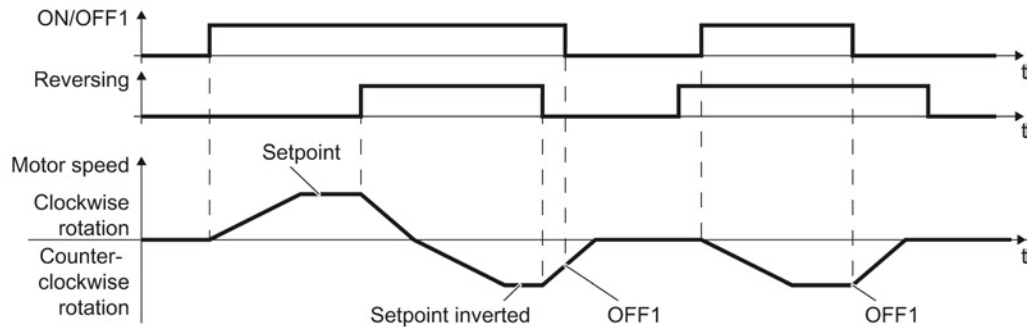


Figure 8-3 Two-wire control, method 1

Table 8-2 Function table

ON/OFF1	Reversing	Function
0	0	OFF1: The motor stops.
0	1	OFF1: The motor stops.
1	0	ON: Clockwise motor rotation.
1	1	ON: Counter-clockwise motor rotation.

Parameter	Description		
p0015 = 12	Macro drive unit		
	Controlling the motor using the digital inputs of the inverter:	DI 0 ON/OFF1	DI 1 Reversing
Advanced setting Interconnecting control commands with digital inputs of your choice.			
p0840[0 ... n] = 722.x	BI: ON/OFF1 (ON/OFF1) Example: p0840[0] = 722.3 ⇒ if CDS 0 (index[0]) is selected, the inverter receives its ON/OFF1 command via DI 3.		
p1113[0 ... n] = 722.x	BI: Setpoint inversion (reversing)		

8.2.4 Two-wire control, method 2

You switch the motor on and off using a control command (ON/OFF1) and at the same time select clockwise motor rotation. You also use the other control command to switch the motor on and off, but in this case you select counter-clockwise rotation for the motor.

The inverter only accepts a new control command when the motor is at a standstill.

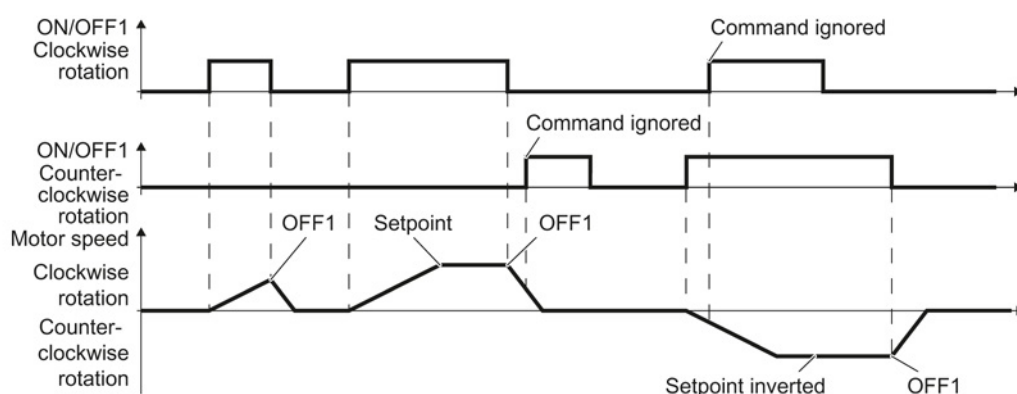


Figure 8-4 Two-wire control, method 2

Table 8-3 Function table

ON/OFF1 clockwise rotation	ON/OFF1 counter-clockwise rotation	Function
0	0	OFF1: The motor stops.
1	0	ON: Clockwise motor rotation.
0	1	ON: Counter-clockwise motor rotation.
1	1	ON: The motor direction of rotation is based on the signal that assumes status "1" first.

Parameter	Description		
p0015 = 17	Macro drive unit		
	Controlling the motor using the digital inputs of the inverter:	DI 0 ON/OFF1 clockwise rotation	DI 1 ON/OFF1 counter-clockwise rotation
Advanced setting Interconnecting control commands with digital inputs of your choice.			
p3330[0 ... n] = 722.x	BI: 2/3 wire control command 1 (ON/OFF1 clockwise rotation)		
p3331[0 ... n] = 722.x	BI: 2/3 wire control command 2 (ON/OFF1 counter-clockwise rotation) Example: p3331[0] = 722.0 ⇒ if CDS 0 (index[0]) is selected, the inverter receives its ON/OFF1 counter-clockwise command via DI 0.		

8.2.5 Two-wire control, method 3

You switch the motor on and off using a control command (ON/OFF1) and at the same time select clockwise motor rotation. You also use the other control command to switch the motor on and off, but in this case you select counter-clockwise rotation for the motor.

Unlike method 2, the inverter will accept the control commands at any time, regardless of the motor speed.

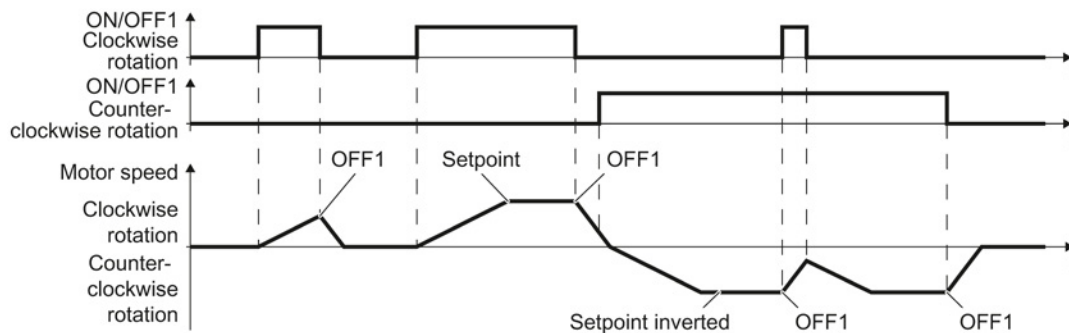


Figure 8-5 Two-wire control, method 3

Table 8-4 Function table

ON/OFF1 clockwise rotation	ON/OFF1 counter-clockwise rotation	Function
0	0	OFF1: The motor stops.
1	0	ON: Clockwise motor rotation.
0	1	ON: Counter-clockwise motor rotation.
1	1	OFF1: The motor stops.

Parameter	Description		
p0015 = 18	Macro drive unit		
	Controlling the motor using the digital inputs of the inverter:	DI 0	DI 1
		ON/OFF1 clockwise rotation	ON/OFF1 counter-clockwise rotation
Advanced setting			
Interconnecting control commands with digital inputs of your choice.			
p3330[0 ... n] = 722.x	BI: 2/3 wire control command 1 (ON/OFF1 clockwise rotation)		
p3331[0 ... n] = 722.x	BI: 2/3 wire control command 2 (ON/OFF1 counter-clockwise rotation) Example: p3331[0] = 722.0 ⇒ if CDS 0 (index[0]) is selected, the inverter receives its ON/OFF1 counter-clockwise command via DI 0.		

8.2.6 Three-wire control, method 1

With one control command, you enable the two other control commands. You switch the motor off by withdrawing the enable (OFF1).

You switch the motor's direction of rotation to clockwise rotation with the positive edge of the second control command. If the motor is still switched off, switch it on (ON).

You switch the motor's direction of rotation to counter-clockwise rotation with the positive edge of the third control command. If the motor is still switched off, switch it on (ON).

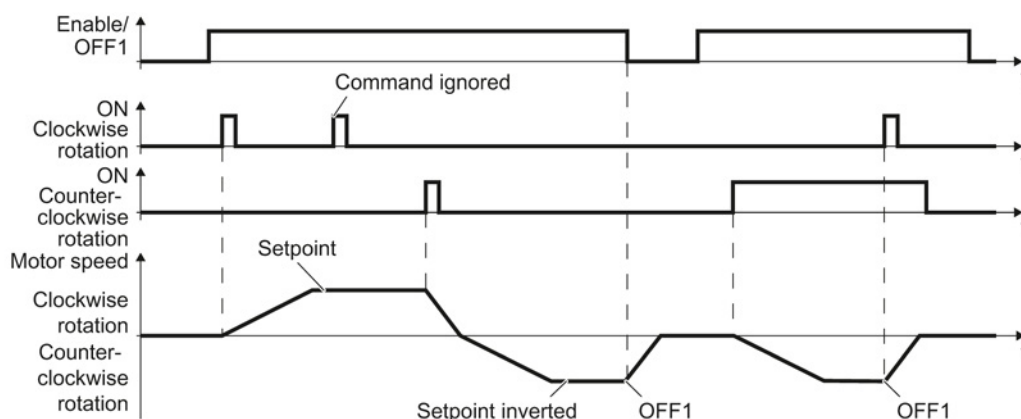


Figure 8-6 Three-wire control, method 1

Table 8- 5 Function table

Enable / OFF1	ON clockwise rotation	ON counter-clockwise rotation	Function
0	0 or 1	0 or 1	OFF1: The motor stops.
1	0→1	0	ON: Clockwise motor rotation.
1	0	0→1	ON: Counter-clockwise motor rotation.
1	1	1	OFF1: The motor stops.

Parameter	Description			
p0015 = 19	Macro drive unit			
	Controlling the motor using the digital inputs of the inverter:	DI 0	DI 1	DI 2
		Enable / OFF1	ON clockwise rotation	ON counter-clockwise rotation
Advanced setting				
Interconnecting control commands with digital inputs of your choice (DI x).				
p3330[0 ... n] = 722.x	BI: 2/3 wire control command 1 (enable/OFF1)			
p3331[0 ... n] = 722.x	BI: 2/3 wire control command 2 (ON clockwise rotation)			
p3332[0 ... n] = 722.x	BI: 2/3 wire control command 3 (ON counter-clockwise rotation)			
	Example: p3332[0] = 722.0 ⇒ if CDS 0 (index[0]) is selected, the inverter receives its ON counter-clockwise command via DI 0.			

8.2.7 Three-wire control, method 2

With one control command, you enable the two other control commands. You switch the motor off by withdrawing the enable (OFF1).

You switch on the motor with the positive edge of the second control command (ON).

The third control command defines the motor's direction of rotation (reversing).

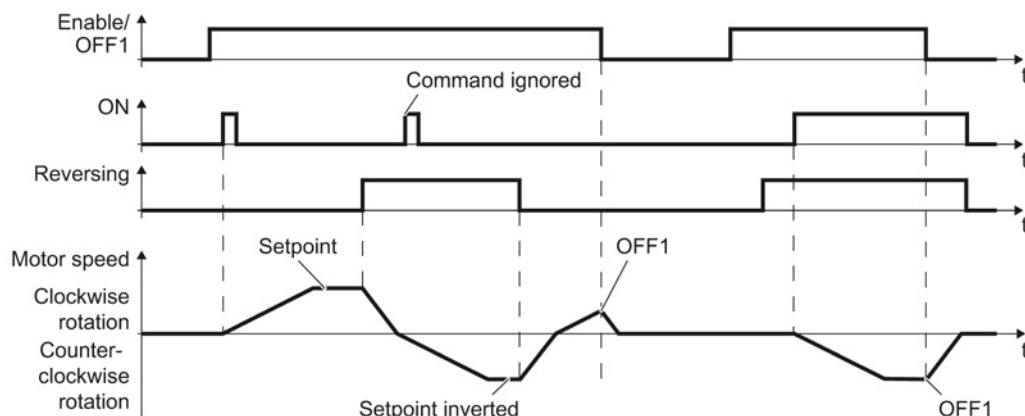


Figure 8-7 Three-wire control, method 2

Table 8-6 Function table

Enable / OFF1	ON	Reversing	Function
0	0 or 1	0 or 1	OFF1: The motor stops.
1	0→1	0	ON: Clockwise motor rotation.
1	0→1	1	ON: Counter-clockwise motor rotation.

Parameter	Description			
p0015 = 20	Macro drive unit			
	Controlling the motor using the digital inputs of the inverter:	DI 0	DI 1	DI 2
		Enable / OFF1	ON	Reversing
Advanced setting Interconnecting control commands with digital inputs of your choice (DI x).				
p3330[0 ... n] = 722.x	BI: 2/3 wire control command 1 (enable/OFF1)			
p3331[0 ... n] = 722.x	BI: 2/3 wire control command 2 (ON) Example: p3331[0] = 722.0 ⇒ if CDS 0 (index[0]) is selected, the inverter receives its ON command via DI 0.			
p3332[0 ... n] = 722.x	BI: 2/3 wire control command 3 (reversing)			

8.2.8 Running the motor in jog mode (JOG function)

The "Jog" function is typically used to slowly move a machine part, e.g. a conveyor belt.

With the "Jog" function, you switch the motor on and off using a digital input. When the motor is switched on, it accelerates to the jogging setpoint. There are two different setpoints available, e.g. for motor counter-clockwise rotation and clockwise rotation.

The same ramp-function generator acts on the setpoint as for the ON/OFF1 command.


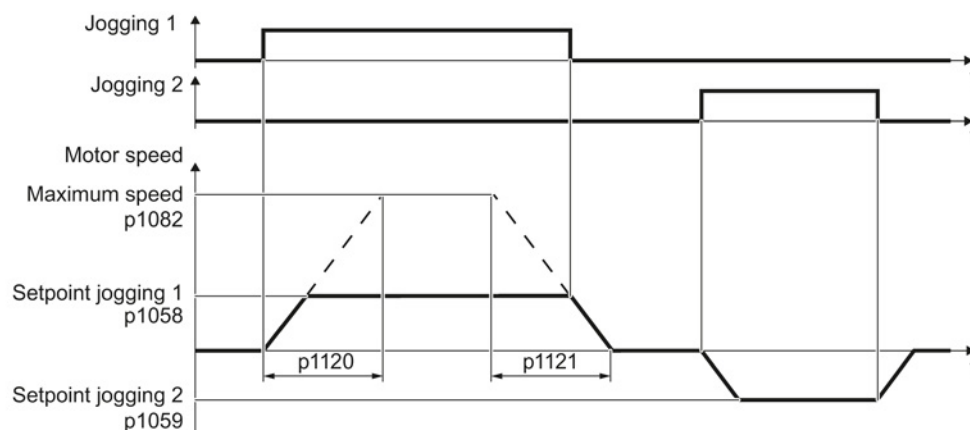


Figure 8-8 Behavior of the motor when "jogging"

The inverter must be ready to start before you issue the "Jog" control command. If the motor is already switched on, then the "Jog" command has no effect.

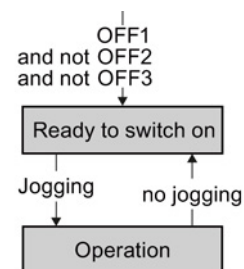

Jog settings

Parameter	Description	
p1058	Jogging 1 speed setpoint (factory setting 150 rpm)	
p1059	Jogging 2 speed setpoint (factory setting -150 rpm)	
p1082	Maximum speed (factory setting 1500 rpm)	
p1110	Inhibit negative direction	
	=0: Negative direction of rotation is enabled	=1: Negative direction of rotation is inhibited
p1111	Inhibit positive direction	
	=0: Positive direction of rotation is enabled	=1: Positive direction of rotation is inhibited
p1113	Setpoint inversion	
	=0: Setpoint is not inverted	=1: Setpoint is inverted
p1120	Ramp-function generator ramp-up time (factory setting 10 s)	
p1121	Ramp-function generator ramp-down time (factory setting 10 s)	
p1055 = 722.0	Jog bit 0: Select jogging 1 via digital input 0	
p1056 = 722.1	Jog bit 1: Select jogging 2 via digital input 1	

8.2.9 Switching over the inverter control (command data set)


In several applications, the inverter must be able to be operated from different, higher-level control systems.

Example: You control the motor either from a central control system, via fieldbus or from a local control panel.

Command data set (CDS)

This means that you can set the inverter control in various ways and toggle between the settings. For instance, as described above, the inverter can either be operated via a fieldbus or via the terminal strip.

The settings in the inverter, which are associated with a certain control type of the inverter, are called command data set.

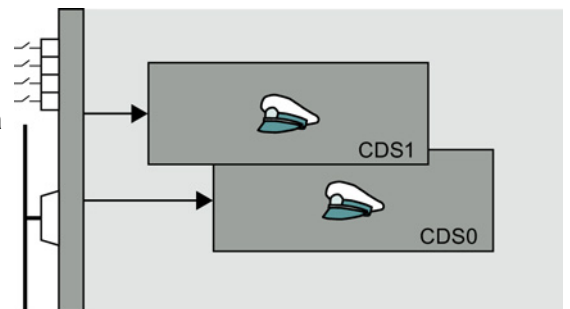

You select the command data set using parameter p0810. To do this, you must interconnect parameter p0810 with a control command of your choice, e.g. a digital input.

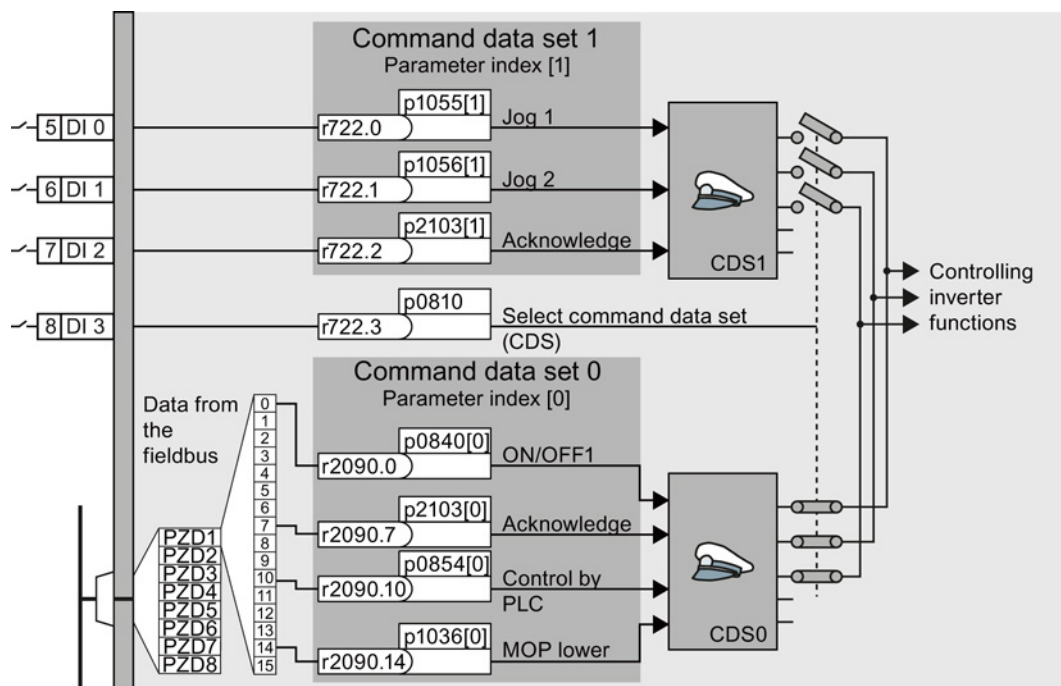


Figure 8-9 Example: Switching over the control via terminal strip to control via PROFIBUS or PROFINET

An overview of all the parameters that belong to the command data sets is provided in the List Manual.

Note

It takes approximately 4 ms to toggle between command data sets.

Advanced settings

To change the number of command data sets in STARTER, you must open your STARTER project offline.

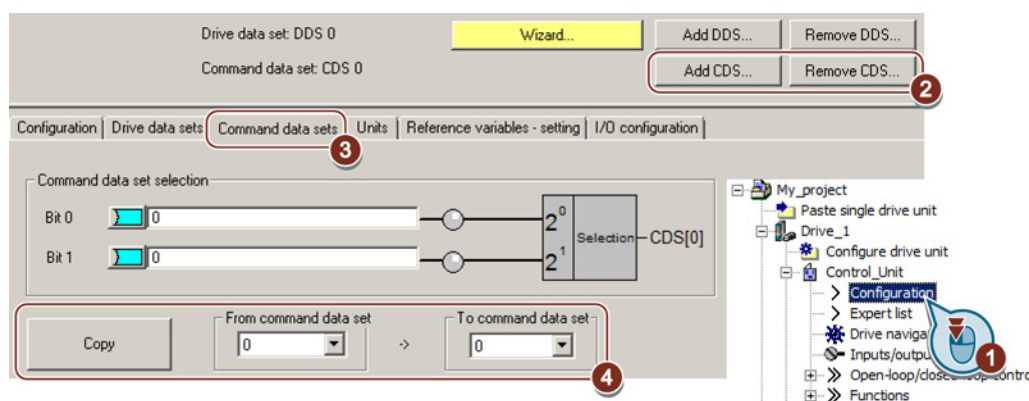



Figure 8-10 Editing command data sets in STARTER

- ① You can edit command data sets if, in the STARTER project tree, you select "Configuration".
- ② If you require more than two command data sets, then add command data sets using this button or remove them.
- ③, ④ To simplify commissioning several command data sets, under the "Command data sets" tab there is a copy function.

Parameter	Description
p0010 = 15	Drive commissioning: Data sets
p0170	Number of command data sets (factory setting: 2) p0170 = 2, 3 or 4
p0010 = 0	Drive commissioning: Ready
r0050	Displaying the number of the CDS that is currently active
p0809[0]	Number of the command data set to be copied (source)
p0809[1]	Number of the command data set to which the data is to be copied (target)
p0809[2] = 1	Copying is started Once copying has been completed, the inverter sets p0809[2] to 0.
p0810	Command data set selection CDS bit 0
p0811	Command data set selection CDS bit 1
r0050	Displaying the number of the CDS that is currently active

8.3

 Setpoints



The inverter receives its main setpoint from the setpoint source. The main setpoint generally specifies the motor speed.

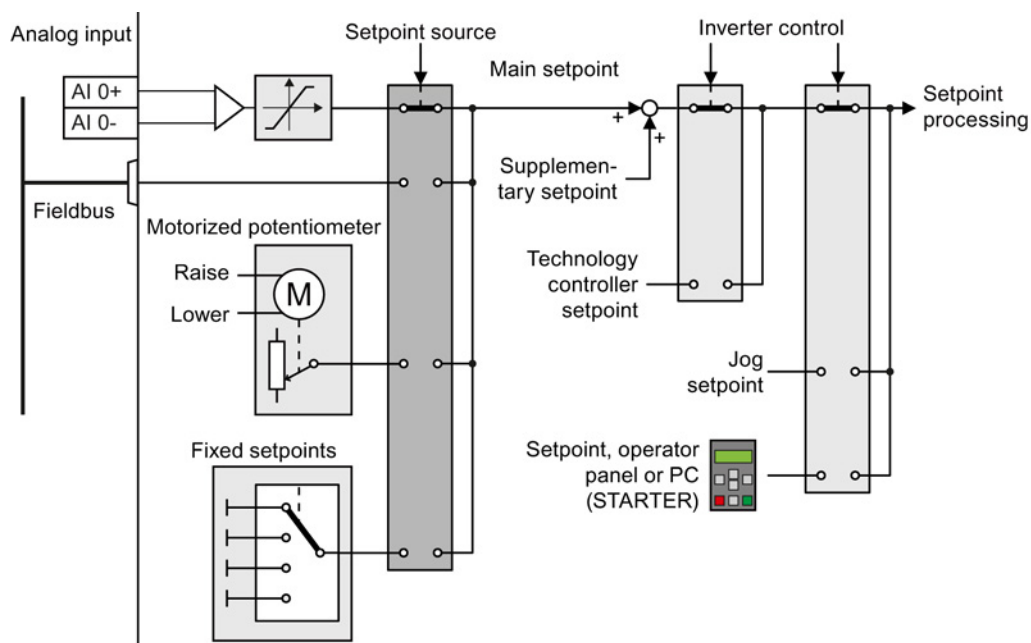


Figure 8-11 Setpoint sources for the inverter

You have the following options when selecting the source of the main setpoint:

- Inverter analog input.
- Inverter fieldbus interface.
- Motorized potentiometer simulated in the inverter.
- Fixed setpoints saved in the inverter.

You have the same selection options when selecting the source of the supplementary setpoint.

Under the following conditions, the inverter switches from the main setpoint to other setpoints:

- When the technology controller is active and appropriately interconnected, its output specifies the motor speed.
- When jogging is active.
- When controlling from an operator panel or the STARTER PC tool.

8.3.1 Analog input as setpoint source

Interconnecting an analog input

If you have selected a pre-assignment without a function of the analog input, then you must interconnect the parameter of the main setpoint with an analog input.

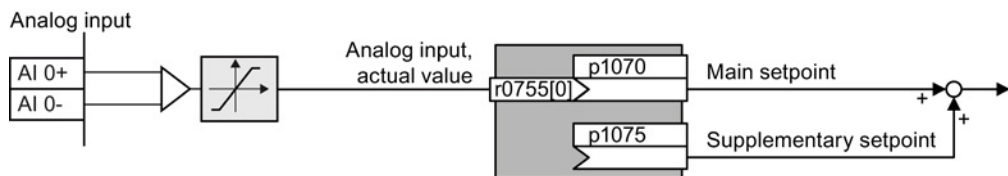


Figure 8-12 Example: Analog input 0 as setpoint source

Table 8- 7 Setting with analog input 0 as setpoint source

Parameter	Remark
p1070 = 755[0]	Main setpoint Interconnect the main setpoint with analog input 0
p1075 = 755[0]	Additional setpoint Interconnect the additional setpoint with analog input 0

You must adapt the analog input to the connected signal, e.g. ± 10 V or 4 ... 20 mA. You will find additional information in the section: Analog inputs (Page 109).

8.3.2 Specifying the setpoint via the fieldbus

Interconnecting the fieldbus with the main setpoint



Figure 8-13 Fieldbus as setpoint source

Most standard telegrams receive the speed setpoint as a second process data PZD2.

Table 8- 8 Setting the fieldbus as setpoint source

Parameter	Remark
p1070 = 2050[1]	Main setpoint Interconnect the main setpoint with process data PZD2 from the fieldbus.
p1075 = 2050[1]	Additional setpoint Interconnect the additional setpoint with process data PZD2 from the fieldbus.

8.3.3 Motorized potentiometer as setpoint source

The "Motorized potentiometer" function emulates an electromechanical potentiometer. The output value of the motorized potentiometer can be continually set using the "up" and "down" control signals.

Interconnecting the motorized potentiometer (MOP) with the setpoint source

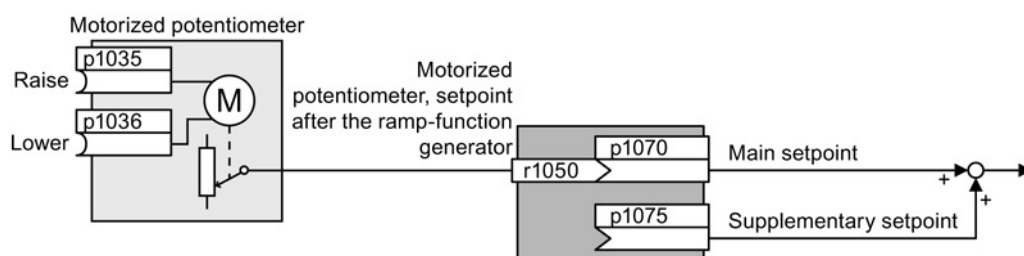


Figure 8-14 Motorized potentiometer as setpoint source

Table 8- 9 Basic setup of motorized potentiometer

Parameter	Description
p1047	MOP ramp-up time (factory setting: 10 s)
p1048	MOP ramp-down time (factory setting: 10 s)
p1040	MOP start value (factory setting: 0 rpm) Defines the start value [rpm], which is effective when switching on the motor.

Table 8- 10 Setting the MOP as setpoint source

Parameter	Remark	
p1070 = 1050	Main setpoint Interconnecting the main setpoint with MOP.	
p1035	Motorized potentiometer, setpoint higher	Interconnect these commands with signals of your choice.
p1036	Motorized potentiometer, setpoint lower	

Adapting the behavior of the motorized potentiometer

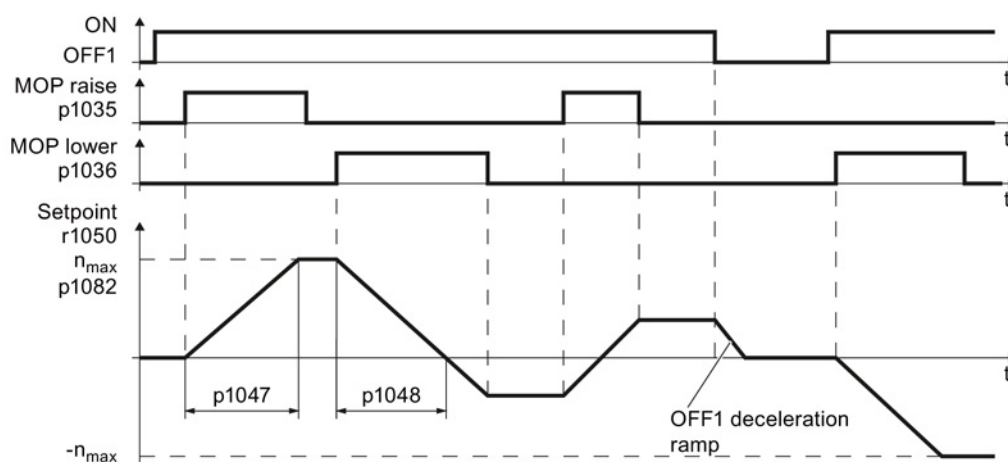


Figure 8-15 Function chart of motorized potentiometer

Table 8- 11 Extended setup of motorized potentiometer

Parameter	Description
p1030	<p>MOP configuration (factory setting: 00110 bin) Parameter value with five independently adjustable bits 00 ... 04</p> <p>Bit 00: Save setpoint after switching off motor 0: After the motor is switched on, p1040 is specified as the setpoint 1: Setpoint is saved after the motor is switched off and set to the saved value once it is switched on</p> <p>Bit 01: Configure ramp-function generator in automatic mode (1-signal via BI: p1041) 0: Without ramp-function generator in the automatic mode (ramp-up/ramp-down time = 0) 1: With ramp-function generator in the automatic mode In manual mode (0-signal via BI: p1041) the ramp-function generator is always active</p> <p>Bit 02: Configure initial rounding 0: Without initial rounding 1: With initial rounding. Using the initial rounding function it is possible to enter very small setpoint changes</p> <p>Bit 03: Store setpoint in power-independent manner 0: No power-independent saving 1: Setpoint is saved in the event of a power failure (bit 00 = 1)</p> <p>Bit 04: Ramp-function generator always active 0: Setpoint is only calculated with enabled pulses 1: The setpoint is calculated independent of the pulse enable.</p>
p1037	<p>MOP maximum speed (factory setting: 0 rpm) Automatically pre-assigned when commissioning</p>
p1038	<p>MOP minimum speed (factory setting: 0 rpm) Automatically pre-assigned when commissioning</p>
p1043	<p>Motorized potentiometer, accept setting value (factory setting: 0) Signal source for accepting the setting value. The motorized potentiometer accepts the setting value p1044 on signal change p1043 = 0 → 1.</p>
p1044	<p>MOP setting value (factory setting: 0) Signal source for the setting value.</p>

For more information about the motorized potentiometer, refer to function diagram 3020 in the List Manual.

8.3.4 Fixed speed as setpoint source

In many applications after switching on the motor, all that is needed is to run the motor at a constant speed or to switch between different speeds.

Example: After it has been switched on, a conveyor belt only runs with two different velocities.

Interconnecting the fixed speeds with a main setpoint

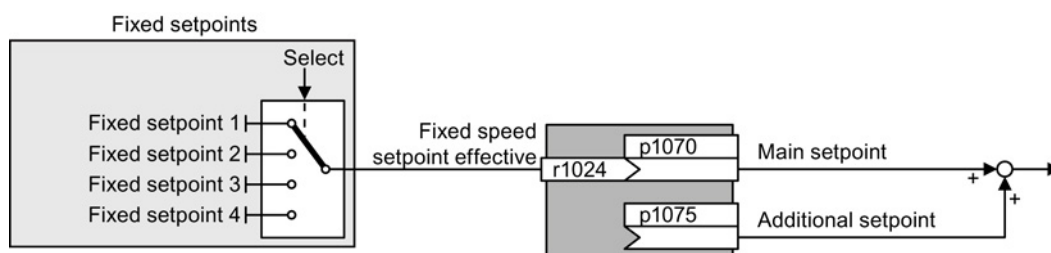


Figure 8-16 Fixed speeds as setpoint source

Table 8- 12 Setting the fixed speed as a setpoint source

Parameter	Remark
p1070 = 1024	Main setpoint Interconnecting the main setpoint with fixed speeds.
p1075 = 1024	Additional setpoint Interconnecting the additional setpoint with fixed speeds

Select direct or binary fixed setpoint

The converter distinguishes between two methods for selecting the fixed setpoints:

1. Direct selection:

You set 4 different fixed setpoints. By adding one or more of the four fixed setpoints, up to 16 different resulting setpoints are obtained.

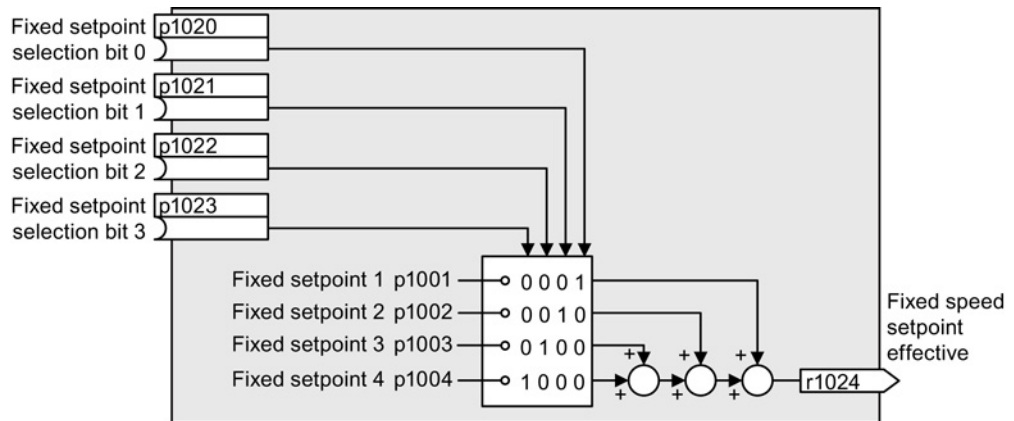


Figure 8-17 Simplified function diagram for directly selecting fixed setpoints

Additional information about direct selection can be found in function diagram 3011 in the List Manual.

2. Binary selection:

You set 16 different fixed setpoints. You precisely select one of these 16 fixed setpoints by a combination of four selection bits.

Additional information about binary selection can be found in function diagram 3010 in the List Manual.

Parameter for setting the fixed setpoints

Parameter	Description
p1001	Fixed speed setpoint 1 (factory setting: 0 rpm)
p1002	Fixed speed setpoint 2 (factory setting: 0 rpm)
...	...
p1015	Fixed speed setpoint 15 (factory setting: 0 rpm)
p1016	Fixed speed setpoint mode (factory setting: 1)
	1: Direct
	2: Binary
p1020	Fixed speed setpoint selection bit 0 (factory setting: 0)
p1021	Fixed speed setpoint selection bit 1 (factory setting: 0)
p1022	Fixed speed setpoint selection bit 2 (factory setting: 0)
p1023	Fixed speed setpoint selection bit 3 (factory setting: 0)
r1024	Fixed speed setpoint effective
r1025.0	Fixed speed setpoint status
	1 signal Fixed speed setpoint is selected

Example: Select two fixed setpoints directly

The motor should operate at different speeds as follows:

- The signal on digital input 0 switches the motor on and accelerates it to 300 rpm.
- The signal at digital input 1 accelerates the motor to 2000 rpm.
- The signals at the two digital inputs accelerate the motor to 2300 rpm.

Table 8- 13 Settings for the example

Parameter	Description
p1001 = 300.000	Fixed speed setpoint 1 [rpm]
p1002 = 2000.000	Fixed speed setpoint 2 [rpm]
p0840 = 722.0	ON/OFF1: Switch on motor with digital input 0
p1070 = 1024	Main setpoint: Interconnect the main setpoint with the fixed speed setpoint.
p1020 = 722.0	Speed fixed setpoint selection Bit 0: Interconnect fixed setpoint 1 with digital input 0 (DI 0).
p1021 = 722.1	Fixed speed setpoint selection bit 1: Interconnects fixed setpoint 2 with digital input 1 (DI 1).
p1016 = 1	Fixed speed setpoint mode: Select direct selection of the fixed setpoints.

Table 8- 14 Resulting fixed setpoints for the example above

Fixed setpoint selected by	Resulting setpoint
DI 0 = 0	Motor stops
DI 0 = 1 and DI 1 = 0	300 rpm
DI 0 = 1 and DI 1 = 1	2300 rpm

8.4 Setpoint calculation

8.4.1 Overview of setpoint processing



The setpoint can be modified as follows using the setpoint processing:

- Invert setpoint to reverse the motor direction of rotation (reversing).
- Inhibit positive or negative direction of rotation, e.g. for conveyor belts, pumps or fans.
- Skip frequency bands to prevent mechanical resonance effects.

The skip frequency band at speed = 0 results in a minimum speed after switching on the motor.

- Limit to a maximum speed to protect the motor and mechanical system.
- Ramp-function generator to accelerate and brake the motor with an optimum torque.


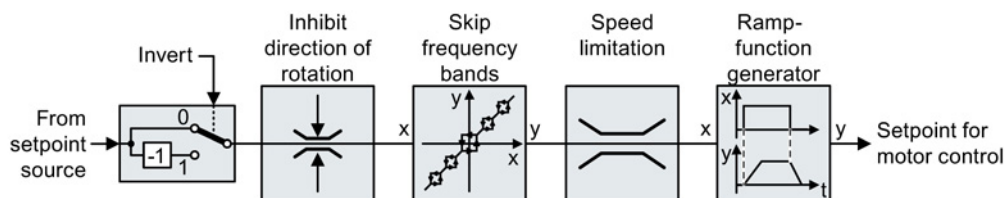


Figure 8-18 Setpoint processing in the converter

8.4.2 Invert setpoint

The inverter provides an option to invert the setpoint sign using a bit. As an example, the setpoint inversion is shown through a digital input.

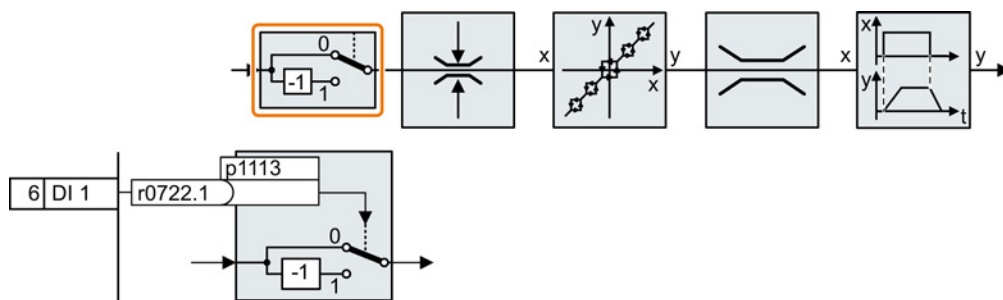


In order to invert the setpoint through the digital input DI 1, connect the parameter p1113 with a binary signal, e.g. the digital input 1.

Table 8- 15 Examples of settings to invert the setpoint

Parameter	Remark
p1113 = 722.1	Setpoint inversion Digital input 1 = 0: Setpoint remains unchanged. Digital input 1 = 1: Inverter inverts the setpoint.
p1113 = 2090.11	Invert setpoint via control word 1, bit 11.

8.4.3 Enable direction of rotation

In the factory setting of the inverter, the negative direction of rotation of the motor is inhibited.

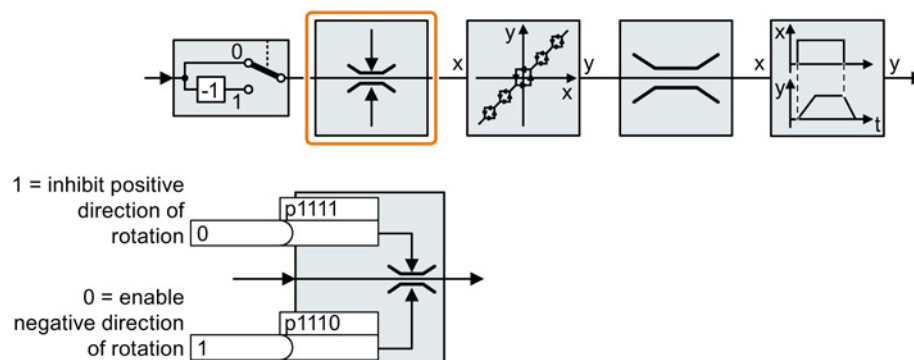

If you want to permanently enable the negative direction of rotation, then set parameter p1110 to 0.

Set parameter p1111 = 1 to permanently inhibit the positive direction of rotation.

Table 8- 16 Examples of settings to inhibit the direction of rotation

Parameter	Remark
p1110 = 1	Inhibit negative direction Negative direction is permanently inhibited.
p1110 = 722.3	Inhibit negative direction Digital input 3 = 0: Negative direction of rotation is enabled. Digital input 3 = 1: Negative direction of rotation is inhibited.


8.4.4 Skip frequency bands and minimum speed

Skip frequency bands

The converter has four skip frequency bands that prevent continuous motor operation within a specific speed range. You can find additional information in function diagram 3050 of the List Manual, see also: Manuals for your inverter (Page 377).

Minimum speed

The converter prevents continuous motor operation at speeds < minimum speed.

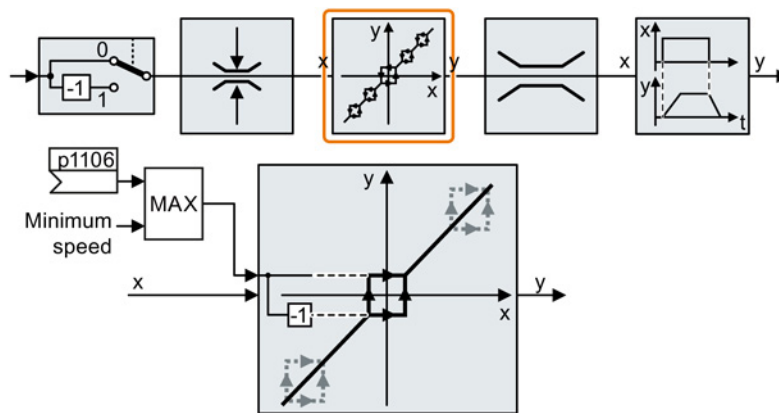


Speeds where the absolute value is less than the minimum speed are only possible during motor operation when accelerating or braking.

Table 8- 17 Setting the minimum speed

Parameter	Description
p1080	Minimum speed (factory setting: 0 rpm)
p1106	CI: Minimum speed signal source (factory setting: 0) Dynamic specification of the minimum speed

8.4.5 Speed limitation

The maximum speed limits the speed setpoint range for both directions of rotation.

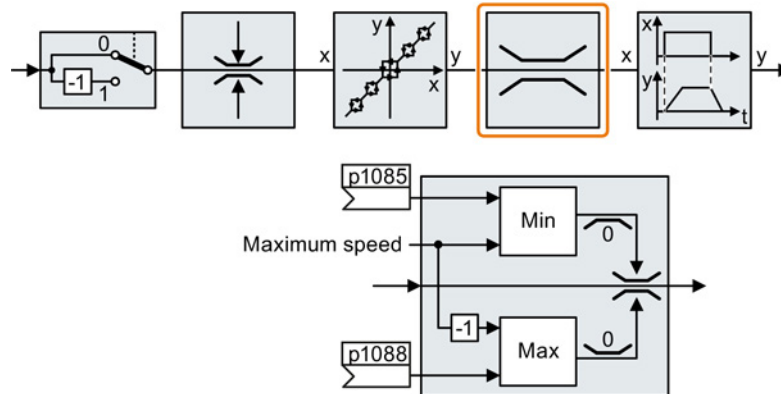

The converter generates a message (fault or alarm) when the maximum speed is exceeded. If you must limit the speed depending on the direction of rotation, then you can define speed limits for each direction.

Table 8- 18 Parameters for the speed limitation

Parameter	Description
p1082	Maximum speed (factory setting: 1500 rpm)
p1083	Speed limit, positive direction of rotation (factory setting: 210,000 rpm)
p1085	CI: Speed limit, positive direction of rotation (factory setting: 1083)
p1086	Speed limit, negative direction of rotation (factory setting: -210,000 rpm)
p1088	CI: Speed limit, negative direction of rotation (factory setting: 1086)

8.4.6 Ramp-function generator

The ramp-function generator in the setpoint channel limits the rate that the speed setpoint changes. As a consequence the motor accelerates and brakes more softly, reducing the stress on the mechanical system of the driven machine.



The ramp-function generator is not active if the technology controller in the inverter specifies the speed setpoint.

Simple ramp-function generator

This inverter always uses the extended ramp-function generator. Consequently, the simple ramp-function generator is not described in this manual.

Extended ramp-function generator

The ramp-up and ramp-down times of the extended ramp-function generator can be set independently of each other. The optimum times that you select depend on your particular application in question and can range from just a few 100 ms (e.g. for belt conveyor drives) to several minutes (e.g. for centrifuges).

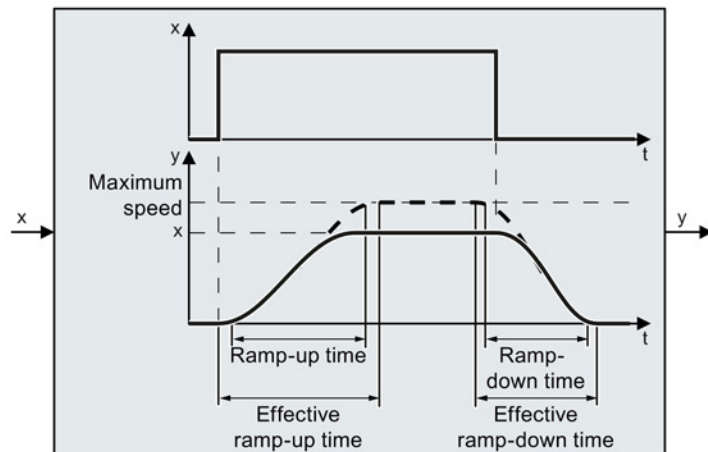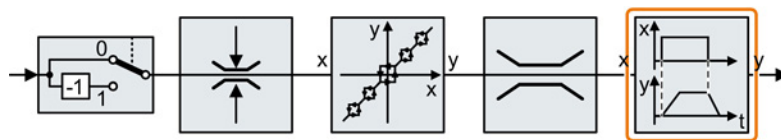

Initial and final rounding permit smooth, jerk-free acceleration and braking.

The ramp-up and ramp-down times of the motor are increased by the rounding times:

- Effective ramp-up time = $p1120 + 0.5 \times (p1130 + p1131)$.
- Effective ramp-down time = $p1121 + 0.5 \times (p1130 + p1131)$.

Table 8- 19 Additional parameters to set the extended ramp-function generator

Parameter	Description	
p1120	Ramp-function generator, ramp-up time (factory setting depends on the Power Module) Duration of acceleration (in seconds) from zero speed to maximum speed P1082	
p1121	Ramp-function generator, ramp-down time (factory setting depends on the Power Module) Braking time in seconds from the maximum speed down to standstill	
p1130	Ramp-function generator initial rounding time (factory setting: 0 s) Initial rounding for the extended ramp-function generator. The value applies for ramp up and ramp down.	
p1131	Ramp-function generator final rounding time (factory setting: 0 s) Final rounding for the extended ramp-function generator. The value applies for ramp up and ramp down.	
p1134	Ramp-function rounding type (factory setting: 0) 0: Continuous smoothing 1: Discontinuous smoothing	
p1135	OFF3 ramp-down time (factory setting depends on the Power Module)	
p1136	OFF3 initial rounding time (factory setting: 0 s) Initial rounding for OFF3 for the extended ramp-function generator.	
p1137	OFF3 final rounding time (factory setting: 0 s) Final rounding for OFF3 for the extended ramp-function generator.	

You can find more information in function diagram 3070 and in the parameter list of the List Manual.

Setting the extended ramp-function generator



Procedure

Proceed as follows to set the extended ramp-function generator:

1. Enter the highest possible speed setpoint.
2. Switch on the motor.
3. Evaluate your drive response.
 - If the motor accelerates too slowly, then reduce the ramp-up time.

An excessively short ramp-up time means that the motor will reach its current limiting when accelerating, and will temporarily not be able to follow the speed setpoint. In this case, the drive exceeds the set time.
 - If the motor accelerates too fast, then extend the ramp-up time.
 - Increase the initial rounding if the acceleration is jerky.
 - We recommend that you set the final rounding to the same value as the initial rounding.
4. Switch off the motor.
5. Evaluate your drive response.
 - If the motor decelerates too slowly, then reduce the ramp-down time.

The minimum ramp-down time that makes sense depends on your particular application. Depending on the Power Module used, for an excessively short ramp-down time, the converter either reaches the motor current, or the DC link voltage in the converter becomes too high. Depending on the converter setting, the real braking time exceeds the set ramp-down time, or the converter goes into a fault condition when braking.
 - Extend the ramp-down time if the motor is braked too quickly or the converter goes into a fault condition when braking.
6. Repeat steps 1 ... 5 until the drive behavior meets the requirements of the machine or plant.



You have set the extended ramp-function generator.

8.5 Motor control



Decision-making criteria for the control mode that is suitable for your application is provided in Section Selecting the control mode (Page 88)

8.5.1 V/f control

U/f control sets the voltage at the motor terminals on the basis of the specified speed setpoint.

The relationship between the speed setpoint and stator voltage is calculated using characteristic curves. The required output frequency is calculated on the basis of the speed setpoint and the number of pole pairs of the motor ($f = n * \text{number of pole pairs} / 60$, in particular: $f_{\max} = p1082 * \text{number of pole pairs} / 60$).

The inverter provides the two most important characteristics (linear and square-law). User-defined characteristic curves are also supported.


U/f control is not a high-precision method of controlling the speed of the motor. The speed setpoint and the speed of the motor shaft are always slightly different. The deviation depends on the motor load.

If the connected motor is loaded with the rated torque, the motor speed is below the speed setpoint by the amount of the rated motor slip. If the load is driving the motor (i.e. the motor is operating as a generator), the motor speed is above the speed setpoint.

Parameter p1300 sets the characteristic curve.

8.5.1.1 Characteristics of U/f control

The inverter has several V/f characteristics. Based on the characteristic, as the frequency increases, the inverter increases the voltage at the motor.

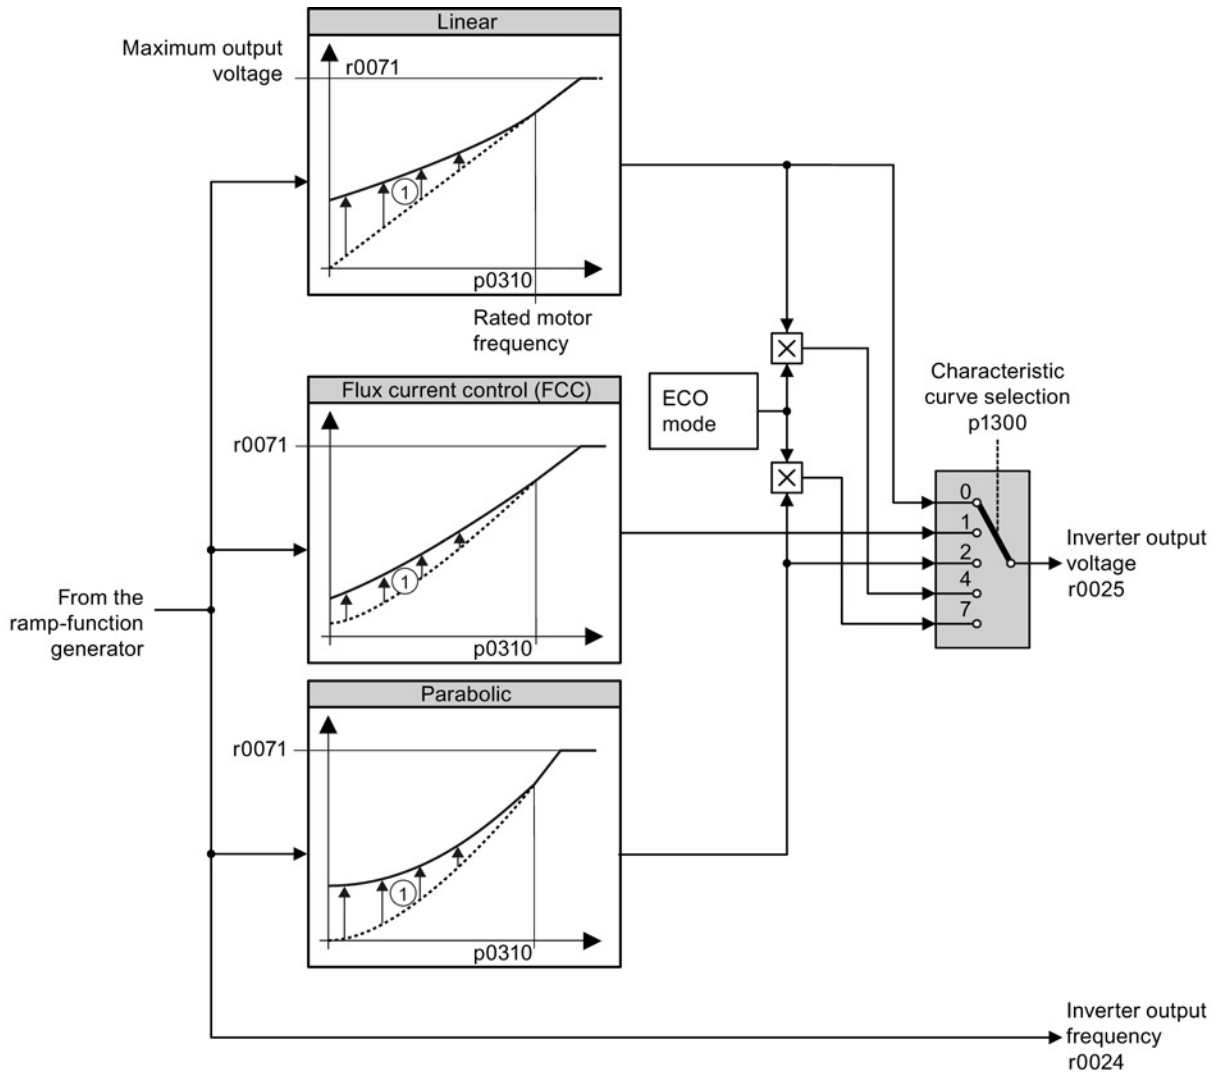

- ① The voltage boost of the characteristic improves motor behavior at low speeds. The voltage boost is effective for frequencies < rated frequency

Figure 8-19 V/f characteristics of the inverter

The inverter increases its output voltage – also above the motor rated speed up to the maximum output voltage. The higher the line voltage, the higher the maximum inverter output voltage.

If the inverter has reached its maximum output voltage, then it can only increase its output frequency. From this point onwards, the motor is operated in field weakening; this means that the available torque linearly decreases with increasing speed.

The value of the output voltage at the rated motor frequency also depends on the following variables:

- Ratio between the inverter size and the motor size
- Line voltage
- Line impedance
- Actual motor torque

The maximum possible output voltage as a function of the input voltage is provided in the technical data, also see Section Technical data, Power Modules (Page 311).

8.5.1.2 Selecting the V/f characteristic

Table 8- 20 Linear and parabolic characteristics

Requirement	Application examples	Remark	Characteristic	Parameter
The required torque is independent of the speed	Eccentric-worm pump, compressor	-	Linear	p1300 = 0
		The inverter equalizes the voltage drops across the stator resistance. Recommended for motors less than 7.5 kW. Precondition: You have set the motor data according to the rating plate and have performed the motor identification after the basic commissioning.	Linear with Flux Current Control (FCC)	p1300 = 1
The required torque increases with the speed	Centrifugal pumps, radial fans, axial fans, compressors	Lower losses in the motor and inverter than for a linear characteristic.	Parabolic	p1300 = 2

Table 8- 21 Characteristics for special applications


Requirement	Application examples	Remark	Characteristic	Parameter
Applications with a low dynamic response and constant speed	Centrifugal pumps, radial fans, axial fans	The ECO mode results in additional energy saving when compared to the parabolic characteristic. If the speed setpoint is reached and remains unchanged for 5 seconds, the inverter again reduces its output voltage.	ECO mode	p1300 = 4 (linear characteristic ECO) or p1300 = 7 (parabolic characteristic ECO)

Additional information on V/f characteristics can be found in the parameter list and in the function diagrams 6300 ff of the List Manual.

8.5.1.3 Optimizing with a high break loose torque and brief overload

Setting the voltage boost for U/f control

The voltage boost acts on every U/f characteristic. The adjacent diagram shows the voltage boost using a linear characteristic as example.

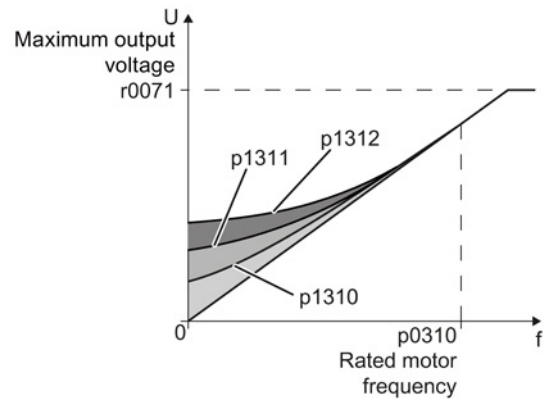

Procedure



Proceed as follows to set the voltage boost:

Only increase the voltage boost in small steps. Excessively high values in p1310 ... p1312 can cause the motor to overheat and switch off (trip) the inverter due to overcurrent.

1. Power-up the motor with an average speed.
2. Reduce the speed to just a few revolutions per minute.
3. Check whether the motor rotates smoothly.
4. If the motor does not rotate smoothly, or even remains stationary, increase the voltage boost p1310 until you are satisfied with the motor behavior.
5. Accelerate the motor to the maximum speed with maximum load and check as to whether the motor follows the setpoint.
6. If, when accelerating, the motor stalls, increase the voltage boost p1311 until the motor accelerates to the maximum speed without any problems.

To achieve satisfactory motor behavior, you must increase the parameter p1312 only in applications with a significant breakaway torque.

You will find more information about this function in the parameter list and in function diagram 6300 of the List Manual.



You have set the voltage boost.

Parameter	Description
p1310	Permanent voltage boost (factory setting 50%) Compensates voltage drops as a result of long motor cables and the ohmic losses in the motor.
p1311	Voltage boost when accelerating (factory setting 0%) Provides additional torque when the motor accelerates.
p1312	Voltage boost when starting (factory setting 0%) Provides additional torque, however, only when the motor accelerates for the first time after it has been switched on ("break loose torque").

8.5.2 Vector control

8.5.2.1 Properties of the sensorless vector control

Sensorless vector control

Using a motor model, the vector control calculates the load and the motor slip. As a result of this calculation, the converter controls its output voltage and frequency so that the motor speed follows the setpoint, independent of the motor load.

Vector control is possible without directly measuring the motor speed and is therefore also called "sensorless vector control".

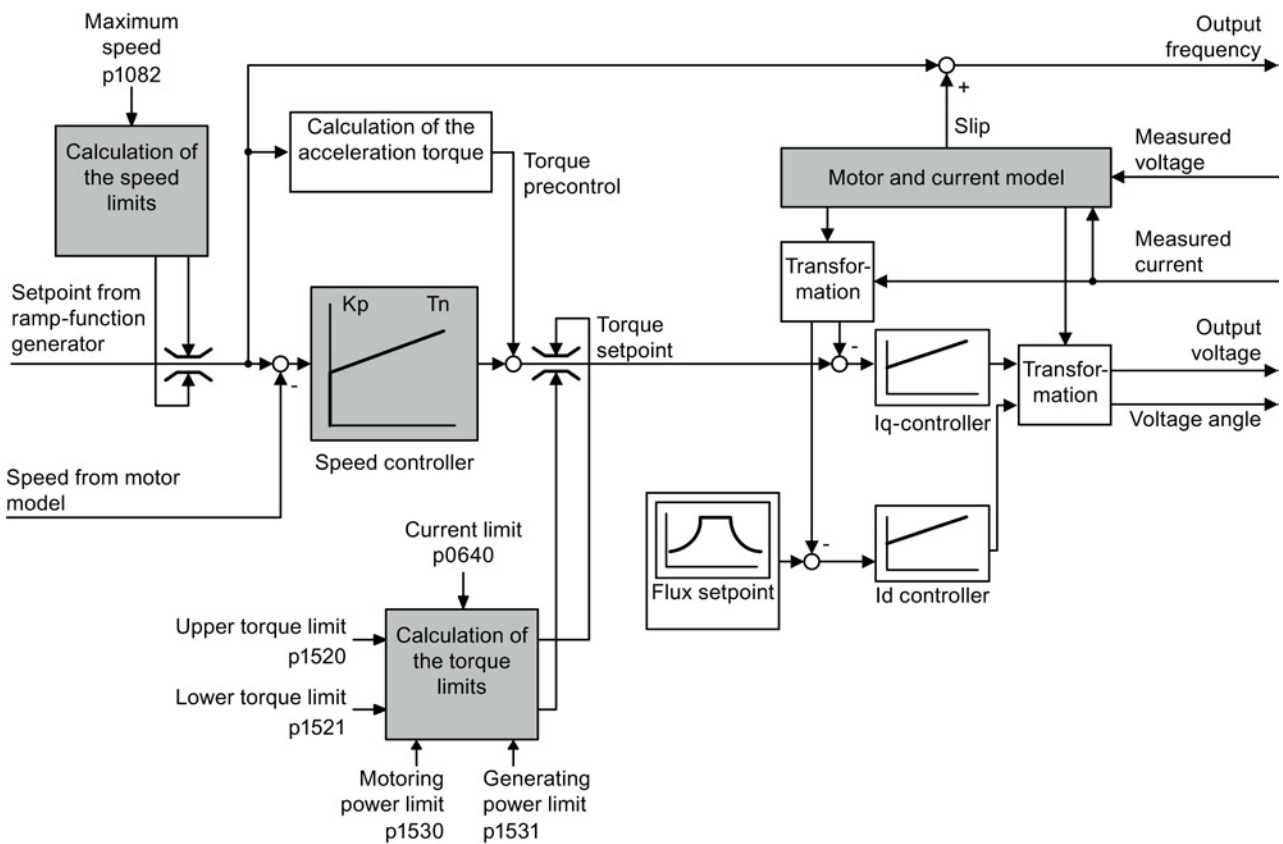


Figure 8-20 Simplified function diagram of sensorless vector control

You can find additional information on the vector control in the List Manual in function diagrams 6020 ff.

8.5.2.2 Select motor control

Vector control is already preset

To achieve a good controller response, you must adapt the elements marked in gray in the figure in the overview diagram above. If you selected vector control as control mode in the basic commissioning, you will have already set the following:

- The maximum speed for your application.
- The motor and current model: If the motor data in the inverter correspond to the motor data on the rating plate, then the motor and current model in the inverter are correct and the vector control can operate satisfactorily.
- The inverter calculates the torque limits matching the current limit that you have set for the basic commissioning.
Regardless of it, you can also set additional positive and negative torque limits or limit the power of the motor.
- The inverter has a preset speed controller with self-optimization (rotating measurement).
If you want to continue to optimize this setting, follow the instructions further down in this chapter.


Select encoderless vector control

Set p1300 = 20.

8.5.2.3 Optimizing the speed controller


Optimum control response - post optimization not required

You do not have to manually adapt the speed controller if, after the speed controller self optimization, the motor manifests the following acceleration response:

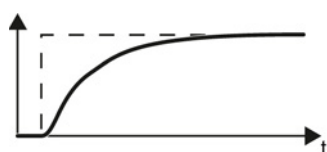

Optimum control response for applications that do not permit any overshoot.

The actual value approaches the setpoint without any significant overshoot.

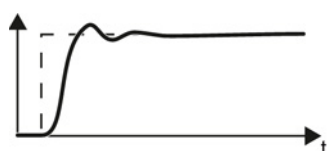

Optimum control response for fast correction and quick compensation of noise components.

The actual value approaches the setpoint and slightly overshoots, maximum 10% of the setpoint step.

Control optimization required

In some cases, the self optimization result is not satisfactory, or the inverter cancels the self-optimization routine with a fault. Further, self optimization is not permissible in plants and systems in which the motor cannot freely rotate.

In these cases you must manually optimize the speed controller.

The examples listed below show you which variables you can use to adapt the control response.

The basic procedure is described in the following section for STARTER and the operator panel.

- K_P (p1470) Proportion share
- T_N (p1472) Integration time

Optimizing the speed controller

Procedure



To optimize the speed controller, proceed as follows:

1. Temporarily set the times of the ramp-function generator $p1120 = 0$ and $p1121 = 0$.
2. Temporarily set the pre-control of the speed controller $p1496 = 0$.
3. Enter a setpoint step and monitor the associated actual value, e.g. using the trace function in STARTER.
4. Optimize the controller by adjusting the controller parameters K_P and T_N .

	<p>The actual value only slowly approaches the setpoint.</p> <ul style="list-style-type: none"> • Increase the proportional component K_P and reduce the integration time T_N.
	<p>The actual value quickly approaches the setpoint, but overshoots too much.</p> <ul style="list-style-type: none"> • Decrease the proportional component K_P and increase the integration time T_N.

5. Set the ramp-up and ramp-down times of the ramp-function generator back to their original value.
6. Set the pre-control of the closed-loop speed controller to $p1496 = 100\%$.



You have optimized the speed controller.

8.6 Protection and monitoring functions



The frequency inverter offers protective functions against overtemperature and overcurrent for both the frequency inverter as well as the motor. Further, the frequency inverter protects itself against an excessively high DC link voltage when the motor is regenerating.

8.6.1 Inverter temperature monitoring

The inverter temperature is essentially defined by the following effects:

- The ambient temperature
- The ohmic losses increasing with the output current
- Switching losses increasing with the pulse frequency

Monitoring types

The inverter monitors its temperature using the following monitoring types:

- I²t monitoring (alarm A07805, fault F30005)
 - The I²t monitoring calculates the inverter utilization on the basis of a current reference value predefined by the factory.
 - Actual current > reference value: The actual value of the utilization increases.
 - Actual current < reference value: The actual value of the utilization decreases or remains = 0.
- Measuring the chip temperature of the Power Module (alarm A05006, fault F30024)
- Measuring the heat sink temperature of the Power Module (alarm A05000, fault F30004)

Inverter response to thermal overload

Parameter	Description
r0036	Power unit overload I²t [%]
r0037	Power unit temperatures [°C]
p0290	<p>Power unit overload response</p> <p>Factory setting and the ability to be changed depends on the hardware. The dependency is described in the List Manual.</p> <p>A thermal overload is present if the inverter temperature is greater than that specified in p0292.</p> <p>You define how the inverter responds if there is a risk of thermal overload using this parameter. The details are described below.</p>
p0292	<p>Power unit temperature warning threshold (factory setting: Heat sink [0] 5 °C, power semiconductor [1] 15 °C)</p> <p>The value is set as a difference to the shutdown temperature.</p>
p0294	Power unit warning at I²t overload (factory setting: 95 %)

Overload response for p0290 = 0

The inverter responds depending on the control mode that has been set:

- In vector control, the inverter reduces the output current.
- In U/f control, the inverter reduces the speed.

Once the overload condition has been removed, the inverter re-enables the output current or speed.

If the measure cannot prevent an inverter thermal overload, then the inverter switches off the motor with fault F30024.

Overload response for p0290 = 1

The inverter immediately switches off the motor with fault F30024.

Overload response for p0290 = 2

We recommend this setting for drives with square-law torque characteristic, e.g. fans.

The inverter responds in two stages:

1. If you operate the inverter with increased pulse frequency setpoint p1800, then the inverter reduces its pulse frequency starting at p1800.

In spite of the temporarily reduced pulse frequency, the base load output current remains unchanged at the value that is assigned to p1800.

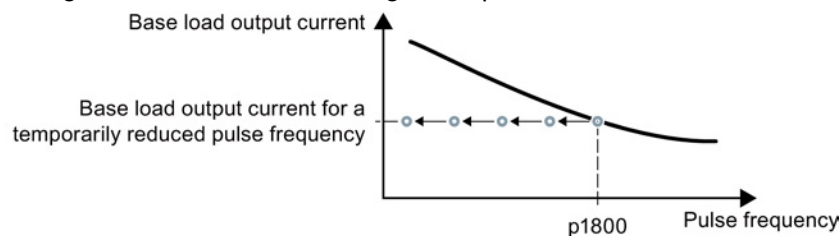


Figure 8-21 Derating characteristic and base load output current for overload

Once the overload condition has been removed, the inverter increases the pulse frequency back to the pulse frequency setpoint p1800.

2. If it is not possible to temporarily reduce the pulse frequency, or the risk of thermal overload cannot be prevented, then stage 2 follows:

- In vector control, the inverter reduces its output current.
- In U/f control, the inverter reduces the speed.

Once the overload condition has been removed, the inverter re-enables the output current or speed.

If both measures cannot prevent a power unit thermal overload, then the inverter switches off the motor with fault F30024.

Overload response for p0290 = 3

If you operate the inverter with increased pulse frequency, then the inverter reduces its pulse frequency starting at the pulse frequency setpoint p1800.

In spite of the temporarily reduced pulse frequency, the maximum output current remains unchanged at the value that is assigned to the pulse frequency setpoint. Also see p0290 = 2.

Once the overload condition has been removed, the inverter increases the pulse frequency back to the pulse frequency setpoint p1800.

If it is not possible to temporarily reduce the pulse frequency, or the measure cannot prevent a power unit thermal overload, then the inverter switches off the motor with fault F30024.

Overload response for p0290 = 12

The inverter responds in two stages:

1. If you operate the inverter with increased pulse frequency setpoint p1800, then the inverter reduces its pulse frequency starting at p1800.

There is no current derating as a result of the higher pulse frequency setpoint.

Once the overload condition has been removed, the inverter increases the pulse frequency back to the pulse frequency setpoint p1800.

2. If it is not possible to temporarily reduce the pulse frequency, or the risk of inverter thermal overload cannot be prevented, then stage 2 follows:

- In vector control, the inverter reduces the output current.
- In U/f control, the inverter reduces the speed.

Once the overload condition has been removed, the inverter re-enables the output current or speed.

If both measures cannot prevent a power unit thermal overload, then the inverter switches off the motor with fault F30024.

Overload response for p0290 = 13

We recommend this setting for drives with high starting torque, e.g. horizontal conveyors or extruders.

If you operate the inverter with increased pulse frequency, then the inverter reduces its pulse frequency starting at the pulse frequency setpoint p1800.

There is no current derating as a result of the higher pulse frequency setpoint.

Once the overload condition has been removed, the inverter increases the pulse frequency back to the pulse frequency setpoint p1800.

 
If it is not possible to temporarily reduce the pulse frequency, or the measure cannot prevent a power unit thermal overload, then the inverter switches off the motor with fault F30024.

8.6.2 Motor temperature monitoring using a temperature sensor


Connecting the temperature sensor

It is permissible to use one of the following sensors to protect the motor against overtemperature:


- Temperature switch (e.g. bimetallic switch)
- PTC sensor
- KTY84 sensor



Temperature switch

 

PTC sensor

 

The converter interprets a resistance $< 20 \Omega$ as being a short-circuit and responds with alarm A07015. If the alarm is present for longer than 100 milliseconds, the converter shuts down with fault F07016.

 
KTY84 sensor

NOTICE

Motor overheating due to incorrectly connected KTY sensor

If a KTY sensor is connected with incorrect polarity, the motor can become damaged due to overheating, as the converter cannot detect a motor overtemperature condition.

- Connect the KTY sensor with the correct polarity.



- Temperature monitoring:
The converter uses a KTY sensor to evaluate the motor temperature in the range from -48°C ... $+248^\circ \text{C}$.
Use the p0604 or p0605 parameter to set the temperature for the alarm and fault threshold.

- Overtemperature alarm (A07910):
 - motor temperature > p0604 and p0610 = 0
- Overtemperature fault (F07011):

The converter switches off with fault in the following cases:

 - motor temperature > p0605
 - motor temperature > p0604 and p0610 ≠ 0
- Sensor monitoring (A07015 or F07016):
 - Wire-break:

The converter interprets a resistance > 2120 Ω as a wire-break and outputs the alarm A07015. After 100 milliseconds, the converter changes to the fault state with F07016.
 - Short-circuit:

The converter interprets a resistance < 50 Ω as a short-circuit and outputs the alarm A07015. After 100 milliseconds, the converter changes to the fault state with F07016.

Setting parameters for the temperature monitoring

Parameter	Description
p0335	Specify the motor cooling 0: Natural cooling - with fan on the motor shaft (factory setting) 1: Forced ventilation - with a separately driven fan 2: Liquid cooling 128: No fan
p0601	Motor-temperature sensor type 0: No sensor (factory setting) 1: PTC (→ p0604) 2: KTY84 (→ p0604, p0605) 4: Temperature switch
p0604	Motor temperature alarm threshold (factory setting 130° C)
p0605	Motor temperature fault threshold (factory setting 145° C) Setting for KTY84 sensor. The parameter has no significance for a PTC sensor.
p0610	Motor overtemperature response (factory setting: 12) Determines the behavior as soon as the motor temperature reaches the warning threshold p0604. 0: Alarm (A07910), no fault. 1: Alarm (A07910); the converter reduces the current limit and starts the timer. Shutdown with fault (F07011). 2: Alarm (A07910); the converter starts the timer. Shutdown with fault (F07011). 12: As for 2, but the converter considers the last shutdown temperature to calculate the motor temperature.
p0640	Current limit (input in A)

Additional information on the motor temperature monitoring can be found in function diagram 8016 of the List Manual.

8.6.3 Protecting the motor by calculating the motor temperature

The converter calculates the motor temperature based on a thermal motor model. Use the parameters below to set further variables for the temperature calculation of the motor.

Table 8- 22 Parameters for temperature acquisition without using a temperature sensor

Parameter	Description
p0601	Motor temperature sensor type (factory setting: 0) 0: No sensor
p0604	Mot_temp_mod 2/KTY Warning threshold (factory setting: 130 °C) Threshold for monitoring the motor temperature.. After exceeding the threshold, the converter reports fault F07011.
p0605	Mot_temp_mod 1/2 Threshold (factory setting: 145 °C) Timer for monitoring the motor temperature in motortemperature model 2.. The converter starts the timer when the temperature warning threshold is exceeded (p0604).
p0610	Motor overtemperature response (factory setting: 12) Determines the behavior as soon as the motor temperature reaches the warning threshold p0604.
	0: Warning (A07910), no fault.
	1: Warning (A07910); current limit will be reduced and timer started. Shutdown with fault (F07011).
	2: Warning (A07910); timer is started. Shutdown with fault (F07011).
12: As for 2 but the last shutdown temperature is used to calculate the motor temperature (factory setting).	
p0611	I2t motor model thermal time constant (factory setting: 0 s) The parameter is only effective for synchronous motors. On selecting a motor from the motor list (p0301), the converter sets up the parameter value automatically.
p0612	Mot_temp_mod activation
	.00 1 signal: Activate motor temperature model 1 (I2t) for permanently excited synchronous motors
	.01 1 signal: Activate motor temperature model 2 for asynchronous motors
	.02 1 signal: Activate motor temperature model 3 for 1FK7 encoderless synchronous motors
.09 1 signal: Activate motor temperature model 2 expansions	
p0615	Mot_temp_mod 1 (I2t) Interference threshold (factory setting: 180 °C) Interference threshold for monitoring the motor temperature in motortemperature model 1. After exceeding the interference threshold, the converter reports fault F07011.

Parameter	Description
p0621	Identification of stator resistance (Rs) when switched on again (factory setting: 0) The converter measures the current stator resistance and from this calculates the current motor temperature as the start value of the thermal motor model.
	0: No Rs identification
	1: Rs identification on first switching on the motor
	2: Rs identification each time the motor is switched on
p0622	Motor excitation time for Rs_ident on switching on again The converter sets the parameter value to the corresponding result of the motor data identification.
p0625	Motor ambient temperature during commissioning (factory setting: 20 °C) Motor ambient temperature given in °C at the time of motor data identification.

More information on temperature calculation can be found in function plans 8016 and 8017 and the list manual.

8.6.4 Overcurrent protection

The vector control ensures that the motor current remains within the set torque limits.

If you use U/f control, you cannot set any torque limits. The U/f control prevents too high a motor current by influencing the output frequency and the motor voltage (I-max controller).

I_max controller

Requirements

The torque of the motor must decrease at lower speeds, which is the case, for example, with fans.

The load must not drive the motor continuously, e.g. when lowering hoisting gear.

Function

The I-max controller influences the output frequency and the motor voltage.

If the motor current reaches the current limit during acceleration, the I-max controller extends the acceleration operation.

If the load of the motor is so large during stationary operation that the motor current reaches the current limit, the I-max controller reduces the speed and the motor voltage until the motor current is in the permissible range again.

If the motor current reaches the current limit during deceleration, the I-max controller extends the deceleration operation.

Settings

You only have to change the factory settings of the I-max controller if the drive tends to oscillate when it reaches the current limit or if it is shut down due to overcurrent.

Table 8- 23 I-max controller parameters

Parameter	Description
p0305	Rated motor current
p0640	Motor current limit
p1340	Proportional gain of the I-max controller for speed reduction
p1341	Integral time of the I-max controller for speed reduction
r0056.13	Status: I-max controller active
r1343	Speed output of the I-max controller Shows the amount to which the I-max controller reduces the speed.

For more information about this function, see function diagram 6300 in the List Manual.

8.6.5 Limiting the maximum DC link voltage

How does the motor generate overvoltage?

An induction motor operates as a generator if it is driven by the connected load. A generator converts mechanical power into electrical power. The electrical power flows back into the inverter and causes V_{DC} in the inverter to increase.

Above a critical DC-link voltage both the inverter and the motor will be damaged. Before harmful voltages occur, the inverter switches off the connected motor with the fault

"DC-link overvoltage".

Protecting the motor and inverter against overvoltage

The V_{dc_max} control can be used with the PM230, PM240, PM240-2 and PM330 Power Modules. To the extent the application permits, the V_{dc_max} control prevents the DC-link voltage from reaching critical levels. The V_{dc_max} control increases the ramp-down time of the motor during braking, so that the motor feeds back only as little power to the inverter as is covered by the losses in the inverter.

The V_{dc_max} control is not suitable for applications where the motor is continuously in the generator mode. This includes, for example, cranes or applications involving braking large moments of inertia. Further information on inverter braking methods can be found in Section Electrically braking the motor (Page 195).

There are two different groups of parameters for the V_{dc_max} control, depending on whether the motor is being operated with U/f control or vector control.

Parameter for V/f control	Parameter for vector control	Description
p1280 = 1	p1240 = 1	Vdc_max control Vdc monitoring configuration (factory setting: 1) 1: Enable Vdc_max control
r1282	r1242	Vdc_max control activation level Shows the value of the DC-link voltage above which the Vdc_max control is active
p1283	p1243	Vdc_max control dynamic factor (factory setting: 100 %) Scaling control parameters p1290, p1291 and p1292
p1284	---	Vdc_max controller time threshold Setting for the monitoring time of the Vdc_max controller.
p1290	p1250	Vdc_max control proportional gain (factory setting: 1)
p1291	p1251	Vdc_max control integral time (factory setting p1291: 40 ms, factory setting p1251: 0 ms)
p1292	p1252	Vdc_max control rate time (factory setting p1292: 10 ms, factory setting p1252: 0 ms)
p1294	p1254	Vdc_max control automatic sensing ON level (factory setting p1294: 0, factory setting p1254: PM330/PM240 = 1, PM230 = 0) Activates or deactivates automatic detection of the switch-on levels of the Vdc_max control. 0: Automatic detection disabled 1: Automatic detection enabled
p0210	p0210	Unit supply voltage If p1254 or p1294 = 0, the inverter uses this parameter to calculate the switch-in thresholds of the Vdc_max control. Set this parameter to the actual value of the input voltage.

For more information about this function, see the List Manual (function diagrams 6320 and 6220).

8.7

Application-specific functions



The inverter offers a series of functions that you can use depending on your particular application, e.g.:

- Switching over units
- Braking functions
- Automatic restart and flying restart
- Basic process control functions
- Logical and arithmetic functions using function blocks that can be freely interconnected
- Energy-saving display for pumps and fans
- Essential service mode
- Multi-zone controller
- Cascade control
- Bypass
- Hibernation mode

Refer to the following sections for detailed descriptions.

8.7.1 Unit changeover

Description

With the unit changeover function, you can adapt the inverter to the line supply (50/60 Hz) and also select US units or SI units as base units.

Independent of this, you can define the units for process variables or change over to percentage values.

Specifically, you have the following options:

- Changing over the motor standard (Page 189) IEC/NEMA (adaptation to the line supply)
- Changing over the unit system (Page 190)
- Changing over process variables for the technology controller (Page 190)

Note

The motor standard, the unit system as well as the process variables can only be changed offline.

The procedure is described in Section Switching units with STARTER (Page 191).

Restrictions for the unit changeover function

- The values on the rating plate of the inverter or motor cannot be displayed as percentage values.
- Using the unit changeover function several times (for example, percent → physical unit 1 → physical unit 2 → percent) may lead to the original value being changed by one decimal place as a result of rounding errors.
- If the unit is changed over into percent and the reference value is then changed, the percentage values relate to the new reference value.
Example:
 - For a reference speed of 1500 rpm, a fixed speed of 80% corresponds to a speed of 1200 rpm.
 - If the reference speed is changed to 3000 rpm, then the value of 80% is kept and now means 2400 rpm.

Reference variables for unit changeover

p2000	Reference frequency/speed
p2001	Reference voltage
p2002	Reference current
p2003	Reference torque
r2004	Reference power
p2005	Reference angle
p2006	Reference temperature

8.7.1.1 Changing over the motor standard

You change over the motor standard using p0100. The following applies:

- p0100 = 0: IEC motor (50 Hz, SI units)
- p0100 = 1: NEMA motor (60 Hz, US units)
- p0100 = 2: NEMA motor (60 Hz, SI units)

The parameters listed below are affected by the changeover.

Table 8- 24 Variables affected by changing over the motor standard

P no.	Designation	Unit for p0100 =		
		0 ^{*)}	1	2
r0206	Power Module rated power	kW	HP	kW
p0307	Rated motor power	kW	HP	kW
p0316	Motor torque constant	Nm/A	lbf ft/A	Nm/A
r0333	Rated motor torque	Nm	lbf ft	Nm
r0334	Motor torque constant, actual	Nm/A	lbf ft/A	Nm/A
p0341	Motor moment of inertia	kgm ²	lb ft ²	kgm ²
p0344	Motor weight (for thermal motor type)	kg	Lb	kg
r1969	Speed_cont_opt moment of inertia determined	kgm ²	lb ft ²	kgm ²

*) Factory setting

8.7.1.2 Changing over the unit system

You change over the unit system using p0505. The following selection options are available:

- p0505 = 1: SI units (factory setting)
- p0505 = 2: SI units or % relative to SI units
- p0505 = 3: US units
- p0505 = 4: US units or % relative to US units

Note

Special features

The percentage values for p0505 = 2 and for p0505 = 4 are identical. For internal calculation and for the output of physical variables, it is, however, important whether the conversion is made to SI or US units.

In the case of variables for which changeover to % is not possible, the following applies:
p0505 = 1 \triangleq p0505 = 2 and p0505 = 3 \triangleq p0505 = 4.

In the case of variables whose units are identical in the SI system and US system, and which can be displayed as a percentage, the following applies:
p0505 = 1 \triangleq p0505 = 3 and p0505 = 2 \triangleq p0505 = 4.

Parameters affected by changeover

The parameters affected by changing over the unit system are grouped according to unit. An overview of the unit groups and the possible units can be found in the List Manual in the Section "Unit group and unit selection".

8.7.1.3 Changing over process variables for the technology controller

Note

We recommend that the units and reference values of the technology controller are coordinated and harmonized with one another during commissioning.

Subsequent modification in the reference variable or the unit can result in incorrect calculations or displays.

Changing over process variables of the technology controller

You change over the process variables of the technology controller using p0595. For physical values, you define the reference variable in p0596.

The parameters affected by changing over units of the technology controller belong to unit group 9_1. For details, please refer to the section titled "Unit group and unit choice" in the List Manual.

Switching the process variables of the additional technology controller 0

The process variables of the additional technology controller 0 switch over via p11026. You define the reference variable for absolute units in p11027.

The parameters affected by the unit switchover of the additional technology controller 0 belong to units group 9_2. Details can be found in the Parameter Manual, under the section entitled "units group and unit selection".

Switching the process variables of the additional technology controller 1

The process variables of the additional technology controller 1 switch over via p11126. You define the reference variable for absolute units in p11127.

The parameters affected by the unit switchover of the additional technology controller 1 belong to units group 9_3. Details can be found in the Parameter Manual, under the section entitled "units group and unit selection".

Switching the process variables of the additional technology controller 2

The process variables of the additional technology controller 2 switch over via p11226. You define the reference variable for absolute units in p11227.

The parameters affected by the unit switchover of the additional technology controller 2 belong to units group 9_4. Details can be found in the Parameter Manual, under the section entitled "units group and unit selection".

8.7.1.4 Switching units with STARTER

Precondition

The inverter must be in the offline mode in order to change over the units.

STARTER shows whether you change settings online in the inverter or change offline in the PC (**Online mode** / **Offline mode**).

You switch over the mode using the adjacent buttons in the menu bar.




Procedure



To change over the units, proceed as follows:

1. Select the configuration
2. Select the "Units" tab in the configuration screen form to change over the units.
3. Change the system of units
4. Select process variables of the technology controller
5. Select process variables of the additional technology controller 0
6. Select process variables of the additional technology controller 1
7. Select process variables of the additional technology controller 2
8. Adapt to the line supply

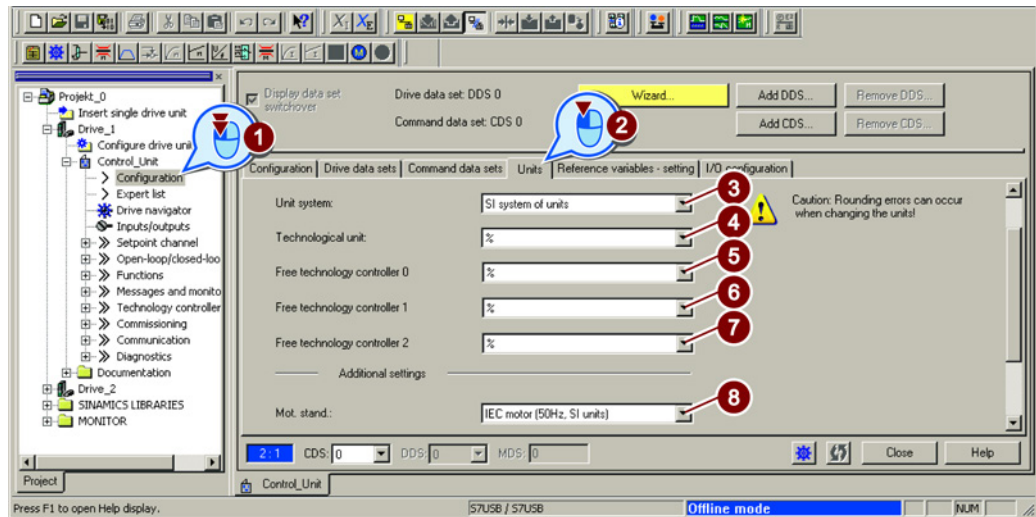

9. Save your settings.
10. Go online.
The inverter signals that offline, other units and process variables are set than in the inverter itself.
11. Accept these settings in the inverter.

	Online	Offline
CU type		
Unit system	inconsistent	inconsistent

If these differences are not adjusted, the online representation may be incomplete.

Adjust via:

<== Download Overwriting of the data in the target device

Load to PG ==> Overwriting of the data in the project

■ You have changed over the units.


8.7.2 Calculating the energy saving

Background

Fluid flow machines, which are used to control the flow rate using valves or throttles, run continuously at their rated speed. The lower the flow rate, the lower the system efficiency. The efficiency is the lowest when valves or throttles are completely closed. Further, undesirable effects can occur, e.g. the formation of vapor bubbles in liquids (cavitation) or the temperature rise of the medium being pumped increases.

The inverter controls the flow rate or the pressure by varying the speed of the fluid flow machine. As a consequence, over its complete operating range, a fluid-flow machine operates close to its maximum efficiency – and especially in partial load operation, uses less energy than for valve and throttle-based controls.

Function

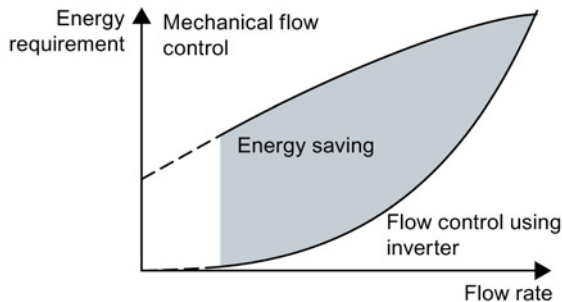

The inverter calculates the energy saving of flow control using the inverter compared to mechanical flow control based on the flow characteristics saved. The calculation is suitable for fluid-flow machines, e.g. centrifugal pumps, fans, radial and axial compressors.

Parameter	Description
p3320 ... p3329	<p>Flow characteristic</p> <p>(Speed, power)</p> <ul style="list-style-type: none"> ① (p3320, p3321) ② (p3322, p3323) ③ (p3324, p3325) ④ (p3326, p3327) ⑤ (p3328, p3329) <p>Factory setting of the flow characteristic</p>

Parameter	Description
r0039	Energy display (kWh)
	[0] Energy balance Energy usage since the last reset
	[1] Energy drawn since the last reset
	[2] Energy fed back since the last reset
p0040	Reset energy consumption display A signal change 0 → 1 sets r0039[0...2] = 0 and r0041 = 0.
r0041	Energy consumption saved (kWh) Energy saved referred to 100 operating hours. For less than 100 operating hours, the inverter interpolates the energy saving to 100 operating hours.

Adapting the flow characteristic

Precondition

You require the following data to calculate the system-specific flow characteristic:

- Flow characteristics of the system manufacturer
- System characteristics for 5 different flow rates

Procedure

Proceed as follows to adapt the operating characteristic:

1. For a drive connected directly to the line supply, calculate the corresponding speeds required for 5 different flow rates.
2. Based on the flow characteristic of the system, calculate the power that the drive requires for the different flow rates.
3. Enter the values into the characteristic.



■ You have adapted the flow characteristic, and you now obtain a precise result for the energy saving.

8.7.3 Electrically braking the motor

Regenerative power

If a motor electrically brakes the connected load and the mechanical power exceeds the electrical losses, then it works as a generator. The motor converts mechanical power by generating electrical power.


When the motor operates as a generator, it attempts to transfer the power generated to the inverter.

Main features of the braking functions

DC braking

DC braking prevents the motor operating as generator. The inverter impresses a DC current in the motor. The DC current brakes the motor. The motor converts the mechanical power of the load into heat.

- *Advantage:* The motor brakes the load without the inverter having to process the regenerative energy
- *Disadvantages:* Significant increase in the motor temperature; no defined braking characteristics; no constant braking torque; no braking torque at standstill; regenerative power is lost as heat; does not function when the line supply fails

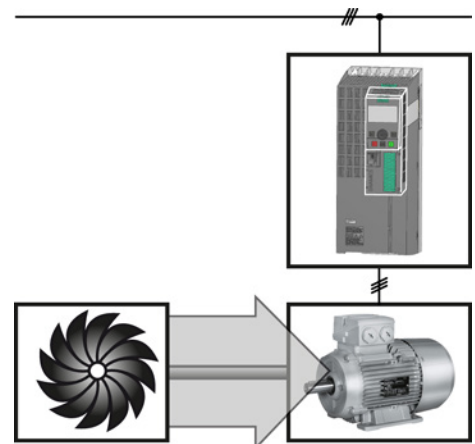


Compound braking

One version of DC braking. The inverter brakes the motor with a defined ramp-down time and superimposes a DC current on the output current.

Dynamic braking

The inverter converts the regenerative power into heat using a braking resistor.


- *Advantages:* defined braking characteristics; no additional motor temperature increase; constant braking torque; in principle, also functions when the power fails
- *Disadvantages:* braking resistor required; regenerative power is dissipated as heat

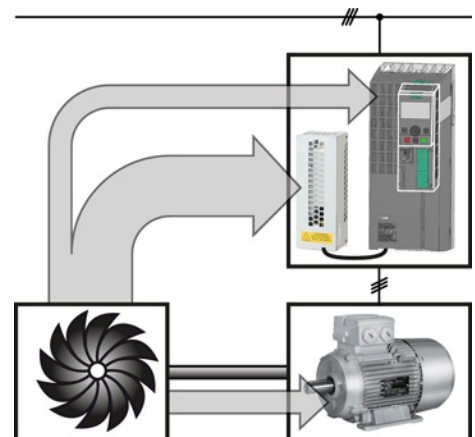

Braking with regenerative feedback into the line supply

The inverter feeds the regenerative power back into the line supply.

- *Advantages:* Constant braking torque; the regenerative power is not completely converted into heat, but regenerated into the line supply; can be used in all applications; continuous regenerative operation is possible - e.g. when lowering a suspended load
- *Disadvantage:* Does not function when power fails

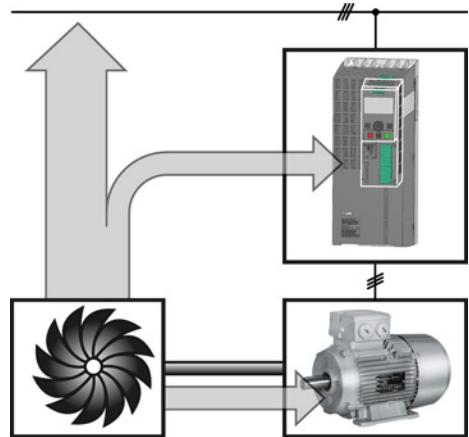

Braking method depending on the application

Application examples	Electrical braking methods	Power Modules that can be used
Pumps, fans, mixers, compressors, extruders	Not required	PM230, PM240, PM250, PM260, PM330
Grinding machines, conveyor belts	DC braking, compound braking	PM240
Centrifuges, vertical conveyors, hoisting gear, cranes, winders	Dynamic braking	PM240
	Braking with regenerative feedback into the line supply	PM250, PM260

8.7.3.1 DC braking

DC braking is used for applications without regenerative feedback into the line supply, where the motor can be more quickly braked by impressing a DC current than along a braking ramp.

Typical applications for DC braking include:

- Centrifuges
- Saws
- Grinding machines
- Conveyor belts

Function

NOTICE


Motor damage caused by overheating


The motor can overheat if it is braked for long periods of time or frequently using DC braking. This may damage the motor.

- Monitor the motor temperature.
- If the motor gets too hot during operation you must select another braking method or give the motor more time to cool down.

With DC braking, the inverter outputs an internal OFF2 command for the time that it takes to de-energize the motor p0347 - and then impresses the braking current for the duration of the DC braking.

The DC-braking function is possible only for induction motors.

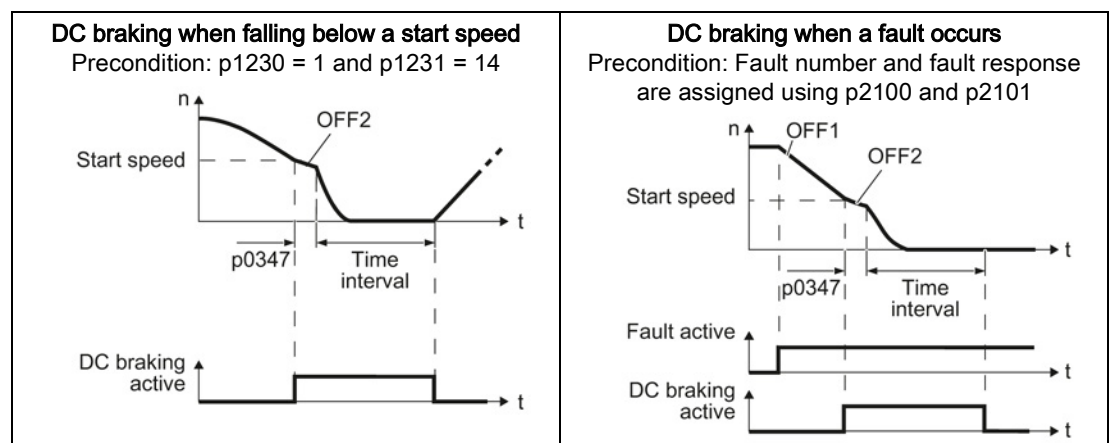

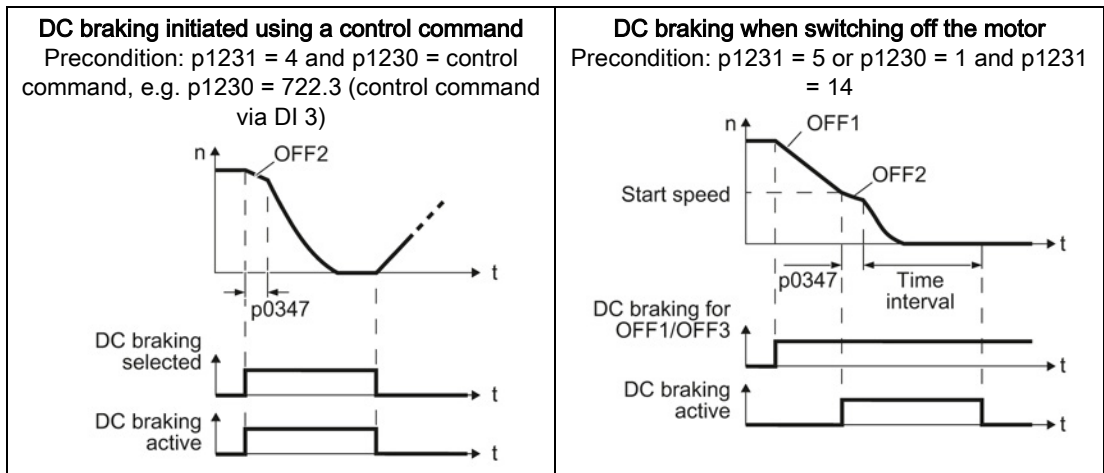

DC braking when falling below a starting speed

1. The motor speed has exceeded the starting speed.
2. The inverter activates the DC braking as soon as the motor speed falls below the starting speed.

DC braking when a fault occurs

1. A fault occurs, which initiates DC braking as response.
2. The motor brakes along the down ramp to the speed for the start of DC braking.
3. DC braking starts.

DC braking initiated by a control command

1. The higher-level control issues the command for DC braking, e.g. using DI3: p1230 = 722.3.
2. DC braking starts.

If the higher-level control withdraws the command during DC braking, the inverter interrupts DC braking and the motor accelerates to its setpoint.

DC braking when the motor is switched off

1. The higher-level control switches off the motor (OFF1 or OFF3).
2. The motor brakes along the down ramp to the speed for the start of DC braking.
3. DC braking starts.

Settings for DC braking

Parameter	Description
p0347	Motor de-excitation time (calculated after the basic commissioning) The inverter can trip due to an overcurrent during DC braking if the de-excitation time is too short.
p1230	DC braking activation (factory setting: 0) Signal source to activate DC braking <ul style="list-style-type: none"> • 0 signal: Deactivated • 1 signal: Active
p1231	Configuring DC braking (factory setting: 0)
	0 No DC braking
	4 General release for DC braking
	5 DC braking for OFF1/OFF3
14 DC braking below the starting speed	
p1232	DC braking braking current (factory setting 0 A)
p1233	DC braking duration (factory setting 1 s)
p1234	DC braking start speed (factory setting 210000 rpm)
r1239	DC braking status word
	.08 DC braking active
	.10 DC braking ready
	.11 DC braking selected
	.12 DC braking selection internally locked
	.13 DC braking for OFF1/OFF3

Table 8- 25 Configuring DC braking when faults occur

Parameter	Description
p2100	Set fault number for fault response (factory setting 0) Enter the fault number for which DC braking should be activated, e.g. p2100[3] = 7860 (external fault 1).
p2101 = 6	Fault response setting (factory setting 0) Assigning the fault response: p2101[3] = 6.
<p>The fault is assigned an index of p2100. Assign the same index of p2100 or p2101 to the fault and fault response.</p> <p>The inverter's List Manual lists in the "Faults and alarms" list the possible fault responses for every fault. The "DCBRAKE" entry means that it is permissible to set DC braking as response for this particular fault.</p>	

8.7.3.2 Compound braking

Typical applications for compound braking include:

- Centrifuges
- Saws
- Grinding machines
- Horizontal conveyors

For these applications, the motor is normally operated with a constant speed, and is only braked down to standstill after longer periods of time.

Principle of operation

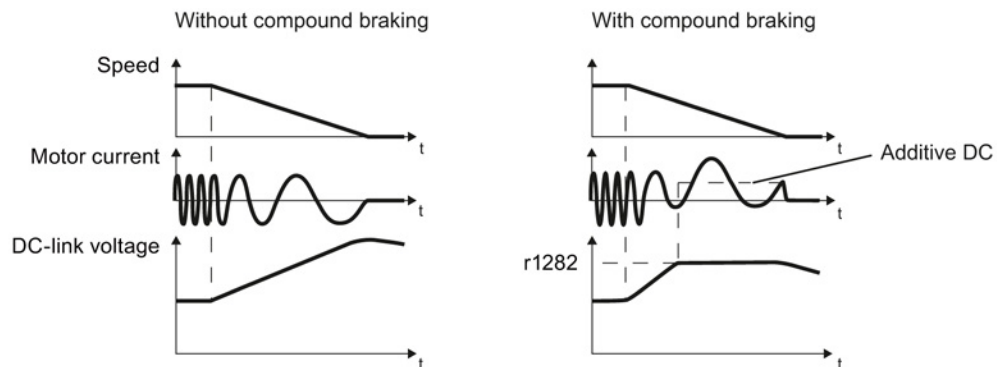


Figure 8-22 Motor brakes with and without active compound braking

Compound braking prevents the DC-link voltage increasing above a critical value. The inverter activates compound braking depending on the DC-link voltage. Above a DC-link voltage threshold (r1282), the inverter adds a DC current to the motor current. The DC current brakes the motor and prevents an excessive increase in the DC-link voltage.

Note

Compound braking is possible only with the U/f control.

Compound braking does not operate in the following cases:

- The "flying restart" function is active
 - DC braking is active
 - Vector control is selected
-

Setting and enabling compound braking

Parameter	Description
p3856	Compound braking current (%) With the compound braking current, the magnitude of the DC current is defined, which is additionally generated when stopping the motor for operation with U/f control to increase the braking effect. p3856 = 0 Compound braking locked p3856 = 1 ... 250 Current level of the DC braking current as a % of the rated motor current (p0305) Recommendation: $p3856 < 100\% \times (r0209 - r0331) / p0305 / 2$
r3859.0	Compound-braking status word r3859.0 = 1: Compound braking is active

NOTICE

Motor damage from overheating with compound braking

The motor will overheat if braking lasts too long or the motor is braked too often. This may damage the motor.

Monitor the motor temperature. If the motor gets too hot during operation you must select another braking method or give the motor more time to cool down.

8.7.3.3 Dynamic braking

Typical applications for dynamic braking include:

- Horizontal conveyors
- Vertical and inclined conveyors
- Hoisting gear

For these applications, dynamic motor behavior with different speeds or continuous change of direction is required.

Principle of operation



CAUTION

Burns when touching a hot braking resistor

A braking resistor reaches high temperatures during operation. Touching the braking resistor may result in burns.

- Do not touch a braking resistor during operation.

The inverter controls the braking chopper depending on its DC-link voltage. The DC-link voltage increases as soon as the inverter absorbs the regenerative power when braking the motor. The braking chopper converts this power into heat in the braking resistor. This prevents the DC-link voltage from increasing above the limit value $U_{DC, link, max}$.

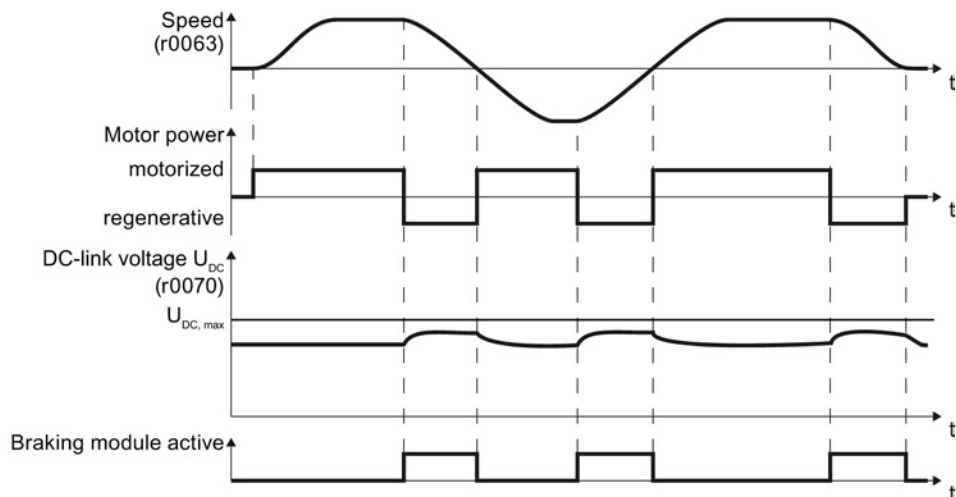


Figure 8-23 Simplified representation of dynamic braking with respect to time

Procedure: Set dynamic braking

In order to optimally utilize the connected braking resistor, you must know the braking power that occurs in your particular application.

Table 8- 26 Parameter

Parameter	Description	
p0219	<p>Braking power of the braking resistor (factory setting: 0 kW) Set the maximum braking power that the braking resistor must handle in your particular application.</p> <p>Under certain circumstances, for low braking power ratings, the inverter extends the ramp-down time of the motor.</p> <p>Example: In your particular application, the motor brakes every 10 seconds. In so doing, the braking resistor must handle a braking power of 1 kW for 2 s. Use a braking resistor with a continuous power rating of $1 \text{ kW} \times 2 \text{ s} / 10 \text{ s} = 0.2 \text{ kW}$ and set the maximum braking power to: p0219 = 1 (kW).</p>	
p0844	<p>No coast down/coast down (OFF2) signal source 1</p>	
	p0844 = 722.x	Monitor the overtemperature of the braking resistor with digital input x of the inverter.

8.7.3.4 Braking with regenerative feedback to the line

Typical applications for braking with energy recovery (regenerative feedback into the line supply):

- Hoist drives
- Centrifuges
- Unwinders

For these applications, the motor must brake for longer periods of time.

The inverter can feed back up to 100% of its power into the line supply (referred to "High Overload" base load, see Section Technical data, Power Modules (Page 311)).

Setting the braking with regenerative feedback to the line

Parameter	Description
Limiting the regenerative feedback for U/f control (p1300 < 20)	
p0640	Motor series overload factor (factory setting: 0.00 A, default for basic commissioning) It is only possible to limit the regenerative power with V/f control by limiting the motor current. If the current exceeds this value for longer than 10 s, the inverter shuts down the motor with fault F07806.
Limiting feedback with vector control (p1300 ≥ 20)	
p1531	Regenerative power limit (factory setting: 0.01 kW)

8.7.4 Flying restart – switching on while the motor is running

If you switch on the motor while it is still running, then with a high degree of probability, a fault will occur due to overcurrent (F30001 or F07801). Examples of applications involving an unintentionally rotating motor directly before switching on:

- The motor rotates after a brief line interruption.
- A flow of air turns the fan impeller.
- A load with a high moment of inertia drives the motor.

After the ON command, the "flying restart" function initially synchronizes the inverter output frequency to the motor speed and then accelerates the motor up to the setpoint.

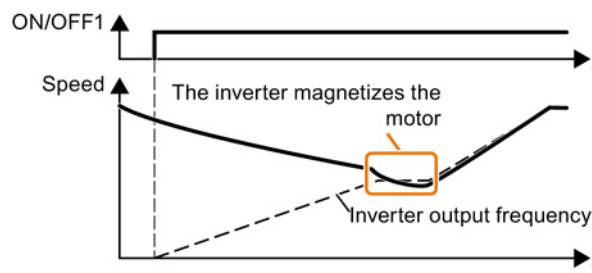


Figure 8-24 Principle of operation of the "flying restart" function

Setting "flying restart" function

If the inverter simultaneously drives several motors, then you must only use the "flying restart" function if the speed of all of the motors is always the same (group drive with a mechanical coupling).

Table 8- 27 Basic setting

Parameter	Description
p1200	Flying restart operating mode (factory setting: 0)
	0 Flying restart is locked
	1 Flying restart is enabled, search for the motor in both directions, start in direction of setpoint
	4 Flying restart is enabled, only search in direction of setpoint

Table 8- 28 Advanced settings

Parameter	Description
p1201	Flying restart enable signal source (factory setting: 1) Defines a control command, e.g. a digital input, through which the flying restart function is enabled.
p1202	Flying restart search current (factory setting for Power Module PM230: 90 %. factory setting for PM240, PM250, PM260 and PM330: 100%) Defines the search current with respect to the magnetizing current (r0331), which flows in the motor during the flying restart.
p1203	Flying restart search speed factor (factory setting for Power Module PM230: 150 %. factory setting for PM240, PM250, PM260 and PM330: 100%) The value influences the speed with which the output frequency is changed during the flying restart. A higher value results in a longer search time. If the inverter does not find the motor, reduce the search speed (increase p1203).

8.7.5 Automatic switch-on

The automatic restart includes two different functions:

- The inverter automatically acknowledges faults.
- After a fault occurs or after a power failure, the inverter automatically switches-on the motor again.

The inverter interprets the following events as power failure:

- The inverter signals fault F30003 (DC-link undervoltage), as the line supply voltage of the inverter has briefly failed.
- The inverter power supply has failed for a long enough time so that the inverter has been switched-off.

! WARNING

Injuries from the automated machine restart

When the "automatic restart" function is active (p1210 > 1), the motor automatically starts after a power failure. The movements that the machine executes may result in serious injuries.

- Block the machine to prevent unintentional access.
- Before working on the machine switch the automatic restart mechanism off.

Setting the automatic restart function

If it is possible that the motor is still rotating for a longer period of time after a power failure or after a fault, then in addition, you must activate the "flying restart" function, see Flying restart – switching on while the motor is running (Page 205).

Using p1210, select the automatic restart mode that best suits your application.


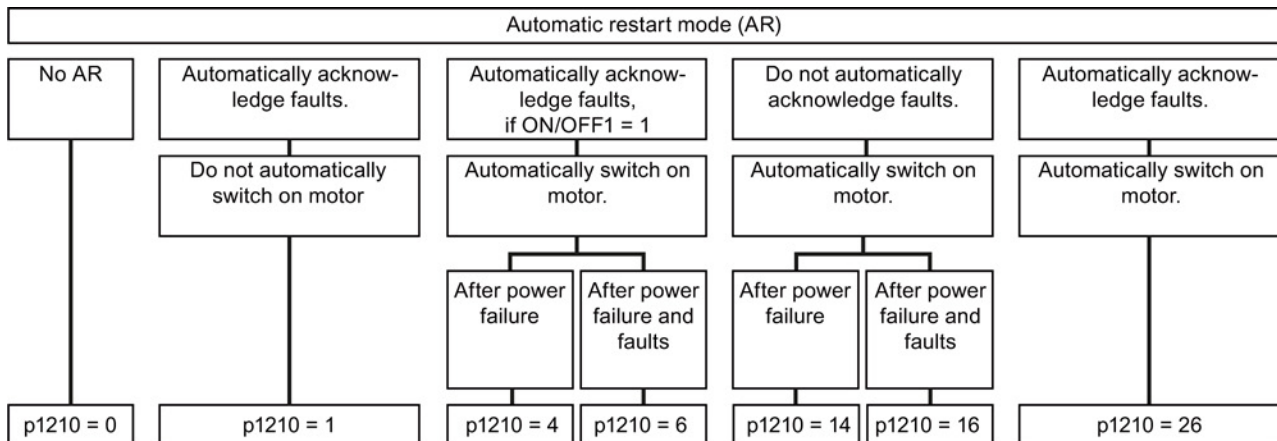


Figure 8-25 Automatic restart modes

The principle of operation of the other parameters is explained in the following diagram and in the table below.

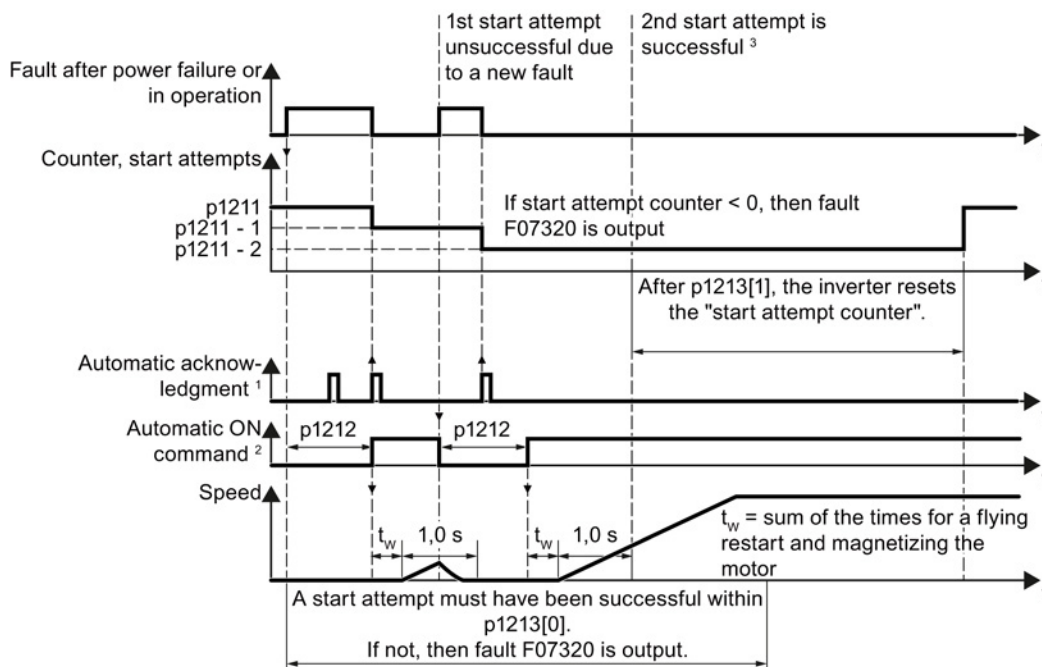

1) The inverter automatically acknowledges faults under the following conditions:

- p1210 = 1 or 26: Always.
- p1210 = 4 or 6: If the command to switch-on the motor is available at a digital input or via the fieldbus (ON/OFF1 = 1).
- p1210 = 14 or 16: Never.

2) The inverter attempts to automatically switch the motor on under the following conditions:

- p1210 = 1: Never.
- p1210 = 4, 6, 14, 16, or 26: If the command to switch-on the motor is available at a digital input or via the fieldbus (ON/OFF1 = 1).

3) If no fault has occurred one second after the flying restart and magnetizing (r0056.4 = 1), the start attempt was successful.

Figure 8-26 Time response of the automatic restart

Parameter for setting the automatic restart

Parameter	Explanation
p1210	Automatic restart mode (factory setting: 0)
	0: Disable automatic restart.
	1: Acknowledge all faults without restarting.
	4: Restart after power failure without further restart attempts.
	6: Restart after fault with further restart attempts.
	14: Restart after power failure after manual acknowledgement.
	16: Restart after fault after manual acknowledgement.
26: Acknowledgement of all faults and restart with ON/OFF1 = 1 command.	

Parameter	Explanation
p1211	<p>Automatic restart start attempts (factory setting: 3)</p> <p>This parameter is only effective for the settings p1210 = 4, 6, 14, 16, 26.</p> <p>You define the maximum number of start attempts using p1211. After each successful acknowledgement, the inverter decrements its internal counter of start attempts by 1. For p1211 = n, up to n + 1 start attempts are made. Fault F07320 is output after n + 1 unsuccessful start attempts.</p> <p>The inverter sets the start attempt counter back again to the value of p1211, if one of the following conditions is fulfilled:</p> <ul style="list-style-type: none"> • After a successful start attempt, the time in p1213[1] has expired. • After fault F07320, switch off the motor (OFF1) and acknowledge the fault. • You change the start value p1211 or the mode p1210.
p1212	<p>Automatic restart wait time start attempt (factory setting: 1.0 s)</p> <p>This parameter is only effective for the settings p1210 = 4, 6, 26.</p> <p>Examples for setting this parameter:</p> <ol style="list-style-type: none"> 1. After a power failure, a certain time must elapse before the motor can be switched-on, e.g. because other machine components are not immediately ready. In this case, set p1212 longer than the time, after which all of the fault causes have been removed. 2. In operation, the inverter develops a fault condition. The lower you select p1212, then the sooner the inverter attempts to switch-on the motor again.
p1213[0]	<p>Automatic restart monitoring time for restart (factory setting: 60 s)</p> <p>This parameter is only effective for the settings p1210 = 4, 6, 14, 16, 26.</p> <p>With this monitoring function, you limit the time in which the inverter may attempt to automatically switch-on the motor again.</p> <p>The monitoring function starts when a fault is identified and ends with a successful start attempt. If the motor has not successfully started after the monitoring time has expired, fault F07320 is signaled.</p> <p>Set the monitoring time longer than the sum of the following times:</p> <ul style="list-style-type: none"> + p1212 + Time that the inverter requires to start the motor on the fly. + Motor magnetizing time (p0346) + 1 second <p>You deactivate the monitoring function with p1213 = 0.</p>
p1213[1]	<p>Automatic restart monitoring time to reset the fault counter (factory setting: 0 s)</p> <p>This parameter is only effective for the settings p1210 = 4, 6, 14, 16, 26.</p> <p>Using this monitoring time, you prevent that faults, which continually occur within a certain time period, are automatically acknowledged each time.</p> <p>The monitoring function starts with a successful start attempt and ends after the monitoring time has expired.</p> <p>If the inverter has made more than (p1211 + 1) successful start attempts within monitoring time p1213[1], the inverter cancels the automatic restart function and signals fault F07320. In order to switch on the motor again, you must acknowledge the fault and set ON/OFF1 = 1.</p>

Additional information is provided in the parameter list of the List Manual.

Advanced settings

If you wish to suppress the automatic restart function for certain faults, then you must enter the appropriate fault numbers in p1206[0 ... 9].

Example: p1206[0] = 07331 ⇒ No restart for fault F07331.

Suppressing the automatic restart only functions for the setting p1210 = 6, 16 or 26.

 WARNING
--

Injury and property damage

In the case of communication via the fieldbus interface, the motor restarts with the setting p1210 = 6, 16, 26 even if the communication link is interrupted. This means that the control cannot stop the motor. To avoid this dangerous situation, you must enter the fault code of the communications fault in parameter p1206.

Example: A communication failure via PROFIBUS is signaled using fault code F01910. You should therefore set p1206[n] = 1910 (n = 0 ... 9).
--

8.7.6 Kinetic buffering (V_{dc} min control)

Kinetic buffering increases the drive availability. The kinetic buffering utilizes the kinetic energy of the load to buffer line dips and failures. During a line dip, the inverter keeps the motor in the switched-on state for as long as possible. One second is a typical, maximum buffer time.

Preconditions

The following prerequisites must be fulfilled to practically use the "kinetic buffering" function:

- The driven load has a sufficiently high inertia.
- The application allows a motor to be braked during a power failure.

Function

When the line supply dips or is interrupted, the DC link voltage in the inverter decreases. At an adjustable threshold, kinetic buffering intervenes ($V_{DC\ min}$ control). The $V_{DC\ min}$ control forces the load to go into slightly regenerative operation. As a consequence, the inverter covers its power loss and the losses in the motor with the kinetic energy of the load. The load speed decreases; however, during kinetic buffering, the DC voltage remains constant. After the line supply returns, the inverter immediately resumes normal operation.

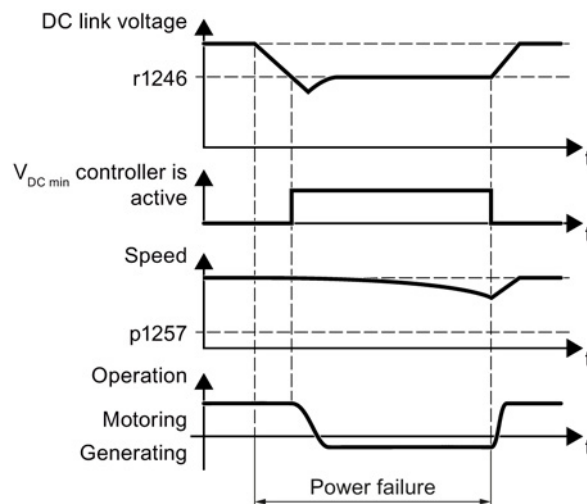


Figure 8-27 Principle mode of operation of kinetic buffering

Parameter	Description
r0056.15	Status word closed-loop control
	0 signal $V_{DC \min}$ controller is not active
	1 signal $V_{DC \min}$ controller is active (kinetic buffering)
p0210	Device supply voltage (factory setting: 400 V)
p1240	V_{DC} controller configuration (factory setting: 1)
	0 Inhibit V_{DC} controller
	1 Enable $V_{DC \max}$ controller
	2 Enable $V_{DC \min}$ controller (kinetic buffering)
3 Enable $V_{DC \min}$ controller and $V_{DC \max}$ controller	
p1245	$V_{DC \min}$ controller activation level (kinetic buffering) (factory setting: 76 %)
r1246	$V_{DC \min}$ controller activation level [V] $r1246 = p1245 \times \sqrt{2} \times p0210$
p1247	$V_{DC \min}$ controller dynamic factor (factory setting: 300 %)
p1255	$V_{DC \min}$ controller time threshold (factory setting: 0 s)
	Maximum duration of the kinetic buffering. If kinetic buffering lasts longer than that specified in the parameter value, the inverter outputs fault F7406. A value of 0 deactivates the monitoring.
p1257	$V_{DC \min}$ controller speed threshold (factory setting: 50 rpm) When fallen below, the inverter outputs fault F7405.

8.7.7 PID technology controller

The technology controller controls process variables, e.g. pressure, temperature, level or flow.

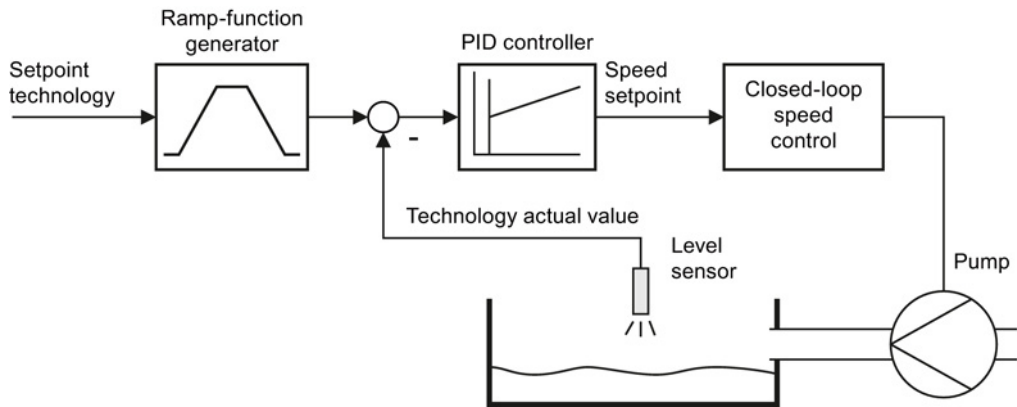


Figure 8-28 Example: Technology controller as a level controller

Simplified representation of the technology controller

The technology controller is implemented as PID controller (controller with proportional, integral and differential component) and so can be adapted very flexibly.

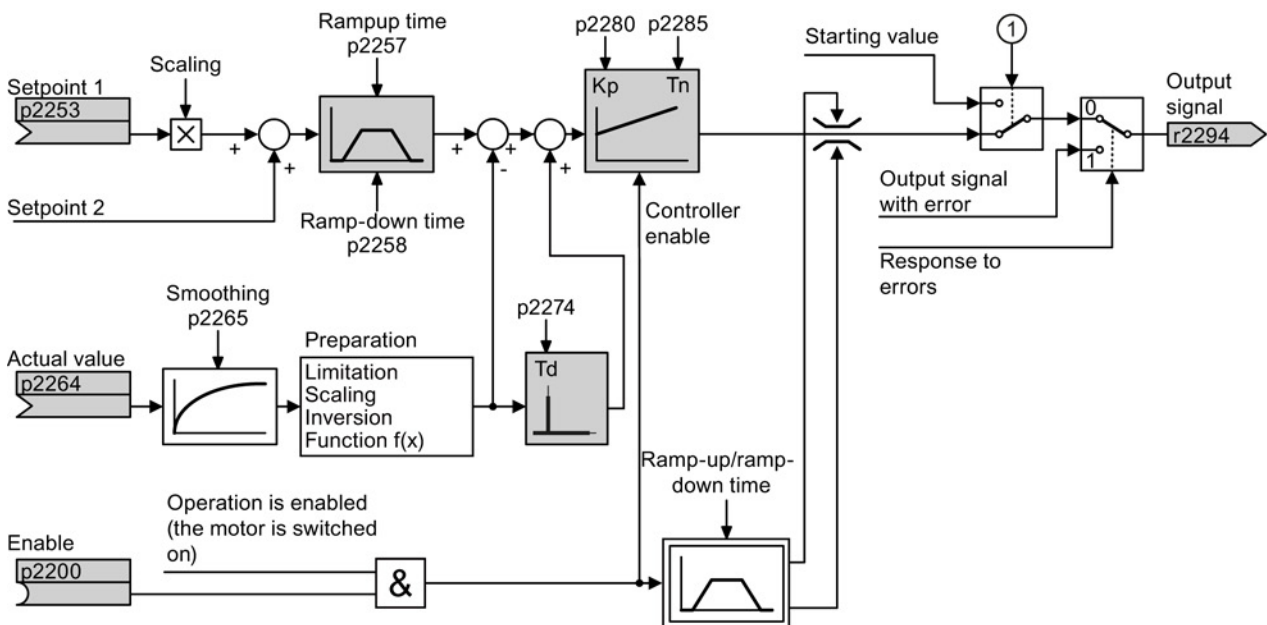


Figure 8-29 Simplified representation of the technology controller

- ① The inverter uses the start value if the following conditions are met simultaneously:
- The technology controller supplies the main setpoint (p2251 = 0).
 - The ramp-function generator output of the technology controller has not yet reached the start value.

Setting the technology controller

Parameter	Remark
p2200 = 1	Enable technology controller.
p1070 = 2294	Interconnect the main speed setpoint with the output of the technology controller.
p2253	Define the setpoint for the technology controller. Example: p2253 = 2224: The inverter interconnects the fixed setpoint p2201 with the setpoint of the technology controller. p2220 = 1: The fixed setpoint p2201 is selected.
p2264	Define the setpoint for the technology controller.
p2257, p2258	Define the ramp-up and ramp-down times [s]
p2274	Differentiation time constant [s] The differentiation improves the rise time characteristics for very slow controlled variables, e.g. a temperature control. p2274 = 0: The differentiation is switched off.
p2280	Proportional gain K_P
p2285	Integral time T_N [s] Without an integral time, the controller cannot completely equalize deviations between the setpoint and actual value. p2285 = 0: The integral time is switched off.

Advanced settings

Parameter	Remark
Limiting the output of the technology controller	
In the factory setting, the output of the technology controller is limited to \pm maximum speed. You must change this limit, depending on your particular application. Example: The output of the technology controller supplies the speed setpoint for a pump. The pump should only run in the positive direction.	
p2297 = 2291	Interconnect the upper limit with p2291.
p2298 = 2292	Interconnect the lower limit with p2292.
p2291	Upper limit for the technology controller output e.g.: p2291 = 100
p2292	Lower limit for the technology controller output e.g.: p2292 = 0
Manipulating the actual value of the technology controller	
p2267, p2268	Limit the actual value
p2269	Scale the actual value
p2271	Invert the actual value
p2270	Actual value

For further information refer to the function block diagrams 7950 ff of the List Manual.

Setting the technology controller from a practical perspective



Procedure

Proceed as follows to set the technology controller:

1. Temporarily set the ramp-up and ramp-down times of the ramp-function generator (p2257 and p2258) to zero.
2. Enter a setpoint step and monitor the associated actual value, e.g. with the trace function of STARTER.

The slower the response of the process to be controlled, the longer you must monitor the controller response. Under certain circumstances (e.g. for a temperature control), you need to wait several minutes until you can evaluate the controller response.

	<p>Optimum controller response for applications that do not permit any overshoot.</p> <p>The actual value approaches the setpoint without any significant overshoot.</p>
	<p>Optimum controller behavior for fast correction and quick compensation of disturbance components.</p> <p>The actual value approaches the setpoint and slightly overshoots, maximum 10% of the setpoint step.</p>
	<p>The actual value only slowly approaches the setpoint.</p> <ul style="list-style-type: none"> • Increase the proportional component K_P and reduce the integration time T_N.
	<p>Actual value only slowly approaches the setpoint with slight oscillation.</p> <ul style="list-style-type: none"> • Increase the proportional component K_P and reduce the rate time T_D (differentiating time).
	<p>The actual value quickly approaches the setpoint, but overshoots too much.</p> <ul style="list-style-type: none"> • Decrease the proportional component K_P and increase the integration time T_N.

3. Set the ramp-up and ramp-down times of the ramp-function generator back to their original value.



You have now set the technology controller.

8.7.8 Free technology controllers

Additional technology controllers

The inverter has additional technology controllers in the following parameter ranges:

- p11000 ... p11099: free technology controller 0
- p11100 ... p11199: free technology controller 1
- p11200 ... p11299: free technology controller 2

Refer to the parameter descriptions and in function diagram 7030 of the associated List Manual for additional details.

8.7.9 Monitoring the load torque (system protection)

In many applications, it is advisable to monitor the motor torque:

- Applications where the load speed can be indirectly monitored by means of the load torque. For example, in fans and conveyor belts with too low a torque indicates that the drive belt is torn.
- Applications that are to be protected against overload or locking (e.g. extruders or mixers).
- Applications in which no-load operation of the motor represents an impermissible situation (e.g. pumps).

Load torque monitoring functions

The inverter monitors the motor torque in different ways:

- No-load monitoring
The inverter generates a message if the motor torque is too low.
- Blocking protection:
The inverter generates a message if the motor speed cannot track the speed setpoint despite generating maximum torque.
- Stall protection
The inverter generates a message if the motor stalls and no longer generates a torque.
- Speed-dependent torque monitoring
The inverter measures the actual torque and compares it with a set speed/torque characteristic.

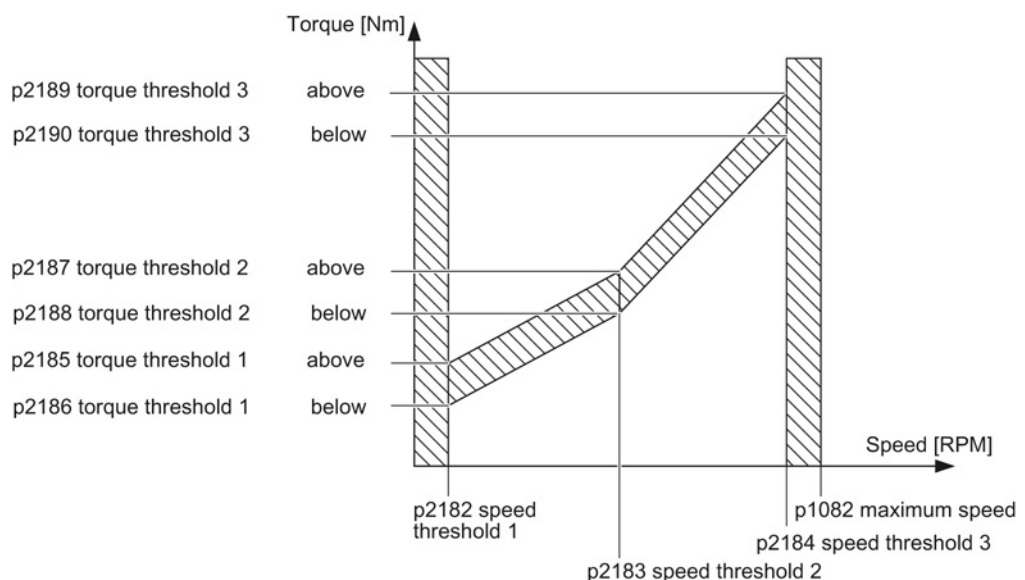


Figure 8-30 Load torque monitoring

Parameter	Description
No-load monitoring	
p2179	Current limit for no-load detection If the inverter current is below this value, the message "no load" is output.
p2180	Delay time for the "no load" message
Blocking protection	
p2177	Delay time for the "motor locked" message
Stall protection	
p2178	Delay time for the "motor stalled" message
p1745	Deviation of the setpoint from the actual value of the motor flux as of which the "motor stalled" message is generated This parameter is only evaluated as part of encoderless vector control.
Speed-dependent torque monitoring	
p2181	Load monitoring, response Setting the response when evaluating the load monitoring. 0: Load monitoring disabled >0: Load monitoring enabled
p2182	Load monitoring, speed threshold 1
p2183	Load monitoring, speed threshold 2
p2184	Load monitoring, speed threshold 3
p2185	Load monitoring, torque threshold 1, upper
p2186	Load monitoring, torque threshold 1, lower
p2187	Load monitoring, torque threshold 2, upper
p2188	Load monitoring, torque threshold 2, lower
p2189	Load monitoring, torque threshold 3, upper
p2190	Load monitoring torque threshold 3, lower
p2192	Load monitoring, delay time Delay time for the message "Leave torque monitoring tolerance band"

Additional information about these functions is provided in the function diagrams 8012 and 8013 as well as in the parameter list of the List Manual.

8.7.10 Load failure monitoring

Load failure

Using this function, the inverter monitors the speed or velocity of a machine component. The inverter evaluates whether an encoder signal is present. If the encoder signal fails for a time that can be adjusted, then the inverter signals a fault.

Examples of how the function can be used:

- Gearbox monitoring for traction drives and hoisting gear
- Drive belt monitoring for fans and conveyor belts
- Blocking protection for pumps and conveyor belts


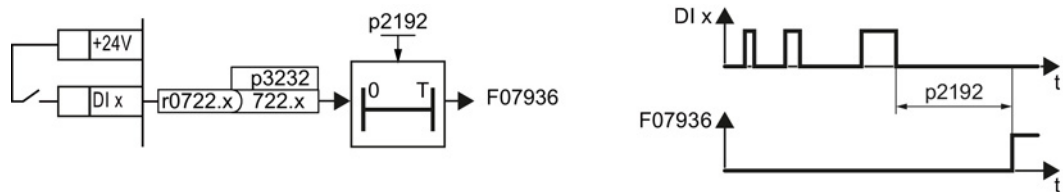


Figure 8-31 Function plan and time response of load-interruption monitoring

Parameter	Description
p2192	Load monitoring delay time (factory setting 10 s) After the motor is switched on, if the "LOW" signal is present at the associated digital input for longer than this time, the inverter signals a load failure (F07936).
p2193 = 1...3	Load monitoring configuration (factory setting: 1) 0: Monitoring is deactivated 1: Torque monitoring (see Monitoring the load torque (system protection) (Page 217)) and load failure 2: Speed deviation monitoring (see below) and load failure 3: Load failure monitoring
p3232 = 722.x	Load monitoring failure detection (factory setting: 1) Connect the load monitoring to a DI x digital input of your choice.

For more information, see the List Manual (the parameter list and function diagram 8013).

 8.7.11 Real time clock (RTC)



The real time clock is the basis for time-dependent process controls, e.g.:

- To reduce the temperature of a heating control during the night
- Increase the pressure of a water supply at certain times during the day

Real time clock: Format and commissioning

The real time clock starts as soon as the Control Unit power supply is switched on for the first time. The real time clock comprises the time in a 24 hour format and the date in the "day, month, year" format.

After a Control Unit power supply interruption, the real time clock continues to run for approx. five days.

If you wish to use the real time clock, you must set the time and date once when commissioning. If you restore the inverter factory setting, the real time clock parameters are not reset.

Parameter	Real time clock (RTC)
p8400[0]	RTC time , hour (0 ... 23)
p8400[1]	RTC time , minute (0 ... 59)
p8400[2]	RTC time , second (0 ... 59)
p8401[0]	RTC date , day (1 ... 31)
p8401[1]	RTC date , month (1 ... 12)
p8401[2]	RTC date , year (1 ... 9999)
r8404	RTC weekday 1: Monday 2: Tuesday 3: Wednesday 4: Thursday 5: Friday 6: Saturday 7: Sunday
p8405	RTC activate/deactivate alarm A01098 Sets whether the real time clock issues an alarm if the time is not running in synchronism (e.g. after a longer power supply interruption). 0: Alarm A01098 deactivated 1: Alarm A01098 activated

Accept the real time clock in the alarm and fault buffer

Using the real time clock, you can track the sequence of alarms and faults over time. When an appropriate message occurs, the real time clock is converted into the UTC time format (Universal Time Coordinated):

 
Date, time \Rightarrow 01.01.1970, 0:00 + d (days) + m (milliseconds)

The number "d" of days and the number "m" of milliseconds is transferred into the alarm and fault times of the alarm or fault buffer, see Section Alarms, faults and system messages (Page 287).

Converting UTC into RTC

An RTC can again be calculated from the UTC.

Procedure



Proceed as follows to calculate a date and time from a fault or alarm time saved in the UTC format:

1. Calculate the number of seconds of UTC:
Number of seconds = $ms / 1000 + days \times 86400$
2. In the Internet, you will find programs to convert from UTC into RTC, e.g.:
UTC to RTC (<http://unixtime-converter.com/>)
3. Enter the number of seconds in the corresponding screen and start the calculation.



You have calculated the date and time of day.

Example:

Saved as alarm time in the alarm buffer:

r2123[0] = 2345 [ms]

r2145[0] = 14580 [days]

Number of seconds = $2345 / 1000 + 14580 \times 86400 = 1259712002$

Converting this number of seconds in RTC provides the date: 02.12.2009, 01:00:02.

8.7.12 Time switch (DTC)

The "time switch" (DTC) function, along with the real time clock in the inverter, offers the option of controlling when signals are switched on and off.

Examples:

- Switching temperature control from day to night mode.
- Switching a process control from weekday to weekend.

Principle of operation of the time switch (DTC)

The inverter has three independently adjustable time switches. The time switch output can be interconnected with every binector input of your inverter, e.g. with a digital output or a technology controller's enable signal.

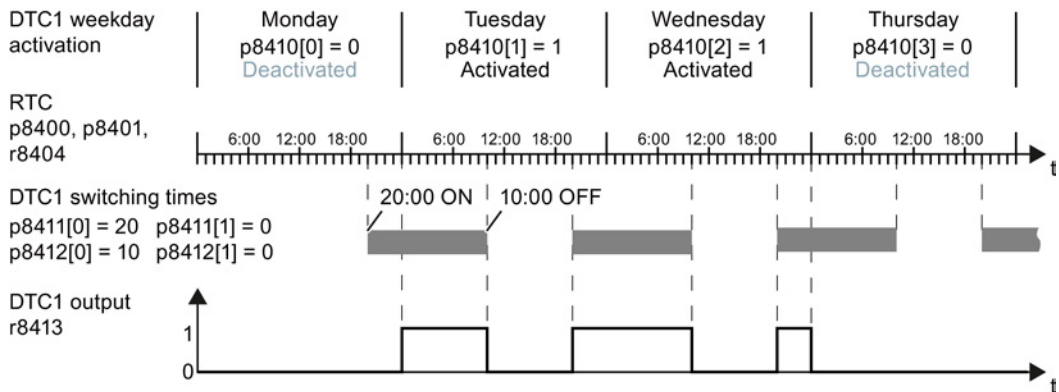


Figure 8-32 Time behavior of the time switch using example DTC1

Setting the time switch

- Enable parameterization of the DTC: p8409 = 0.
As long as DTC parameterization is enabled, the inverter keeps the output of all three DTC (r84x3, x = 1, 2, 3) at LOW.
- Set the activation of the weekdays; the switching on and off times.
- Enable the setting: p8409 = 1.
The inverter enables the DTC output once more.

Additional information is provided in the parameter list of the List Manual.

8.7.13 Record temperature via temperature-dependent resistances

Analog input AI 2

Via the DIP switch and parameter p0756[2], set the function of the analog input AI 2:

- p0756[2] = 2 or 3 → options for setting as current input
- p0756[2] = 6, 7 or 8 → options for setting as temperature sensor

Analog input AI 3

Analog input AI 3 is designed as a resistance input for a temperature sensor.

Setting options:

- p0756[3] = 6, 7 or 8 → options for setting as temperature sensor

Permissible temperature sensors

The temperature-dependent resistances Pt1000 or LG-Ni1000 are permissible as temperature sensors. If you want to use the temperature signal as the actual value of the temperature controller, set p2264 = 756.2 or 756.3.

Connect the temperature sensor as follows:

- AI 2 (terminals 50, 51)
- AI 3 (terminals 52, 53)

Measuring ranges and alarm thresholds for LG-Ni1000

The measuring range of the LG-Ni1000 sensor extends from -88°C ... 165°C . For values outside this range, the inverter outputs alarm A03520 "Temperature sensor fault". The fault type is displayed in r2124.

Measuring ranges and alarm thresholds for Pt1000

The measuring range of the Pt1000 sensor extends from -88°C ... 240°C . For values outside this range, the inverter outputs alarm A03520 "Temperature sensor fault". The fault type is displayed in r2124.

Fault values for temperature sensing via AI 2

- r2124 = 33: Wire break or sensor not connected
- r2124 = 34: Short-circuit

Fault values for temperature sensing via AI 3

- r2124 = 49: Wire break or sensor not connected
- r2124 = 50: Short-circuit

Note

If you use a temperature sensor as the input for the technology controller, you have to modify the scaling of the analog input.

- Scaling example for LG-Ni1000:
0° C (p0757) = 0% (p0758); 100° C (p0759) = 100% (p0760)
 - Scaling example for Pt1000:
0° C (p0757) = 0% (p0758); 80° C (p0759) = 100% (p0760)
-


Please refer to the parameter list for more details.

8.7.14 Essential service mode

In the **Essential Service Mode (ESM)**, the motor must operate for as long as possible, for example in the case of a fire, to keep the evacuation routes open by extracting smoke.

Contrary to normal operation, when faults develop, the inverter does not shut down, but responds as follows

- Faults that do not immediately result in the destruction of the inverter or the motor:
The inverter ignores these faults, and continues to operate in the "essential service mode"
- Faults/errors, which cannot be ignored, and demand a restart, for example software errors:
The inverter automatically restarts and attempts to acknowledge the existing fault/error using this function.
- Faults, which also cannot be resolved after a restart:
In this case, there is the option of activating the bypass function and to directly operate the motor from the line supply.

 WARNING
Loss of warranty for an inverter operated in the essential service mode If you activate the essential service mode, then all warranty claims are null and void with reference to the inverter. The essential service mode is an exceptional state, and is not suitable for continuous operation. Please note that the essential service mode can result in exceptionally high temperatures, including open fire, as well as emissions of light, noise, particles, gases, etc. can occur inside and outside the inverter.

The inverter logs the essential service mode, and the faults that occur while in essential service mode in a password-protected memory. This data is only accessible for the service and repair organization.

Special features of essential service mode

Priority

The essential service mode has priority over all other inverter functions, e.g. PROFlenergy or hibernation mode.

Starting and ending the essential service mode

The essential service mode is started via a digital input, and remains active as long as the signal is available.

If the signal is withdrawn via the digital input, then the inverter reverts to normal operation and its behavior depends on the pending commands and setpoints.

Automatic restart in the essential service mode

In the essential service mode, the inverter operates with the "Restart after fault with additional start attempts" setting (p1210 = 6). We recommend that you set the automatic restart function, also for normal operation, to a value p1210 ≠ 0.

In the essential service mode, the inverter ignores the settings in p1206 (faults without automatic restart).

The inverter carries out the maximum number of restart attempts set in p1211 corresponding to the settings in p1212 and p1213. If these attempts are not successful, then the inverter goes into a fault condition with F07320.

Speed setpoint and direction of rotation in the essential service mode

The essential service mode has its own setpoint source (p3881), and if this source is lost, an alternative setpoint (p3882).

For the case that this is not possible to define the direction of rotation of the essential service mode setpoint when configuring the system, then the direction of rotation can be inverted using a digital input.

If the technology controller is active as setpoint source for the essential service mode setpoint, then the direction of rotation cannot be changed via the digital input.

Bypass and essential service mode

- If, when activating the essential service mode, bypass operation is active, inverter operation is selected internally in order to ensure that the setpoint is entered via the source intended for the essential service mode.
- If faults are still present after the number of start attempts parameterized in p1211, then the inverter goes into a fault condition with F07320. In this case, there is an option of switching over to bypass operation and then directly connecting the motor to the line supply.

Application example

To improve the air circulation in the stairwells, the ventilation control creates a slight underpressure in the building. With this control, a fire would mean that smoke gases enter into the stairwell. This would then mean that the stairway would be blocked as escape or evacuation route.

Using the essential service mode function, the ventilation switches over to the control of an overpressure. This prevents the propagation of smoke in the stairwell, thereby keeping the stairs free as an evacuation route.

Settings for the essential service mode



Procedure

Proceed as follows in order to be able to use the essential service mode:

1. Interconnect a free digital input as source for the essential service mode.

Example DI3: Set p3880 = 722.3.

Ensure that this digital input is not interconnected with other functions.

2. Using p3881, set the setpoint source for the essential service mode

Option 1:

- P3881 = 0: Last recognized setpoint (factory setting), or
- p3881 = 1: Fixed setpoint 15, or
- p3881 = 2: Analog setpoint, or
- p3881 = 3: Fieldbus

Option 2:

- p3881 = 4: Technology controller
- Using p3884, set the source for the essential service mode setpoint.
If you cannot connect a setpoint in p3884, then the inverter takes technology setpoint 1 that has been connected (p2253).

3. Using p3882, set the source for the alternative setpoint.

- P3882 = 0: Last recognized setpoint (factory setting)
- p3882 = 1: Fixed speed setpoint which is defined in p1015
- p3882 = 2: Maximum speed (value of p1082)

4. Parameterize the source to select the direction of rotation for the essential service mode.

Option 1: Emergency setpoint using p3881 = 0, 1, 2, 3:

Using p3883, invert the direction of rotation for the essential service mode. To do this, interconnect p3883 with a digital input, e.g. with digital input 4 (DI4): Set p3883 = 722.4

The following applies:

- p3883 = 0 → normal direction of rotation in the essential service mode,
- p3883 = 1 → inverted direction of rotation in the essential service mode,

Option 2: Essential service mode via technology controller (p3881 = 4)

If you enter the setpoint for the essential service mode via the technology controller, then the direction of rotation of the essential service mode setpoint is always valid.

5. Switchover to bypass operation - option

If the inverter is not in a position to acknowledge pending faults using the automatic restart, then it goes into a fault condition with fault F07320.

In order to also be able to operate the motor in this case, you have the option of directly connecting the motor to the line supply using the bypass operation function.

To do this, you must:

- Start the script described in this FAQ <http://support.automation.siemens.com/WW/view/de/66936543> (<http://support.automation.siemens.com/WW/view/en/66936543>). This means that you enable the "Bypass in the essential service mode" function.
- Ensure that the direction of rotation does not change when switching over to bypass operation.
- Set that the bypass is activated via a signal (p1267 = 0).
- Make other settings for "Switch over to bypass (Page 232)".



This means that you have made the settings for the essential service mode.

Application example

An application example for the essential service mode can be found on the Internet at the following address: <http://support.automation.siemens.com/WW/view/de/63969509> (<http://support.automation.siemens.com/WW/view/en/63969509>)

8.7.15 Multi-zone control

Multi-zone control is used to control quantities such as pressure or temperature via the technology setpoint deviation. The setpoints and actual values are fed in via the analog inputs as current (0 ... 20 mA) or voltage (0 ... 10 V) or as a percentage via temperature-dependent resistances (LG-Ni1000 / Pt1000, 0° C = 0%; 100° C = 100%).

Control variants for multi-zone control

There are three control variants for multi-zone control, which are selected via p31021:

- **One setpoint and one, two or three actual values**

The actual value for the control can be calculated as mean value, maximum value or minimum value by the inverter. You can find all of the setting options in the parameter list in parameter p31022.

- Average value: The deviation from the setpoint of the average value of two or three actual values is controlled.
- Minimum value: The deviation from the setpoint of the smallest actual value is controlled.
- Maximum value: The deviation from the setpoint of the highest actual value is controlled.

- **Two setpoint / actual value pairs as maximum value control (cooling)**

The maximum value control compares two setpoint / actual value pairs and controls the actual value which has the largest deviation upwards from its associated setpoint. No control takes place if both actual values lie below their setpoints.

In order to avoid frequent changeover, the inverter only switches over if the deviation of the controlled setpoint / actual value pair is more than two percent lower than the deviation of the uncontrolled value pair.

- **Two setpoint / actual value pairs as minimum value control (heating)**

The maximum value control compares two setpoint / actual value pairs and controls the actual value which has the largest deviation upwards from its associated setpoint. The control pauses if both actual values lie above their setpoints.

The control only switches over if the deviation of the controlled setpoint / actual value pair is more than two percent lower than the deviation of the uncontrolled value pair.

Switching from day to night mode

You can modify the setpoints for day and night mode individually. You have the following opportunities to switch from day to night mode:

- Signal via the digital input DI 4
- via p31025 with the aid of free components and the real time clock

Note

If you activate the multi-zone control, the inverter switches its analog inputs as sources for the setpoint and current value of the technology controller (refer to table).

Table 8- 29 Parameters to set the multi-zone control:

Parameter	Description	
p2200	Technology controller enable	
p2251	Set technology controller as main setpoint	
P31020	Multi-zone control interconnection (factory setting = 0) A subsequent parameterization is performed by activating or deactivating the multi-zone control.	
	Subsequent connection for p31020 = 1 (activate multi-zone control)	Subsequent connection for p31020 = 0 (deactivate multi-zone control)
	p31023[0] = 0755.0 (AI0) p31023[2] = 0755.1 (AI1) p31026[0] = 0755.2 (AI2) p31026[1] = 0755.3 (AI3) p2253 = 31024 (setpoint output, technology controller) p2264 = 31027 (actual value output, technology controller)	p31023[0] = 0 p31023[2] = 0 p31026[0] = 0 p31026[1] = 0 p2253 = 0 p2264 = 0
P31021	Configuration of multi-zone control <ul style="list-style-type: none"> • 0 = Setpoint 1 / several actual values (factory setting) • 1 = Two zones / maximum value setting • 2 = Two zones / minimum value setting 	
p31022	Processing of actual values for multi-zone control (only for p31021 = 0) Possible values: 0 ... 11 (factory setting = 0)	
p31023 [0 ... 3]	Setpoints for multi-zone control Parameters for selecting the source for setpoints in multi-zone control (factory setting = 0)	
r31024	Multi-zone control setpoint output for technology controller CO parameters	
p31025	Switching from day to night mode for multi-zone control Parameters for selection of the source for switching between day and night operation by the multi-zone control (default setting = 0)	
p31026 [0 ... 2]	Actual values for multi-zone control Parameters for selecting the source for actual values of the multi-zone control (factory setting = 0)	
r31027	Multi-zone control actual value output for the technology controller CO parameters	

Note

If you deactivate the multi-zone control, the inverter resets the switch on its analog inputs to the default setting.

Example

In an open plan office, temperature sensors (Lg-Ni1000) are installed in three different places. The inverter receives the measured values and temperature setpoint via its analog inputs. Temperature setpoints between 8° C ... 30° C are permissible. Overnight the average temperature should be 16° C.

Settings

p2200.0 = 1	Technology controller enable
p2251 = 0	Set technology controller as main setpoint
p2900.0 = 16	Temperature setpoint overnight as a fixed percentage value
p31020 = 1	Activate multi-zone control
p31021 = 0	Select multi-zone control with one setpoint and three actual values
p31022 = 7	Three actual values, one setpoint. The average value of the three actual values is used for the control.
p31023.0 = 755.0	Temperature setpoint via analog input 0
p0756.0 = 0	Select analog input type (voltage input 0 ... 10 V)
p0757.0 = 0 / p0758.0 = 8	Set the lower value to 8° C (0 V \triangleq 8° C)
p0759.0 = 10 / p0760.0 = 30	Set the upper value to 30° C (10 V \triangleq 30° C)
p31023.1 = 2900.0	Supply p31023.1 with the value written in P2900 to reduce the temperature overnight
p31026.0 = 755.2	Temperature actual value 1 via analog input 2 as a percentage value
p0756.2 = 6	Select analog input type (temperature sensor LG-Ni1000)
p0757.2 = 0 / p0758.2 = 0	Set lower value of the scaling characteristic
p0759.2 = 100 / p0760.2 = 100	Set upper value of the scaling characteristic
p31026.1 = 755.3	Temperature actual value 2 via analog input 3 as a percentage value
p0756.3 = 6	Select analog input type (temperature sensor LG-Ni1000)
p0757.3 = 0 / p0758.3 = 0	Set lower value of the scaling characteristic
p0759.3 = 100 / p0760.3 = 100	Set upper value of the scaling characteristic
p31026.2 = 755.1	Temperature actual value 3 via temperature sensor with current output (0 mA ... 20 mA) via analog input 1
p0756.1 = 2	Select analog input type (current input 0 ... 20 mA)
p0757.1 = 0 / p0758.1 = 0	Set lower value of the scaling characteristic (0 mA \triangleq 0° C)
p0759.1 = 20 / p0760.1 = 100	Set upper value of the scaling characteristic (20 mA \triangleq 100%)
p31025 = 722.4	Changeover from day to night via digital input 4

You will find more information about this multi-zone control in the parameter list and in function diagram 7032 of the List Manual.

8.7.16 Bypass

The bypass function switches the motor from inverter operation+ to line system operation. The following options are possible:

- Bypass function when activating via a control signal (p1267.0 = 1)
- Bypass function depending on the speed (p1267.1 = 1)

The inverter controls two contactors via its digital outputs. The inverter analyses the feedback signals from the contactors via its digital inputs. If using direct connection logic (high level = ON), both contactors should be NO contacts.

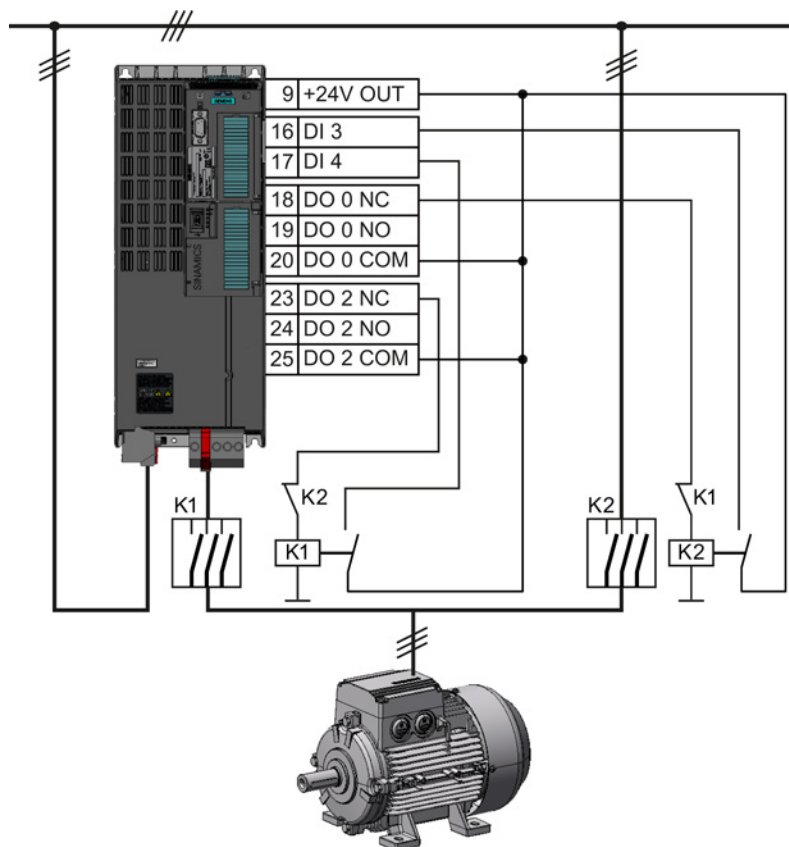


Figure 8-33 Bypass circuit for control using the inverter

Note

Flying restart must be activated for the bypass function (p1200 = 1 or 4).

Note

Bypass mode in the essential service mode

The special features for bypass mode in the essential service mode are described in Section Essential service mode (Page 225).

Changeover operation between line and inverter operation

When switching over to direct online operation, contactor K1 is opened after the inverter pulses have been inhibited. The system then waits for the de-energization time of the motor and then contactor K2 is closed so that the motor is connected directly to the line.

When the motor is switched to the line supply, an equalizing current flows that must be taken into account when the protective equipment is selected and dimensioned.

When changing over to inverter operation, initially contactor K2 must be opened and after the de-excitation time, contactor K1 is closed. The inverter then captures the rotating motor and the motor is operated on the inverter.

Bypass function when activating via a control signal (p1267.0 = 1)

The state of the bypass contactors is evaluated when the inverter is switched on. If the automatic restart function is active (p1210 = 4) and an ON command (r0054.0 = 1) as well as the bypass signal (p1266 = 1) are still present at power up, then after power up, the inverter goes into the "ready and bypass" state (r899.0 = 1 and r0046.25 = 1) and the motor continues to run directly connected to the line supply.

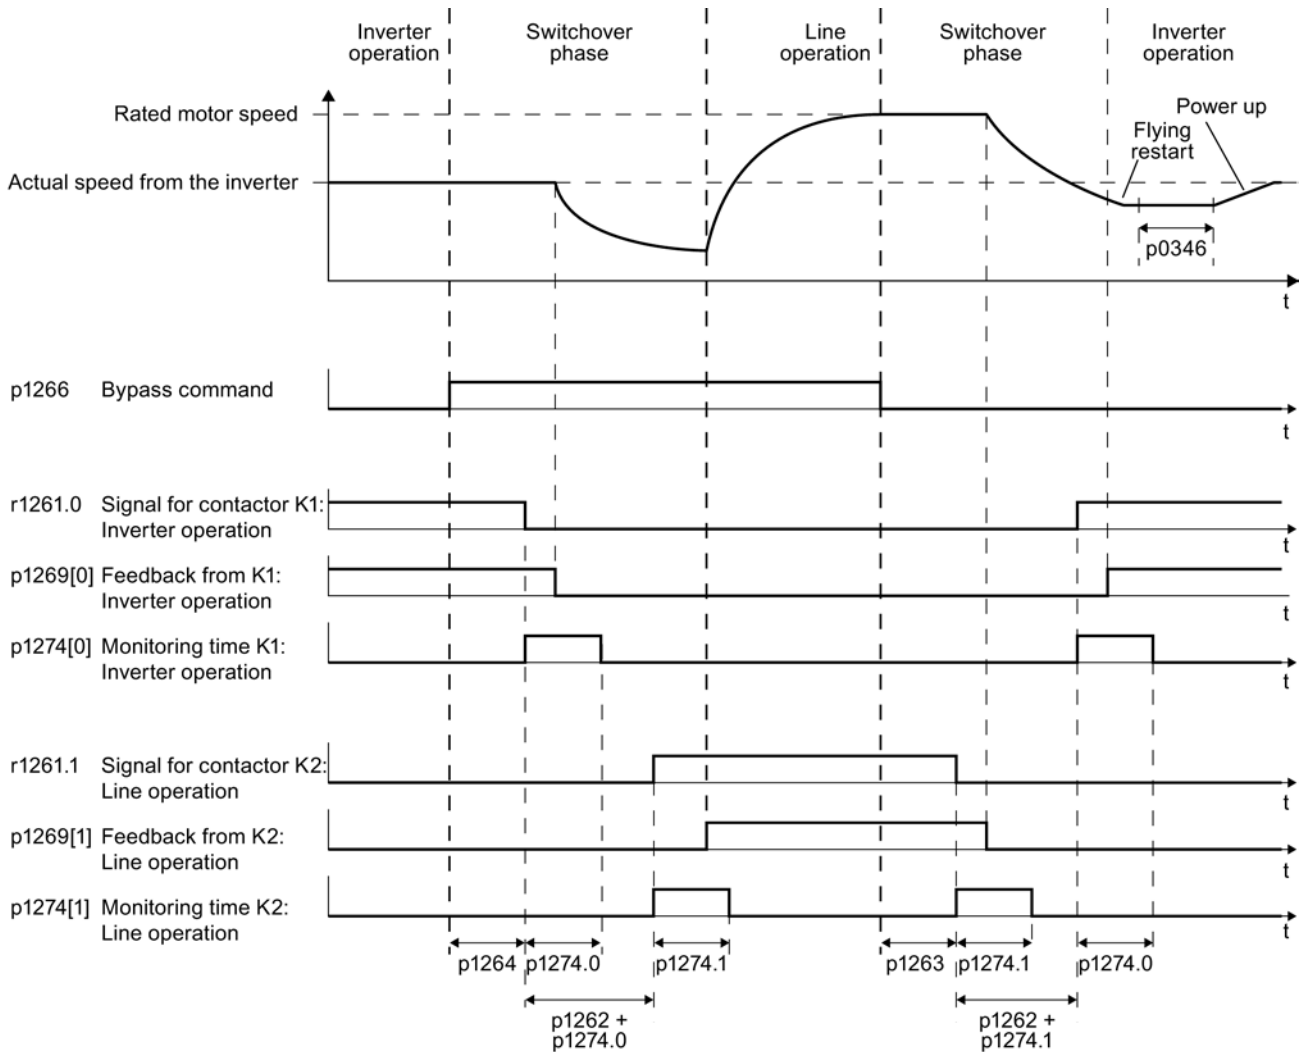


Figure 8-34 Bypass control independent of the speed via a control signal (p1267.0 = 1)

Bypass function is dependent on the speed (p1267.1 = 1)

With this function, changeover to line operation is realized corresponding to the following diagram, if the setpoint lies above the bypass threshold.

If the setpoint falls below the bypass threshold, the motor is captured by the inverter and operates in inverter operation.

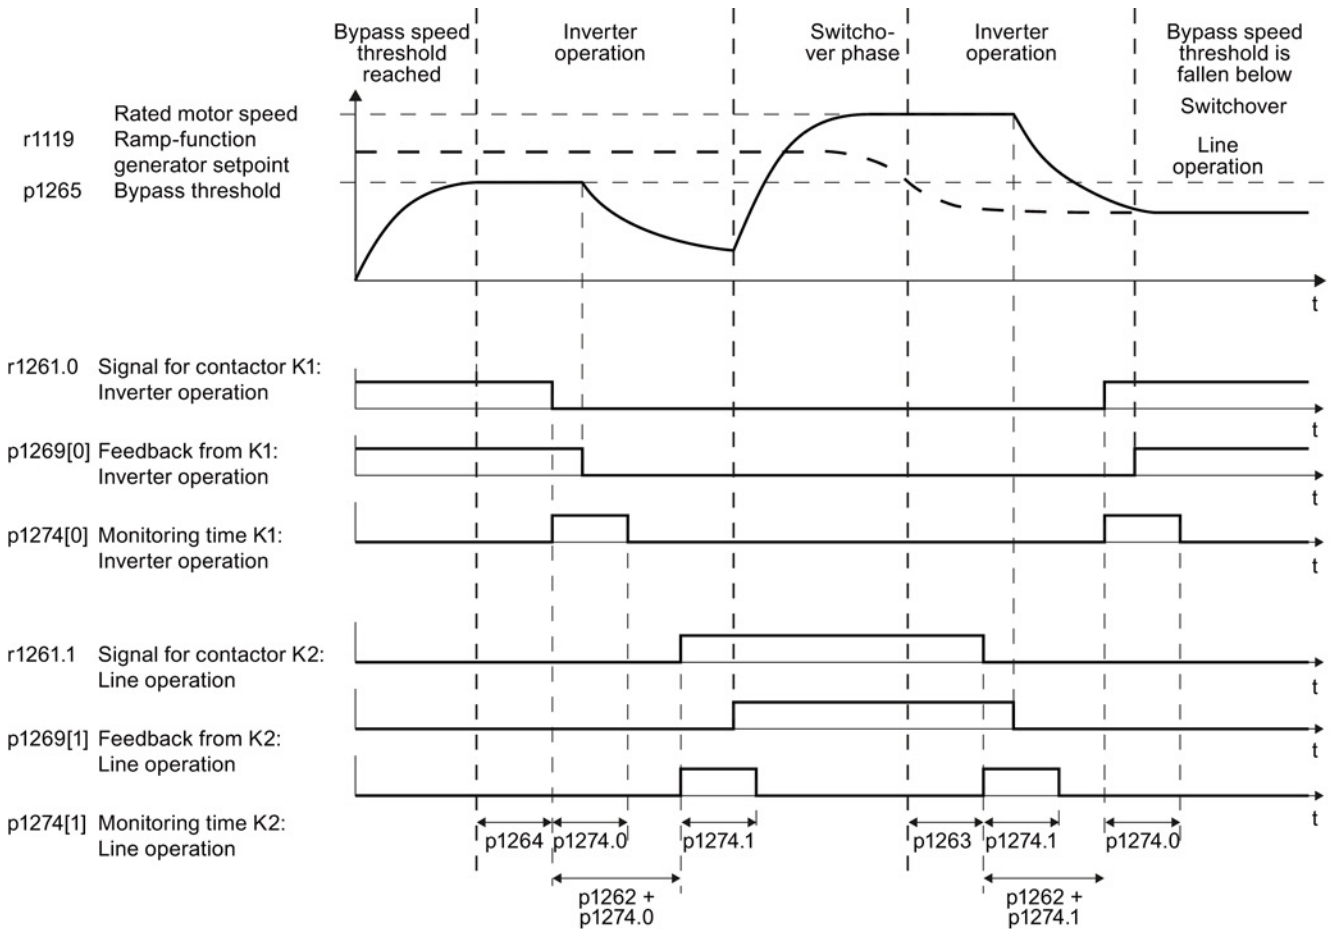


Figure 8-35 Switchover behavior from inverter to line operation dependent on the speed

General properties of the bypass function

- The two motor contactors must be designed for switching under load.
- Contactor K2 must be designed for switching an inductive load.
- Contactors K1 and K2 must be mutually interlocked so that they cannot close at the same time.

Switch off motor in bypass mode

- In bypass mode the motor no longer responds to the OFF1 command, but rather only to OFF2 and OFF3.
- If you cut off power to the inverter in bypass mode, the bypass contactor opens and the motor coasts down. If you want to operate the motor even when the inverter is switched off, the signal for the bypass contactor must come from the superior controller.

Temperature monitoring and overload protection in bypass mode

- If the motor is running in bypass mode, while the inverter is in the "ready and bypass" state (r899.0 = 1 and r0046.25 = 1), then the motor temperature monitoring via the temperature sensor is active.
- Install the overload protection for the motor bypass mode.

Parameters for setting the bypass function

Parameter	Description
p1260	Bypass configuration Activating the bypass function
r1261	Bypass control/status word Control and feedback signals for the bypass function.
p1262	Bypass dead time Changeover time for contactors. This should be longer than the motor's de-magnetizing time!
p1263	Debypass delay time Delay time for switching back to inverter operation.
p1264	Bypass delay time Delay time for switching to bypass mode.
p1265	Bypass speed threshold Speed threshold for switching to bypass mode.
p1266	Bypass control command Signal source for switching to bypass mode.
p1267	Bypass changeover source configuration Switch to bypass mode using speed threshold or control signal.
p1269	Bypass switch feedback Signal source for contactor feedback for bypass mode.
p1274	Bypass switch monitoring time Monitoring time setting for bypass contactors.

For more information, see the parameter descriptions and function diagram 7035 in the List Manual.

8.7.17 Cascade control and hibernation mode

8.7.17.1 Cascade control and hibernation mode

The cascade control and hibernation mode are both suitable for controlling different pressures and flow rates.

If both control versions are enabled, additional conditions must be observed when switching on the motor using the cascade control function. You can find details on this topic in Section Cascade control (Page 237), under "Additional conditions when the hibernation mode is enabled".

It is not possible to activate the hibernation mode as long as a motor is directly operated from the line supply using the cascade control function.

8.7.17.2 Cascade control

Cascade control is suitable for applications that require simultaneous operation of up to four motors as a function of the load. Here, for example, significantly fluctuating pressures or flow rates are equalized.

Depending on the PID variance, the inverter's cascade control switches up to three other motors on or off via contactors or motor starters.

Operating principle

- **Connecting external motors**

If the main drive is run at maximum speed and the deviation on the technology controller input continues to increase, the control also switches the external motors on the line system. At the same time, the main drive is ramped down to the switch-on/switch-off speed (p2378) to keep the total output power as constant as possible. The technology controller is deactivated while ramping down to the switch-on/switch-off speed.

- **Disconnecting external motors**

If the main drive is running at minimum speed and the deviation on the technology controller input continues to decrease, the control disconnects the external motors M1 to M3 from the line system. The main drive is simultaneously ramped-up to the switch-on/switch-off speed to keep the total output power as constant as possible.

To avoid frequent activation/deactivation of the uncontrolled motors, you must specify a time in p2377 which must have elapsed before the inverter can switch a further motor on or off. After the time set in p2377 has elapsed, a further motor will be activated immediately if the PID deviation is greater than the value set in p2376. If, after p2377 has elapsed, the PID deviation is smaller than p2376 but greater than 2373, the timer p2374 is started before the uncontrolled motor is activated.

The motors are deactivated in the same way.

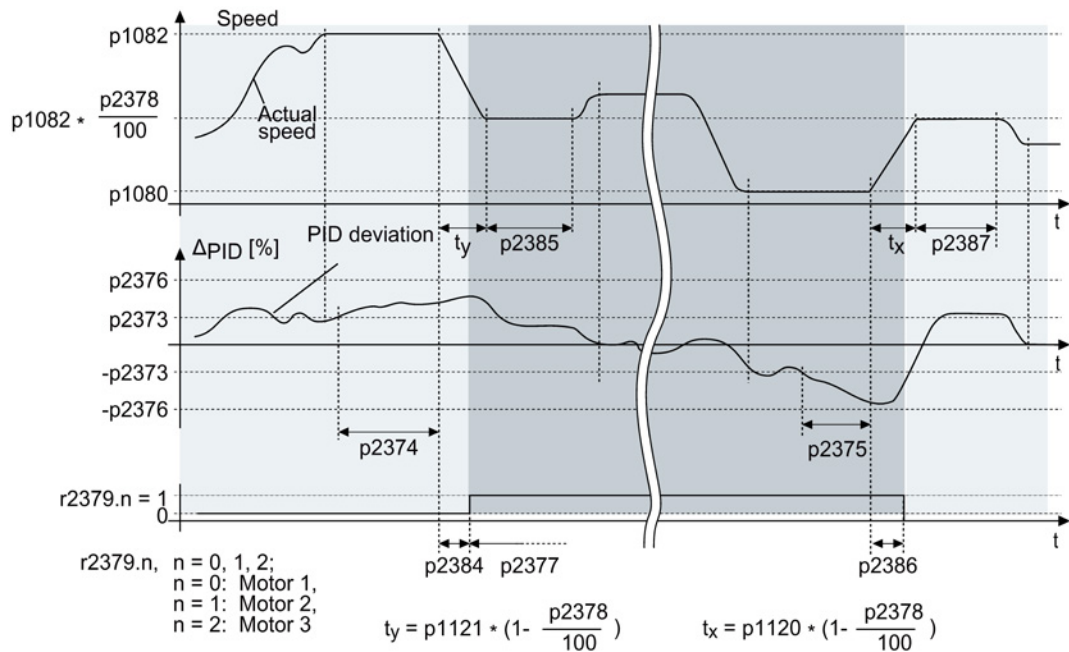


Figure 8-36 Conditions for activating/deactivating an uncontrolled motor

Controlling the activation and deactivation of motors

Use p2371 to determine the order of activation/deactivation for the individual external motors.

Table 8- 30 Order of activation for external motors depending on setting in p2371

p2371	Significance	Stage 1	Stage 2	Stage 3	Stage 4	Stage 5	Stage 6
0	Cascade control deactivated	---					
1	One motor can be activated	M1					
2	Two motors can be activated	M1	M1+M2				
3	Two motors can be activated	M1	M2	M1+M2			
4	Three motors can be activated	M1	M1+M2	M1+M2+M3			
5	Three motors can be activated	M1	M3	M1+M3	M1+M2+M3		
6	Three motors can be activated	M1	M2	M1+M2	M2+M3	M1+M2+M3	
7	Three motors can be activated	M1	M1+M2	M3	M1+M3	M1+M2+M3	
8	Three motors can be activated	M1	M2	M3	M1+M3	M2+M3	M1+M2+M3

Table 8- 31 Order of deactivation for external motors depending on setting in p2371

p2371	Activated motors	Stage 1	Stage 2	Stage 3	Stage 4	Stage 5	Stage 6
1	M1	M1					
2	M1+M2	M1+M2	M1				
3	M1+M2	M1+M2	M2	M1			
4	M1+M2+M3	M1+M2+M3	M1+M2	M1			
5	M1+M2+M3	M1+M2+M3	M3+M1	M3	M1		
6	M1+M2+M3	M1+M2+M3	M3+M2	M2+M1	M2	M1	
7	M1+M2+M3	M1+M2+M3	M3+M1	M3	M2+M1	M1	
8	M1+M2+M3	M1+M2+M3	M3+M2	M3+M1	M3	M2	M1

If you are using motors of the same power rating, you can use p2372 to define whether the motors are to be activated/deactivated following the setting specified in p2371 (p2372 = 0) or based on the operating hours (p2372 = 1, 2 ,3. Details see parameter list).

Parameters to set and activate the cascade control:

p0730 = r2379.0	Signal source for digital output 0 Control external motor 1 via DO 0
p0731 = r2379.1	Signal source for digital output 1 Control external motor 2 via DO 1
p0732 = r2379.2	Signal source for digital output 2 Control external motor 3 via DO 2
p2200 = 1	Technology controller release Activate technology controller
p2251 = 0	Technology controller mode Technology controller as main speed setpoint
p2370	Cascade control - enable Signal source for staging on/off
p2371	Cascade control- configuration Activate staging and define switch-on sequence
p2372	Cascade control - motor selection mode Define automatic motor switch-on
p2373	Cascade control - switch-in threshold Define switch-on threshold
p2374	Cascade control - switch-in delay Define delay time
p2375	Cascade control switch-off delay Define delay time for de-staging
p2376	Cascade control - overcontrol threshold Define overcontrol threshold
p2377	Cascade control - interlock time Define interlock time
p2378	Cascade control - connect/disconnect speed Defining the speed for the main drive after connecting/disconnecting a motor
r2379	Cascade control - status word
p2380	Cascade control - operating hours

p2381	Cascade control - maximum time for continuous mode
p2382	Cascade control - absolute operating time limit
p2383	Cascade control - switch-off sequence Define switch-off sequence for an OFF command
p2384	Cascade control - motor switch-on delay Define motor switch-on delay
p2385	Cascade control - connect hold time Define speed hold time after connecting an external motor
p2386	Cascade control - motor switch-off delay Define motor switch-off delay
p2387	Cascade control - switch-off speed hold time Define speed hold time after disconnecting an external motor

Note

Technology controller as main setpoint

To use the technology controller as main setpoint for the cascade control, interconnect the main setpoint with the technology controller output (p2251 = 0, p2200 =1)

For more information, see the parameter descriptions and function diagram 7036 in the List Manual.

Additional conditions when the hibernation mode is enabled

In order that the cascade control and hibernation mode functions operate without any conflict, you must parameterize the cascade control so that the following conditions are satisfied.

- p2392 < p2373
The restart value of the hibernation mode (p2392) must be lower than the activation threshold for the cascade control (p2373)
- p2373 < p2376
The activation threshold for the cascade control (p2373) must be lower than the overcontrol threshold for the cascade control (p2376).
- It is not permissible that the main drive is in the hibernation mode.
- The actual speed must be higher than the restart speed for the hibernation mode (p1080 + p2390) * 1.05.
- The value for the activation delay of the cascade control (p2374) must be longer than the power-up time from the hibernation mode (t_y).

with $t_y = ((p1080 + p2390) * 1.05 * p1120 * p1139) / p1082^{-1}$

8.7.17.3 Hibernation mode

Pressure and temperature controls involving pumps and fans are typical applications for the hibernation mode.

The hibernation mode saves energy, reduces mechanical wear and noise.

Function

If the plant/system conditions permit it, the inverter switches off the motor and switches it on again when there is a demand from the process.

The hibernation mode starts as soon as the motor speed drops below the hibernation mode start speed. The inverter switches off the motor after an adjustable time. If, during this time, the speed setpoint increases above the hibernation mode start speed due to pressure or temperature changes, the inverter exits the hibernation mode.

In the hibernation mode the motor is switched off, but the inverter continues to monitor the speed setpoint or technology controller deviation.

- **For an external setpoint input (without technology controller), the inverter monitors the speed setpoint** and switches on the motor again as soon as the setpoint increases above the restart speed.

In the factory setting, the inverter monitors the positive speed setpoint. The inverter switches on the motor as soon as the setpoint exceeds the restart speed.

If you also want to monitor the negative speed setpoint, you have to monitor the setpoint amount. To do this, set p1110 = 0.

Additional setting options are described in the List Manual, in function diagrams 3030 and 3040 as well as in the associated parameter descriptions.

- **When the setpoint is input from the technology controller, the inverter monitors the technology controller deviation (r2273)** and switches on the motor again if the deviation of the technology controller exceeds the hibernation mode restart value (p2392).

In the factory setting, the inverter monitors the positive deviation of the technology controller. The inverter switches on the motor as soon as the technology controller deviation is higher than the hibernation mode restart value (p2392).

You must monitor the absolute value of the deviation to switch on the motor again for a negative technology controller deviation.

Set p2298 = 2292 and set the minimum threshold in p2292.

Note

Hibernation mode after switching on the inverter

After switching the inverter on, a waiting period starts in the inverter. The waiting period is at most the following times:

- p1120 (ramp-up time)
- p2391 (hibernation mode delay time)
- 20 s

If the motor does not reach the hibernation mode start speed within this wait time, the inverter activates the hibernation mode and switches off the motor.

Additional setting options are provided in the List Manual in function block diagram 7038 and in the associated parameter descriptions.

If you want to prevent frequent activation and deactivation, before deactivation you still have to set a short speed boost. The boost is deactivated with p2394 = 0.

To avoid tank deposits, particularly where liquids are involved, it is possible to exit the hibernation mode after an adjustable time (p2396) has expired and switch to normal operation.

The settings required for the respective variant can be found in the following tables.

Activating the hibernation mode with setpoint input via the internal technology controller

With this operating mode you have to set the technology controller as the setpoint source (p2200) and use the output of the technology controller as the main setpoint (p2251). The boost can be deactivated.

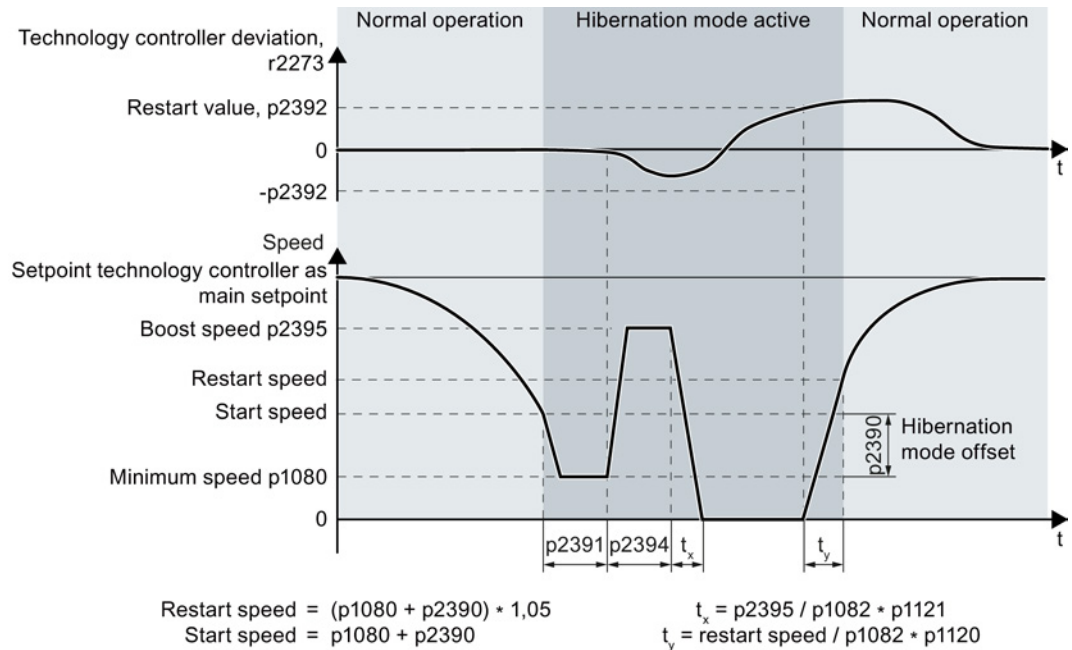


Figure 8-37 Hibernation mode using the technology setpoint as main setpoint with boost

Activating the hibernation mode with external setpoint input

With this operating mode, an external source – e.g. a temperature sensor – inputs the main setpoint.

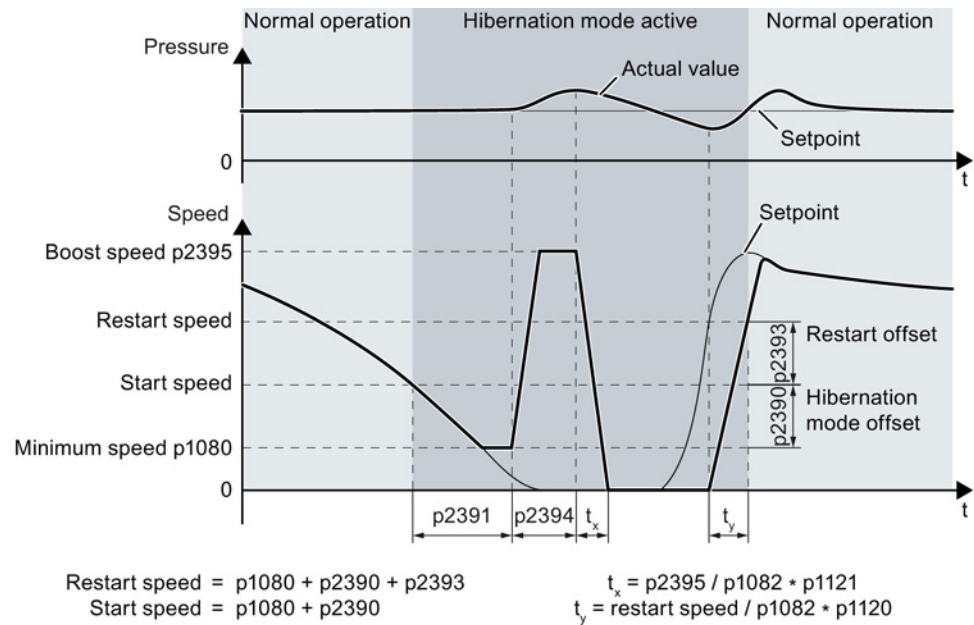


Figure 8-38 Hibernation mode using an external setpoint with boost

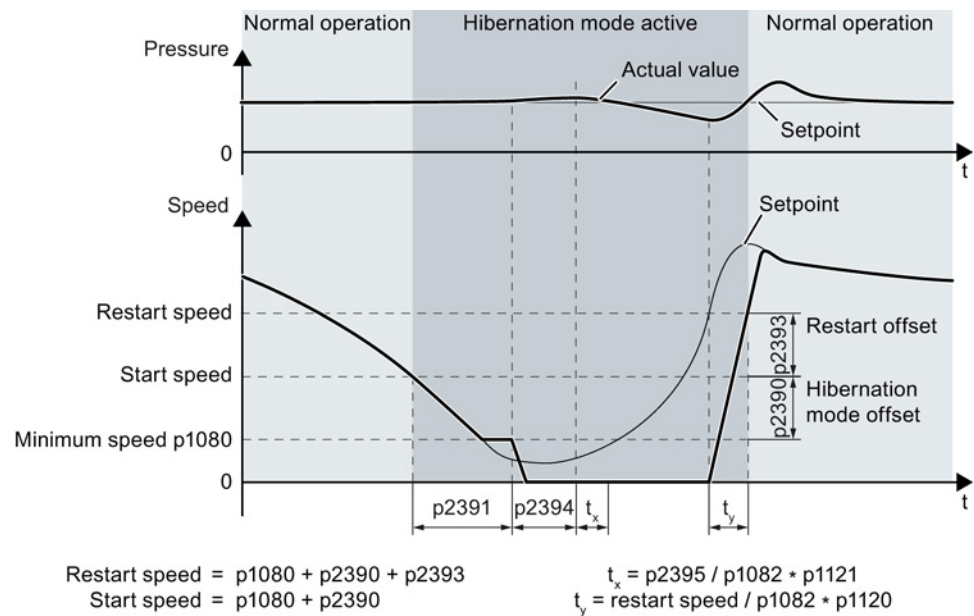


Figure 8-39 Hibernation mode using an external setpoint without boost

Setting the hibernation mode

Parameter	Description	Via tech. setpoint	Via external setpoint
p1080	Minimum speed 0 (factory setting) ... 19500 rpm. Lower limit of the motor speed is independent of the speed setpoint.	✓	✓
p1110	Block negative direction Parameter to block the negative direction	-	✓
p2200	Technology controller enable 0: Technology controller deactivated (factory setting), 1: Technology controller activated	✓	-
p2251 = 1	Technology controller mode 0: Technology controller as main setpoint (factory setting), 1: Technology controller as supplementary setpoint	✓	-
p2298	Technology controller minimum limiting Parameter for the minimum limiting of the technology controller	✓	-
p2398	Hibernation mode 0: Hibernation mode inhibited (factory setting) 1: Hibernation mode enabled	✓	✓
p2390	Hibernation mode start speed 0 (factory setting) ... 21,000 rpm. As soon as this speed is fallen below, the hibernation mode delay time starts and switches off the motor once it expires. The hibernation mode start speed is calculated as follows: Start speed = p1080 + p2390 p1080 = minimum speed p2390 = hibernation mode start speed	✓	✓
p2391	Hibernation mode delay time 0 ... 3599 s (factory setting 120). The hibernation mode delay time starts as soon as the output frequency of the inverter drops below the hibernation mode start speed p2390. If the output frequency increases above this threshold during the delay time, the hibernation mode delay time is interrupted. Otherwise, the motor is switched off after the delay time has expired (if necessary, after a short boost).	✓	✓
p2392	Hibernation mode restart value (as a %) Is required if the technology controller is used as the main setpoint. As soon as the technology controller deviation (r2273) exceeds the hibernation restart value, the inverter switches to normal operation and the motor starts up with a setpoint of 1.05 * (p1080 + p2390). As soon as this value is reached, the motor continues to operate with the setpoint of the technology controller (r2260).	✓	-

Parameter	Description	Via tech. setpoint	Via external setpoint
p2393	<p>Hibernation mode restart speed (rpm) Required for external setpoint input. The motor starts as soon as the setpoint exceeds the restart speed. The restart speed is calculated as follows: Restart speed = p1080 + p2390 + p2393 p1080 = minimum speed p2390 = hibernation mode start speed p2393 = hibernation mode restart speed</p>	-	✓
p2394	<p>Hibernation mode boost duration 0 (factory setting) ... 3599 s. Before the inverter switches over into the hibernation mode, the motor is accelerated for the time set in p2394 according to the acceleration ramp, however, as a maximum to the speed set in p2395.</p>	✓	✓
p2395	<p>Hibernation mode boost speed 0 (factory setting) ... 21000 rpm. Before the inverter switches over into the hibernation mode, the motor is accelerated for the time set in p2394 according to the acceleration ramp, however, as a maximum to the speed set in p2395. Caution: The boost may not result in any overpressure or overrun.</p>	✓	✓
p2396	<p>Maximum hibernation mode shutdown time 0 (factory setting) to 863,999 s. At the latest when this time expires, the inverter switches to normal operation and accelerates up to the start speed (p1080 + p2390). If the inverter is switched to normal operation in advance, the shutdown time is reset to the value set in this parameter. With p2396 = 0, automatic changeover to normal operation after a certain time is deactivated.</p>	✓	✓

Note

Activate the motorized potentiometer as ramp-function generator to use the motorized potentiometer of the inverter as setpoint for the hibernation mode.

- Motorized potentiometer: p1030.4 = 1
- Technology motorized potentiometer: p2230. = 1.

Status of the hibernation mode

Parameter	Description
r2273	Display of the setpoint/actual value deviation of the technology controller
r2397	Actual hibernation mode output speed Actual boost speed before the pulses are inhibited or the actual start speed after restart.
r2399	Hibernation mode status word 00 Hibernation mode enabled (p2398 <> 0) 01 Hibernation mode active 02 Hibernation mode delay time active 03 Hibernation mode boost active 04 Hibernation mode motor switched off 05 Hibernation mode motor switched off, cyclic restart active 06 Energy-saving mode motor restarts 07 Hibernation mode supplies the total setpoint of the ramp-function generator 08 Hibernation mode bypasses the ramp-function generator in the setpoint channel

8.7.18 Free function blocks

The free function blocks permit configurable signal processing in the inverter.

The following free function blocks are available:

- AND, OR, XOR, and NOT logic
- RSR (RS flip-flop), DSR (D flip-flop) flip-flops
- Timers MFP (pulse generator), PCL (pulse shortening), PDE (ON delay), PDF (OFF delay), and PST (pulse stretching)
- ADD (adder), SUB (subtractor), MUL (multiplier), DIV (divider), AVA (absolute value generated), NCM (comparator), and PLI (polyline) arithmetic functions
- LIM (limiter), PT1 (smoothing), INT (integrator), DIF (differentiator) controllers
- NSW (analog) BSW (binary) switches
- LVM limit value monitoring

The number of free function blocks in the inverter is limited. You can only use a function block once. The inverter has 3 adders, for instance. If you have already configured three adders, then no other adders are available.

Example

You can find an example for using the free function blocks in Chapter Interconnecting signals in the converter (Page 373).

Application description for the free function blocks

See also: FAQ (<http://support.automation.siemens.com/WW/view/en/85168215>)

8.8 Switchover between different settings

There are applications that require different inverter settings.

Example:

You connect different motors to one inverter. Depending on the particular motor, the inverter must operate with the associated motor data and the appropriate ramp-function generator.

Drive data sets (DDS)

You can set several inverter functions differently and then switch over between the different settings.

The associated parameters are indexed (index 0, 1, 2 or 3). Using control commands select one of the four indexes and therefore one of the four saved settings.

The settings in the inverter with the same index are called the drive data set.

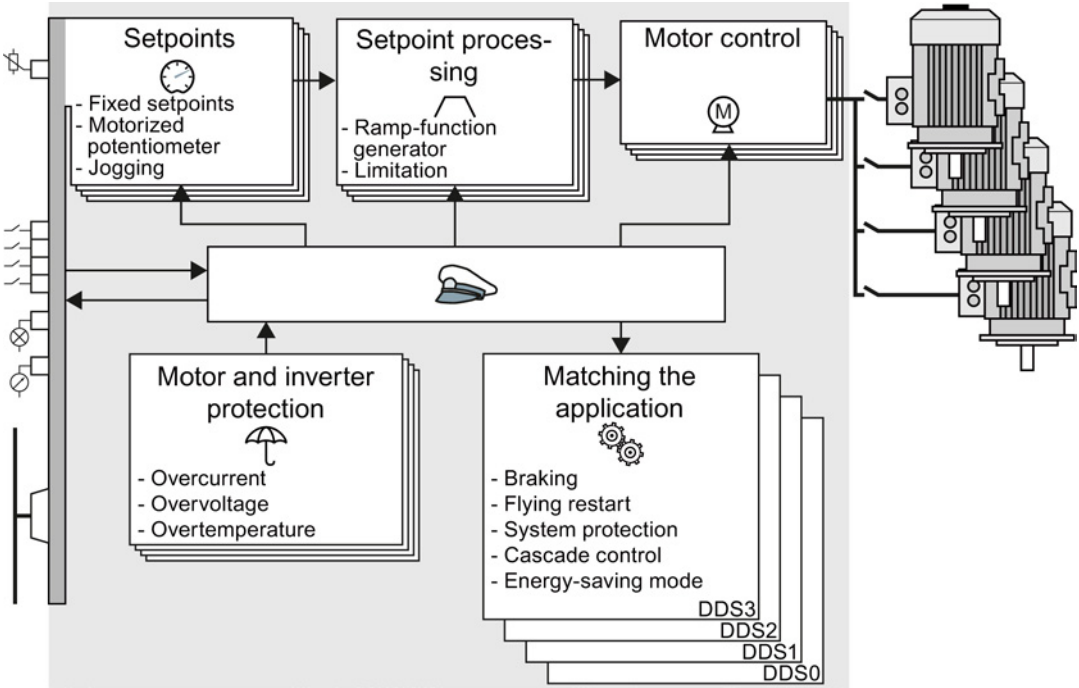


Figure 8-40 Switching over between different settings using drive data sets (DDS)

Using parameter p0180 you can define the number of drive data sets (1 ... 4).

Table 8- 32 Selecting the number of drive data sets

Parameter	Description
p0010 = 15	Drive commissioning: Data sets
p0180	Drive data sets (DDS) number(factory setting: 1)
p0010 = 0	Drive commissioning: Ready

Table 8- 33 Parameters for switching the drive data sets:

Parameter	Description
p0820[0...n]	Drive data set selection DDS bit 0
p0821[0...n]	Drive data set selection DDS bit 1
	If you use several command data sets CDS, then you must set this parameter for each CDS. The parameters are assigned to a CDS through their index: CDS0: p0820[0], p0821[0] CDS1: p0820[1], p0821[1] ...
p0826	Motor changeover, motor number Each drive data set is assigned a motor number: p0826[0] = motor number for drive data set 0. ... p0826[3] = motor number for drive data set 3. If you operate the same motor with different drive data sets, then you must enter the same motor number in every index of parameter p0826. In this particular case, you can also switch over between the different drive data sets in operation. If you operate different motors on one inverter, then you must number the motors in parameter p0826. In this case, you may only switch over the drive data sets in the "ready for operation" state with the motor switched-off. The switchover time is approx. 50 ms.
r0051	Displaying the number of the DDS that is currently effective

For an overview of all the parameters that belong to the drive data sets and can be switched, see the List Manual.

Table 8- 34 Parameters for copying the drive data sets

Parameter	Description
p0819[0]	Source drive data set
p0819[1]	Target drive data set
p0819[2] = 1	Start copy operation

For more information, see the List Manual (the parameter list and function diagram 8565).

Backing up data and series commissioning

External data backup

After commissioning, your settings are saved in the converter so that they are protected against power failure.

We recommend that you additionally back up the settings on a storage medium outside the converter. Without backup, your settings could be lost if the converter developed a defect (see also Replace Control Unit (Page 273)).

The following storage media are available for your settings:

- Memory card
- PG/PC
- Operator panel

Note

Data backup using operator panels with USB connection with the PG/PC is not possible

If the converter is connected to a PG/PC via a USB cable, you can save any data on the memory card using an operator panel.

- Before you save data to the memory card using an operator panel, disconnect the USB connection between the PG/PC and converter.
-

Carrying out series commissioning

Series commissioning is the commissioning of several identical drives.

Precondition

The Control Unit to which the settings are transferred has the same order number and the same or a higher firmware version as the source Control Unit.

Overview

You must proceed as follows to carry out series commissioning:

1. Commission the first converter.
2. Back up the settings of the first converter to an external storage medium.
3. Transfer the settings of the first converter to another converter via the storage medium.

9.1 Backing up and transferring settings using a memory card

What memory cards do we recommend?

You will find the recommended memory cards in Section: Technical data for CU230P-2 (Page 309).

Using memory cards from other manufacturers

The inverter only supports memory cards up to 2 GB. SDHC cards (SD High Capacity) and SDXC cards (SD Extended Capacity) are not permitted.

If you use other SD or MMC memory cards, then you must format the memory card as follows:

- MMC: Format FAT 16
 - Insert the card into your PC's card reader.
 - Command to format the card:
format x: /fs:fat (x: Drive code of the memory card on your PC)
- SD: Format FAT 16 or FAT 32
 - Insert the card into your PC's card reader.
 - Command to format the card:
format x: /fs:fat or format x: /fs:fat32 (x: Drive code of the memory card on your PC.)

Functional restrictions with memory cards from other manufacturers

The following functions are either not possible – or only with some restrictions – when using memory cards from other manufacturers:

- Licensing functions is only possible using a recommended memory card.
- Know-how protection is only possible using a recommended memory card.
- Under certain circumstances, memory cards from other manufacturers do not support writing or reading data from/to the inverter.

9.1.1 Saving setting on memory card

We recommend that you insert the memory card before switching on the inverter. The inverter always also backs up its settings on an inserted card.

If you wish to backup the inverter settings on a memory card, you have two options:

Automatically backing up

Preconditions


- The inverter power supply has been switched off.
- No USB cable is inserted in the inverter.

Procedure

Proceed as follows to automatically backup your settings:



1. Insert an empty memory card into the inverter.
2. Then switch-on the inverter power supply.

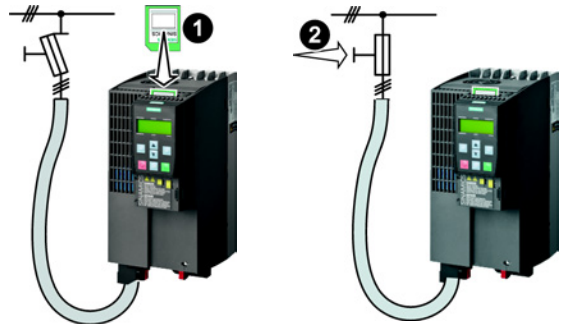

After the power supply has been switched on, the inverter copies its changed settings to the memory card.

Note

If the memory card is not empty, then the inverter accepts the data from the memory card. This data then overwrites the data in the inverter.

- Only use empty memory cards to automatically backup your settings.

Manually backing up

Preconditions


- The inverter power supply has been switched on.
- No memory card is inserted in the inverter.




Procedure




Proceed as follows to back up your settings on a memory card:

1. Go online with STARTER, e.g. via a USB cable.
In STARTER, press the "Copy RAM to ROM" button .
In your drive, select "Drive Navigator".
2. Select the "Commissioning" button.
3. Select the button to transfer the settings to the memory card.


4. Select the settings as shown in the diagram and start the data backup.
5. Close the screen forms.

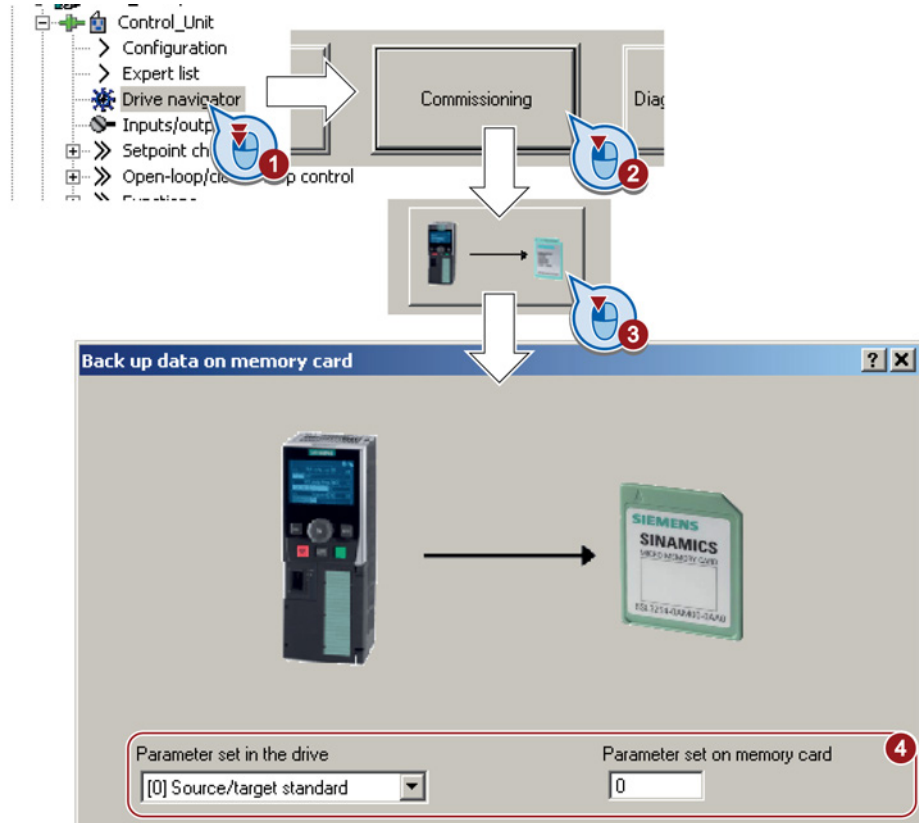

■ You have backed up the settings of the inverter on the memory card.

➔ 1 2  Proceed as follows to back up your settings on a memory card

 1. Remove the USB cable if one is inserted in the inverter.
2. Plug a BOP-2 onto the inverter.
3. Go to the menu level "EXTRAS".
4. In the menu, select "EXTRAS" - "TO CRD".



■ You have backed up the settings of the inverter on the memory card.

9.1.2 Transferring the setting from the memory card

Automatically transferring

Precondition


The inverter power supply has been switched off.

Procedure

Proceed as follows to automatically transfer your settings:



1. Insert the memory card into the inverter.
2. Then switch on the inverter power supply.

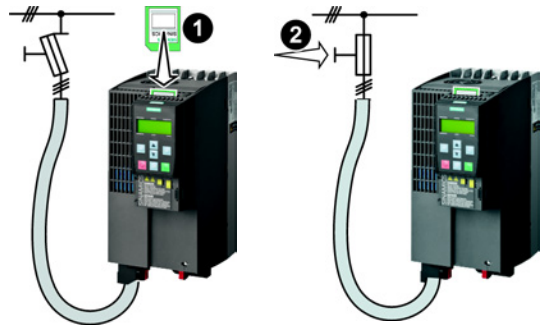


- If there is valid parameter data on the memory card, then the inverter accepts the data from the memory card.

Manually transferring

Preconditions

- The inverter power supply has been switched on.
- No memory card is inserted in the inverter.

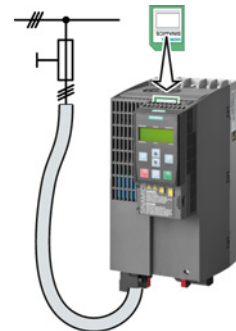


Procedure



Proceed as follows to transfer settings from a memory card to the inverter:

1. Go online with STARTER, and in your drive, select the "Drive Navigator".
2. Select the "Commissioning" button.
3. Select the button to transfer the data from the memory card to the inverter.
4. Select the settings as shown in the diagram and start the data backup.

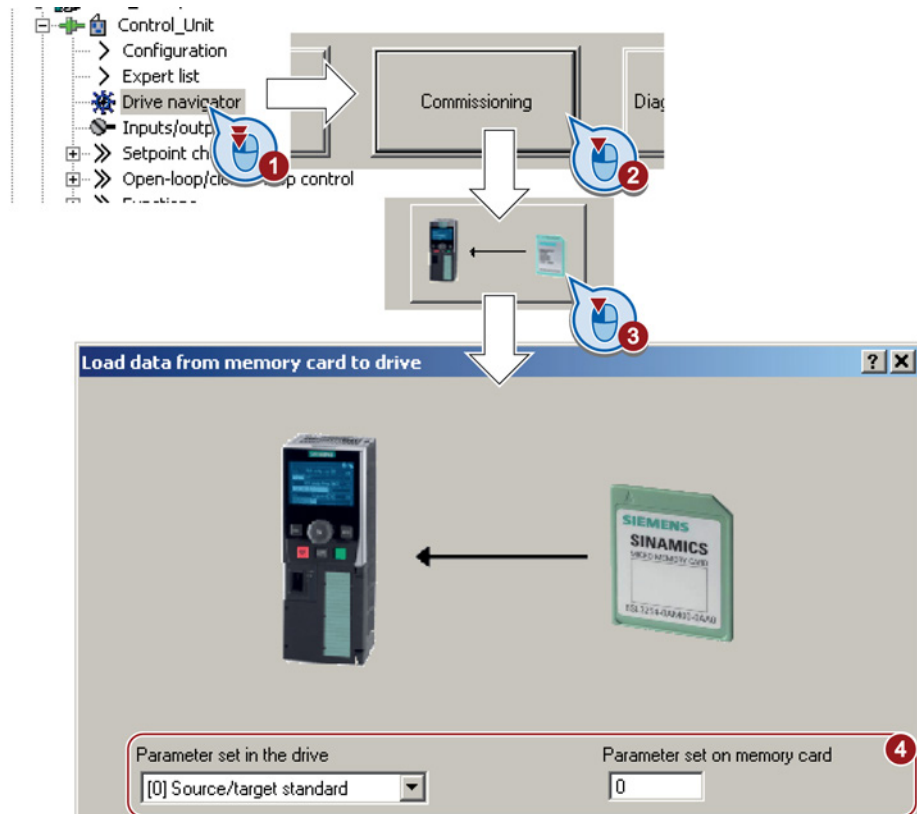


5. Close the screen forms.
6. Go offline with STARTER.
7. Switch off the inverter power supply.
8. Wait until all LED on the inverter go dark.
9. Switch on the inverter power supply again.

Your settings become effective after this power-on reset.




You have now transferred your settings from a memory card to the inverter.

 9.1 Backing up and transferring settings using a memory card



Proceed as follows to back up your settings on a memory card

 1. Remove the USB cable if one is inserted in the inverter.
2. Attach the BOP-2 operator panel to the inverter.
3. Go to the menu level "EXTRAS".
4. Start data transfer in the menu "EXTRAS" - "FROM CRD".
5. Switch off the inverter power supply.
6. Wait until all LEDs on the inverter are dark.
7. Switch on the inverter power supply again.
8. Your settings take effect after this power-on reset.



You have written the settings from the memory card to the inverter.

9.1.3 Safely remove the memory card

 
NOTICE

Data loss from improper handling of the memory card

If you remove the memory card when the converter is switched on without implementing the "safe removal" function you may destroy the file system on the memory card. The data on the memory card are lost. The memory card will only function again after formatting.


- Only remove the memory card using the "safe removal" function.

Procedure



To safely remove the memory card using STARTER, proceed as follows:

1. In the Drive Navigator select the following screen form:

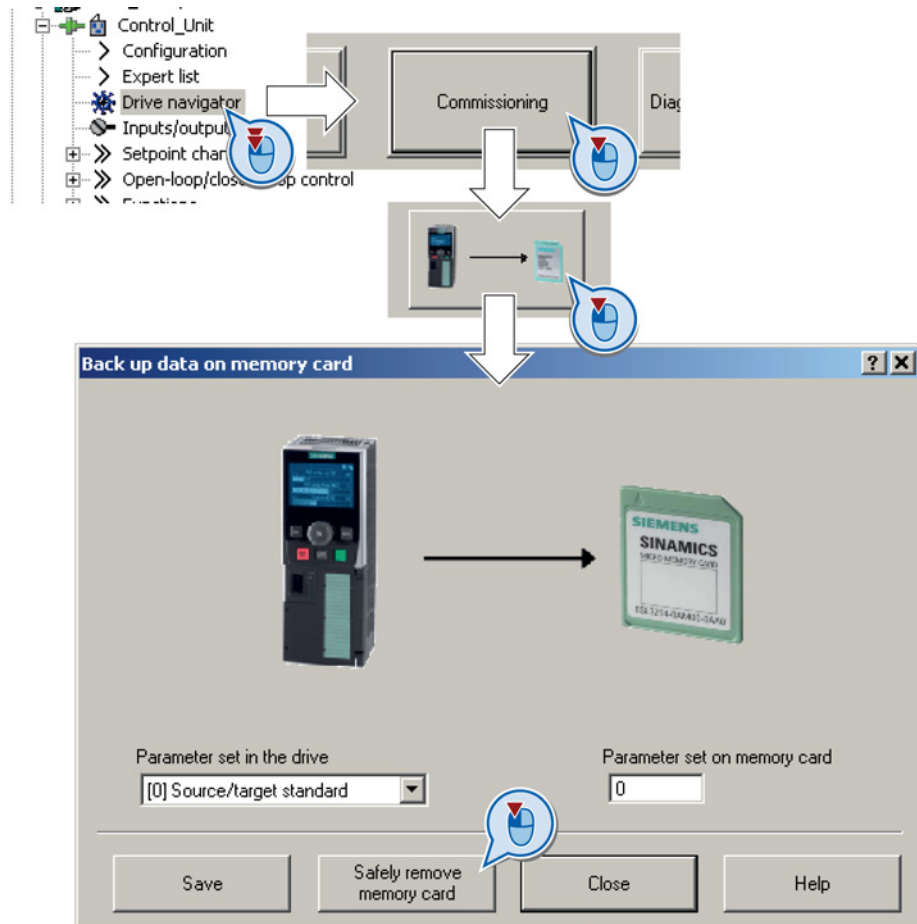

2. Click on the button to safely remove the memory card.
3. Remove the memory card from the inverter after the appropriate message has been output.



You have now safely removed the memory card from the inverter.


Safely removing a memory card using the BOP-2

Procedure



To safely remove the memory card using BOP-2, proceed as follows:

1. Go to parameter p9400. If a memory card is correctly inserted, then p9400=1.
2. Set 9400 = 2. BOP-2 shows "BUSY" for a few seconds and then jumps either to p9400 = 3 or p9400 = 100.
3. For p9400 = 3, remove the memory card from the inverter.
4. For p9400 = 100, it is not permissible that you remove the memory card.
In this case, again set p9400 = 2.

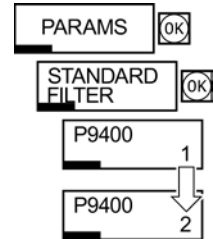


You have now safely removed the memory card using the BOP-2:

9.2 Saving settings on a PC

Precondition

With the supply voltage switched on, you can transfer the inverter settings from the inverter to a PG/PC, or the data from a PG/PC to the inverter.

This requires you to have installed the STARTER commissioning tool on your PG/PC.

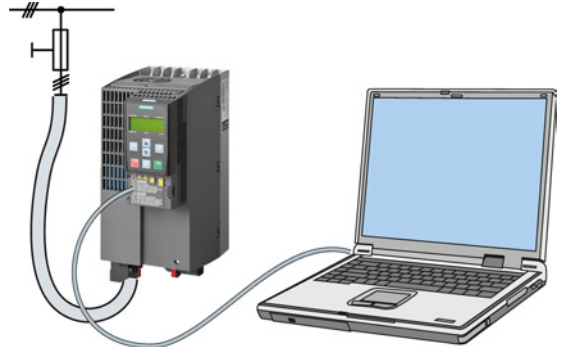





You will find additional information about STARTER in Section Tools to commission the converter (Page 40).

Inverter → PC/PG

Procedure



To back up the settings, proceed as follows:

1. Go online with STARTER : .
2. Select the button "Download project to PG": .
3. To save the data in the PG, select the button: .
4. Go offline with STARTER : .







You have backed up the settings.

PC/PG → inverter

Procedure



To transfer the settings, proceed as follows:

1. Go online with STARTER : .
2. Select the button "Download project to target system": .
3. To save the data in the inverter, select the "Copy RAM to ROM" button: .
4. Go offline with STARTER : .




You have transferred the settings.

9.3 Saving settings on an operator panel

Precondition

When the power supply is switched on, you can transfer the settings of the variable speed drive to the BOP-2 or vice versa.

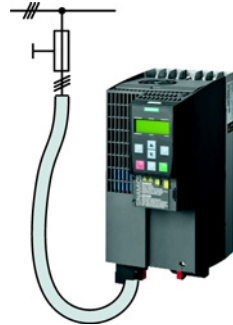

Inverter → BOP-2



Procedure

To back up the settings on the BOP-2, proceed as follows:

1. Attach the operator panel to the inverter.
2. Start data transfer in the menu "EXTRAS" - "TO BOP".



You have backed up the settings on the BOP-2.


BOP-2 → inverter



Procedure

To transfer the settings to the inverter, proceed as follows:

 1. Attach the operator panel to the inverter.
2. Start data transfer in the menu "EXTRAS" - "FROM BOP".
3. Switch off the inverter power supply.
4. Wait until all LEDs on the inverter are dark. Now switch on the inverter power supply again. Your settings only become effective after this power-on reset.



You have transferred the settings to the inverter.



9.4 Other ways to back up settings

In addition to the default setting, the inverter has an internal memory for backing up three other settings.

On the memory card, you can back up 99 other settings in addition to the default setting.

You will find additional information on the Internet at: Memory options (<http://support.automation.siemens.com/WW/view/en/43512514>).

Table 9- 1 Operation on the BOP-2

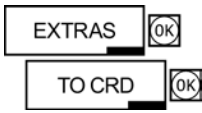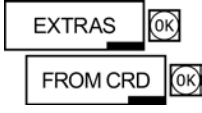	Description
	The converter writes its setting 0, 10, 11 or 12 to the memory card in accordance with p0802. The file on the memory card is assigned the number according to p0802.
	The converter loads the setting with the number according to p0802 from the memory card and thus overwrites its setting 0, 10, 11 or 12.

9.5 Write and know-how protection

The inverter offers the option to protect configured settings from being changed or copied.

Write protection and know-how protection are available for this purpose.

9.5.1 Write protection

Write protection prevents converter settings from being inadvertently changed. If you work with the STARTER, the write protection is only effective online. The offline project of the Starter is not write-protected.

The write protection applies to all user interfaces, and thus also to parameter changes via a fieldbus.

The write protection is not password-protected.

Activate and deactivate write protection


Precondition


You are online with STARTER.

Procedure

Proceed as follows to activate or deactivate the write protection:




1. Select the converter in your STARTER project with the left mouse button.
2. Open the shortcut menu with a right click.
3. Activate or deactivate write protection.
4. Press the "Copy RAM to ROM" button . Otherwise, your settings will be lost when the converter is switched off.

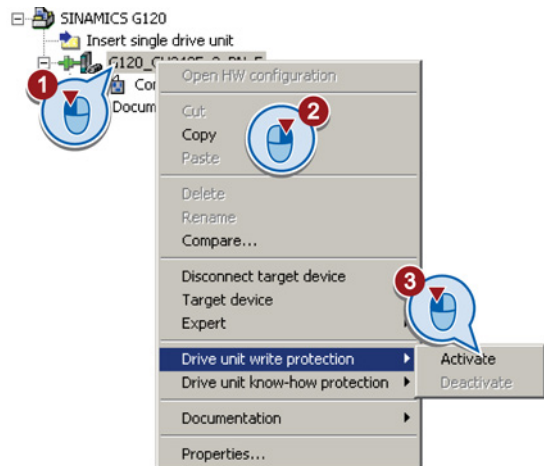

You have activated or deactivated write protection.

Points to note about restoring the factory settings

If you select "Reset to factory settings" using the  button when write protection is active, the following confirmation prompt opens.



The confirmation prompt is not issued, if you select another way to restore the factory setting, e.g. using the expert list.

Note

Points to note regarding CAN, BACnet and MODBUS

Using these bus systems, parameter factory settings can be changed despite active write protection. So that write protection is also active when accessing via these fieldbuses, you must additionally set p7762 to 1.

This setting is only possible via the expert list.

Exceptions to write protection

Some functions are excluded from write protection, e.g.:

- Activating/deactivating write protection (p7761)
- Changing the access level (p0003)
- Saving parameters (p0971)
- Safely removing the memory card (p9400)
- Restoring the factory setting
- Importing settings from an external data backup, e.g. upload from a memory card to the converter.

The individual parameters that are excluded from the write protection, can be found in the List Manual in Chapter "Parameters for write protection and protection of know-how".

9.5.2 Know-how protection

Know-how protection

The know-how protection is used to encrypt configuring/engineering know-how, and protect it against being changed or copied.

The settings of the converter are protected by a password.

If the password is lost, only default settings are possible.

The active know-how protection provides the following:

- All setting parameters are invisible.
- Parameters cannot be changed with a commissioning tool, e.g. operator panel or STARTER.
- It is not possible to download the converter settings with the Starter or via a memory card
- It is not possible to use the trace function in the STARTER.
- Deleting the alarm history
- The STARTER dialog screens are disabled. The expert list in the STARTER contains only display parameters.

In the case of active know-how protection, support by technical support personnel is only possible with the consent of the machine manufacturer.

Copy protection

In conjunction with the copy protection, the converter settings can be coupled only to a single, pre-defined hardware.

The know-how protection with copy protection is possible only with the recommended Siemens memory card; also see Section: Technical data for CU230P-2 (Page 309)

Exception list

The active know-how protection permits an exception list for parameters to be defined that the customer may access.

If you remove the parameter for the password from the exception list, the know-how protection can only be undone by reverting to the factory settings.



Actions that are possible during active know-how protection

- Restoring factory settings
- Acknowledging messages
- Displaying messages
- Show message history
- Reading out diagnostic buffer
- Switching to the control panel (complete control panel functionality: Fetch master control, all buttons and setting parameters)
- Upload (only parameters that are accessible even though know-how protection is active)

The individual parameters that are excluded from the know-how protection can be found in the List Manual in Chapter "Parameters for write protection and protection of know-how".

Commissioning the converter with know-how protection

Procedure - overview

1. Commission the converter.
2. Create the exception list (Page 270).
3. Activate the know-how protection (Page 268).
4. Save the settings in the converter by copying RAM to ROM with  or via p0971 = 1.
5. Save the project with  on the PG/PC. Also back up any other project-related data (machine type, password, etc.) that may be required for the support of the end customer.

9.5.2.1 Settings for the know-how protection

Activating know-how protection

Preconditions

- You are online with STARTER.
If you have created a project offline on your computer, you must download it to the inverter and go online.
- You have inserted the recommended Siemens card. See also Section: Technical data for CU230P-2 (Page 309).

Procedure


Proceed as follows to activate know-how protection:



1. Select the inverter in the STARTER project, and then select "Know-how protection drive unit/activate ..." in the shortcut menu (see also Write protection (Page 264)).

2. Enter your password. Length of the password: 1 ... 30 characters.

For the password, we recommend that you only use characters from the ASCII character set. If you use any character for the password, then if changes are made to the Windows language settings after activating know-how protection, errors can occur when subsequently checking the password.

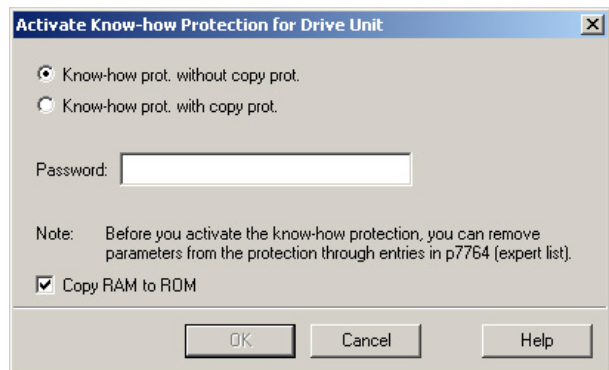

3. In this screen form, press the "Copy RAM to ROM" button. This means that you save your settings so that they are protected against power failure.



You have activated know-how protection.

Backing up settings on the memory card

When the know-how protection is activated, you can save the settings via p0971 on the memory card.

To do this, set p0971 = 1. The data is encrypted before being written to the memory card. After saving, p0971 is reset to 0.

Deactivate know-how protection, delete password

Preconditions


- You are online with STARTER.
- You have inserted the recommended Siemens card. See also Section: Technical data for CU230P-2 (Page 309).

Procedure

Proceed as follows to deactivate know-how protection:



1. Select the inverter in the STARTER project, and right-click to open the dialog box "Know-how protection drive unit/deactivate ...".
2. There, select the desired option.
 - Temporary status: Know-how protection is active again after switching the power supply off and on.

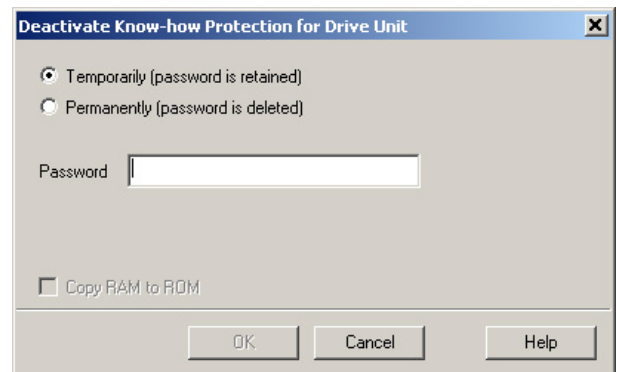

- Final status: If you select "Copy RAM to ROM", the inverter immediately deletes the password. If you do not select "Copy RAM to ROM", the inverter deletes the password the next time the supply voltage is switched off.

3. Enter the password and exit the screen form with OK.



You have deactivated know-how protection.

Changing the password

Select the inverter in the STARTER project and open the dialog box via the shortcut menu "know-how protection drive unit/change password ...".




9.5.2.2 Creating an exception list for the know-how protection

Using the exception list, you as a machine manufacturer may make individual adjustable parameters accessible to end customers although know-how protection is active. You may define the exception list via parameters p7763 and p7764 in the expert list. Specify the number of parameters for the selection list in p7763. Assign the individual indexes to the parameter numbers of the selection list in p7764.

Procedure



Proceed as follows to change the number of parameters for the selection list:

1. Save the inverter settings via an upload () on the PC/PG and go offline ()
2. In the project on the PC, set p7763 to the desired value.
3. Save the project.
4. Go online and load the project into the inverter ()
5. Now make the additional settings in p7764.



You have modified the number of parameters for the selection list.

Factory setting for the exception list:

- p7763 = 1 (selection list contains precisely one parameter)
- p7764[0] = 7766 (parameter number for entering the password)

Note

Block access to the inverter as a result of incomplete exception lists

If you remove p7766 from the exception list, you can no longer enter a password and therefore no longer de-activate know-how protection.


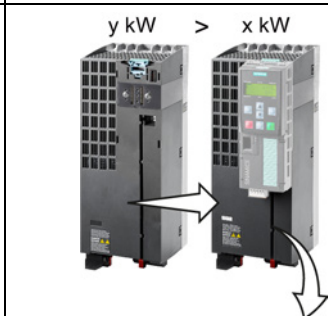
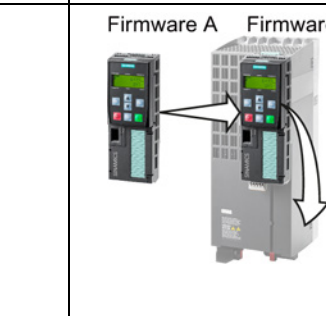
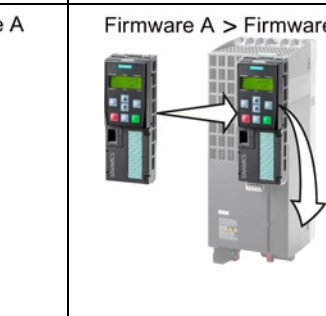
In this case to access the inverter again, you have to reset the inverter to the factory settings.

Corrective maintenance

10.1 Overview of replacing converter components

Permissible replacement of components

In the event of a long-term function fault, you must replace the Power Module or Control Unit. The inverter's Power Module and Control Unit can be replaced independently of each other.

Replacing the Power Module		Replacing the Control Unit	
Replacement: <ul style="list-style-type: none"> • Same type • Same power rating 	Replacement: <ul style="list-style-type: none"> • Same type • Same frame size • <i>Higher</i> power rating 	Replacement: <ul style="list-style-type: none"> • Same type • Same firmware version 	Replacement: <ul style="list-style-type: none"> • Same type • <i>higher</i> firmware version (e.g. replace FW V4.2 by FW V4.3)
			
	Power Module and motor must be adapted to one another (ratio of motor and Power Module rated power > 1/8)	After replacing the Control Unit, you must restore the inverter's settings.	

⚠ WARNING

Risk of injury due to uncontrolled drive motion

Replacing inverters of different types can result in uncontrolled motion of the drive.

- In all cases that are not permitted according to the table above, recommission the drive after replacing an inverter.

Special issue relating to communication via PROFINET: Device replacement without removable data storage medium

The inverter supports the PROFINET functionality, replacing the device without data storage medium.

Precondition

The topology of the PROFINET IO system with the IO device involved is configured in your higher-level control system.

Replacing the device

The Control Unit can be replaced without having to insert a removable data storage medium (e.g. a memory card) with the saved device names in the inverter – or having to reassign the device names with a PG.

Details of the device replacement without removable storage medium can be found in the PROFINET system description


(<http://support.automation.siemens.com/WW/view/en/19292127>).

Replacing further components

The replacement of further components is described in the hardware installation manual of the associated Power Module.

10.2 Replace Control Unit



 DANGER
Risk of electric shock from touching live parts 230 V AC may be in place on terminals DO 0 and DO 2 of the control unit's relay output independently of the voltage status of the power module. Touching the contacts may result in an electrical shock. Protective measures before exchanging the control unit: 1. Switch the contacts off-circuit. 2. Secure the power supply against being unintentionally switched on again. 3. Check that the cabinet is de-energized.

Replacing a Control Unit with data backup on a memory card



Procedure

Proceed as follows to exchange the Control Unit:

1. Disconnect the line voltage to the Power Module and (if installed) the external 24 V supply or the voltage for the digital outputs of the Control Unit.
2. Remove the signal cables from the Control Unit.
3. Remove the defective Control Unit.
4. Mount the new Control Unit onto the Power Module. The new Control Unit must have the same order number and the same or a higher firmware version as the Control Unit that was replaced.
5. Remove the memory card from the old Control Unit and insert it in the new Control Unit.
6. Reconnect the signal cables of the Control Unit.
7. Connect up the line voltage again.
8. The inverter loads the settings from the memory card.
9. After loading, check whether the inverter outputs Alarm A01028.
 - Alarm A01028:
The settings that have been loaded are not compatible with the inverter.
Clear the alarm with p0971 = 1, and recommission the drive.
 - No alarm A01028:
The inverter accepts the settings that have been loaded.



You have successfully replaced the Control Unit.


Replacing a Control Unit with data backup in the PC



Procedure

Proceed as follows to exchange the Control Unit:

1. Disconnect the line voltage to the Power Module and (if installed) the external 24 V supply or the voltage for the digital outputs of the Control Unit.
2. Remove the signal cables of the Control Unit.
3. Remove the defective Control Unit.
4. Mount the new Control Unit onto the Power Module.
5. Reconnect the signal cables of the Control Unit.
6. Connect up the line voltage again.
7. Open the project that matches the drive in STARTER.

8. Go online and transfer the settings from the PC into the inverter by pressing the  button.

The inverter signals faults after the download. Ignore these faults, as they will be automatically acknowledged by the following steps.

9. Save your settings (copy RAM to ROM).



You have successfully replaced the Control Unit.

10.3 Replacing the Control Unit without data backup

If you do not backup the settings, then you must recommission the drive after replacing the Control Unit.

Procedure



To replace the Control Unit without backed-up settings, proceed as follows:

1. Disconnect the line voltage to the Power Module and (if installed) the external 24 V supply or the voltage for the digital outputs of the Control Unit.
2. Remove the signal cables of the Control Unit.
3. Remove the defective Control Unit.
4. Mount the new Control Unit on the Power Module.
5. Reconnect the signal cables of the Control Unit.
6. Connect up the line voltage again.
7. Recommission the drive.



The Control Unit replacement has been completed after the drive has been successfully commissioned.

10.4 Replacing a Control Unit with active know-how protection

Replacing devices during know-how protection without copy protection

For know-how protection without copy protection, the converter settings can be transferred to another converter using a memory card.

See also:

- Saving setting on memory card (Page 253)
- Transferring the setting from the memory card (Page 256)

Replacing devices for know-how protection with copy protection

The know-how protection with copy protection prevents the inverter settings from being copied and passed on. This function is predominantly used by machine manufacturers.

If know-how protection with copy protection is active, the inverter cannot be replaced as described in "Replace Control Unit (Page 273)".

However, to allow the inverter to be replaced, you must use a Siemens memory card, and the machine manufacturer must have an identical machine that he uses as sample.

There are two options for replacing the device:

Option 1: The machine manufacturer only knows the serial number of the new inverter

- The end customer provides the machine manufacturer with the following information:
 - For which machine must the inverter be replaced?
 - What is the serial number (r7758) of the new inverter?
- The machine manufacturer goes online on the sample machine.
 - deactivates the know-how protection, see Settings for the know-how protection (Page 268)
 - enters the serial number of the new inverter in p7759
 - enters the serial number of the inserted memory card as reference serial number in p7769
 - activates the know-how protection with copy protection ("Copy RAM to ROM" must be activated!), see Settings for the know-how protection (Page 268)
 - writes the configuration with p0971 = 1 to the memory card
 - sends the memory card to the end customer
- The end customer inserts the memory card and switches on the inverter.

When powering up, the inverter checks the serial numbers of the card and when there is a match, the inverter goes into the "ready to start" state.

If the numbers do not match, then the inverter signals fault F13100 (no valid memory card).

Option 2: The machine manufacturer knows the serial number of the new inverter and the serial number of the memory card

- The end customer provides the machine manufacturer with the following information:
 - For which machine must the inverter be replaced?
 - What is the serial number (r7758) of the new inverter?
 - What is the serial number of the memory card?
- The machine manufacturer goes online on the sample machine.
 - deactivates the know-how protection, see Settings for the know-how protection (Page 268)
 - enters the serial number of the new inverter in p7759
 - enters the serial number of the customer's memory card as reference serial number in p7769
 - activates the know-how protection with copy protection ("Copy RAM to ROM" must be activated!), see Settings for the know-how protection (Page 268)
 - writes the configuration with p0971 = 1 to the memory card
 - copies the encrypted project from the card to his PC
 - for example, sends it by e-mail to the end customer
- The end customer copies the project to the Siemens memory card that belongs to the machine, inserts it in the inverter and switches on the inverter.

When powering up, the inverter checks the serial numbers of the card and when there is a match, the inverter goes into the "ready to start" state.

If the numbers do not match, then the inverter signals fault F13100 (no valid memory card).

10.5 Replacing a Power Module

Procedure



Proceed as follows to exchange a Power Module:

1. Switch off the supply voltage to the Power Module.
You do not have to switch off an external 24 V power supply for the Control Unit if one is being used.



 DANGER

Risk of electric shock from touching inverter connections
--

After the power supply has been switched off, it takes up to 5 min. until the capacitors in the inverter have discharged so that the remaining voltage is non-hazardous.
--

Check the voltage at the inverter connections, before removing the connection cables.

2. Remove the connecting cables of the Power Module.
3. Remove the Control Unit from the Power Module.
4. Replace the old Power Module with the new Power Module.
5. Mount the Control Unit onto the new Power Module.
6. Connect up the new Power Module using the connecting cables.

NOTICE

Material damage when interchanging the motor connecting cables

The direction in which the motor rotates switches if you exchange the two phases of the motor line.

Connect the three phases of the motor lines in the right order.

After exchanging the power module check the direction in which the motor rotates.

7. Switch on the line supply and, if being used, the 24 V supply of the Control Unit.



You have successfully replaced the Power Module.

10.6 Upgrading the firmware

When upgrading the firmware, you replace the inverter firmware by a later version. Only update the firmware to a later version if you require the expanded functional scope of the newer version.

Precondition

- The firmware version of your inverter is at least V4.5.
- You have the memory card with the firmware that matches the inverter.
- Inverter and memory card have different firmware versions.


Procedure

Proceed as follows to upgrade the inverter firmware to a later version:


1. Switch off the inverter power supply.
2. Wait until all LEDs on the inverter go dark.
3. Insert the card with the matching firmware into the inverter slot until it latches into place.
4. Switch on the inverter power supply.
5. The inverter transfers the firmware from the memory card into its memory.

The transfer takes approximately 5 ... 10 minutes.

While data is being transferred, the LED RDY on the inverter stays red. The LED BF flashes orange with a variable frequency.

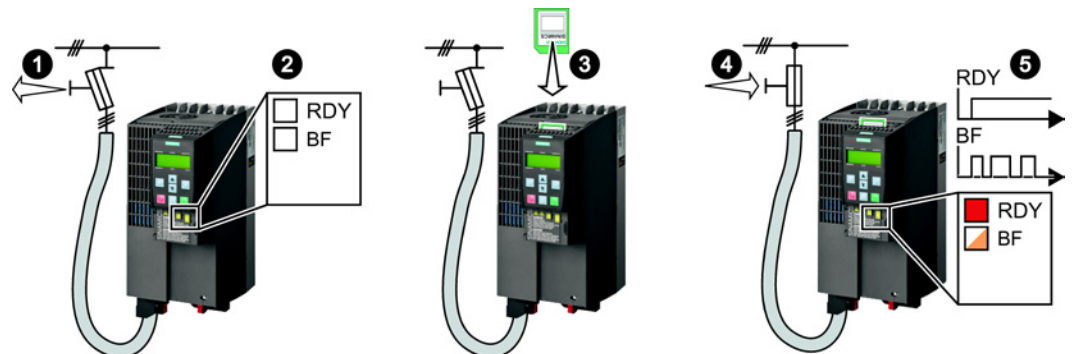

6. At the end of the transfer, the LED RDY and BF slowly flash red (0.5 Hz).

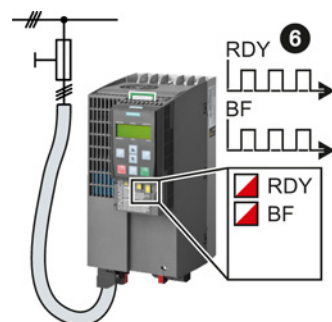

Note

Corrupted firmware if the power supply fails during the transfer

The inverter firmware can be corrupted if the power supply fails during the transfer.

- Do not switch off the inverter power supply as long as data is being transferred.
-

7. Switch off the inverter power supply.

8. Wait until all LEDs on the inverter go dark.

Decide whether you will withdraw the memory card from the inverter:

- You leave the memory card in the inverter:

When the memory card still does not contain any data backup of the inverter settings, in the next step, the inverter writes its settings to the memory card.

When the memory card already contains a data backup of the inverter settings, in the next step, the inverter takes the settings from the memory card.

Note

The inverter takes the settings from the memory card

The next steps can change the inverter settings.


- If the memory card already contains settings, check as to whether these settings match the inverter.
 - Remove the memory card if these settings do not match the inverter.
-

- You remove the memory card:

The inverter keeps its settings.

9. Switch on the inverter power supply.

10. If the firmware upgrade was successful, after several seconds the inverter LED RDY turns green.

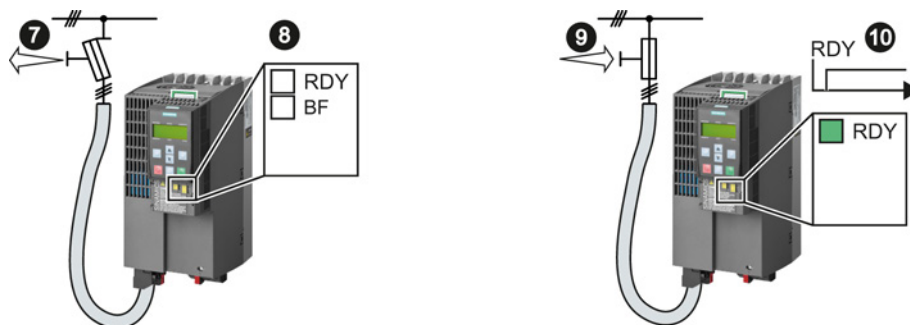

■ You have successfully updated the firmware to a more recent version. When upgrading, your settings in the inverter are kept.

10.7 Firmware downgrade

When downgrading the firmware, you replace the inverter firmware by an older version. Only downgrade the firmware to an older version if, after replacing an inverter, you require the same firmware in all of your inverters.

Precondition

- The firmware version of your inverter is at least V4.6.
- You have the memory card with the firmware that matches the inverter.
- Inverter and memory card have different firmware versions.
- You have backed up your settings on the memory card, in an operator panel or in a PC.


Procedure

Proceed as follows to downgrade the inverter firmware to an older version:


1. Switch off the inverter power supply.
2. Wait until all LEDs on the inverter go dark.
3. Insert the card with the matching firmware into the inverter slot until it latches into place.
4. Switch on the inverter power supply.
5. The inverter transfers the firmware from the memory card into its memory.

The transfer takes approximately 5 ... 10 minutes.

While data is being transferred, the LED RDY on the inverter stays red. The LED BF flashes orange with a variable frequency.

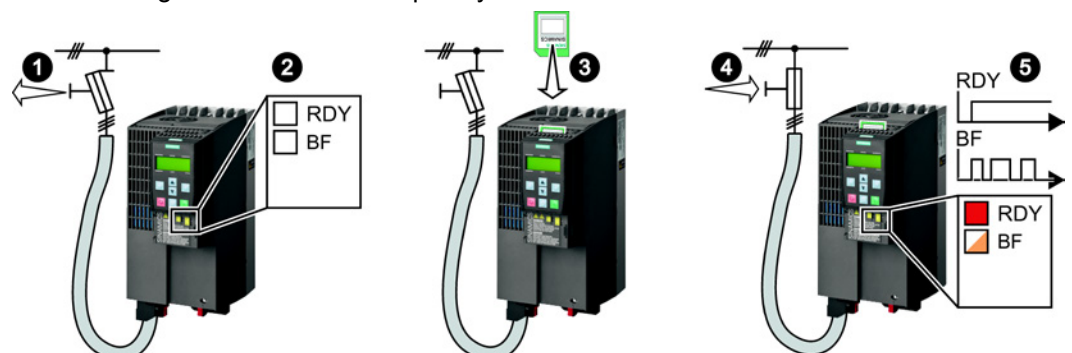

6. At the end of the transfer, the LED RDY and BF slowly flash red (0.5 Hz).

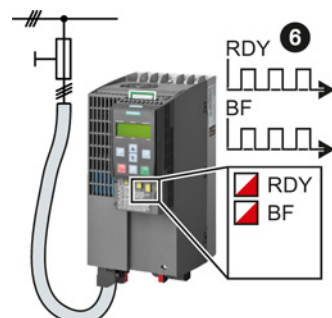

Note

Corrupted firmware if the power supply fails during the transfer

The inverter firmware can be corrupted if the power supply fails during the transfer.

- Do not switch off the inverter power supply as long as data is being transferred.
-

7. Switch off the inverter power supply.
8. Wait until all LEDs on the inverter go dark.

Decide whether you will withdraw the memory card from the inverter:

- You leave the memory card in the inverter:

When the memory card already contains a data backup of the inverter settings, in the next step, the inverter takes the settings from the memory card.

Note

The inverter takes the settings from the memory card


The next steps can change the inverter settings.

- If the memory card already contains settings, check as to whether these settings match the inverter.
 - Remove the memory card if these settings do not match the inverter.
-

- You remove the memory card:

The inverter is reset to the factory setting.

9. Switch on the inverter power supply.
10. If the firmware downgrade was successful, after several seconds the inverter LED RDY turns green.

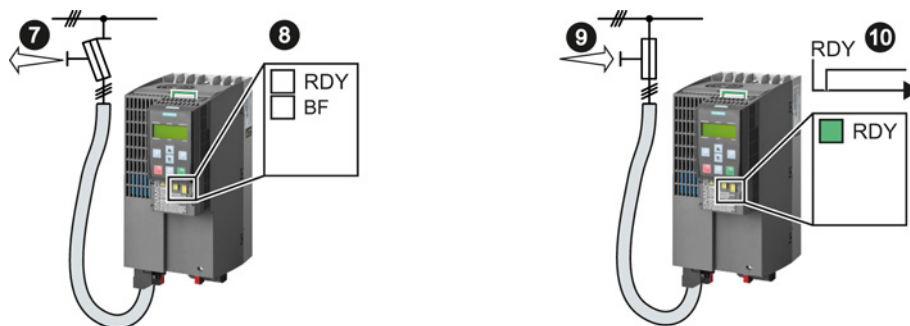

After the firmware has been downgraded, the inverter has been reset to the factory settings.

11. If the memory card does not contain a data backup of the inverter settings, then you must transfer your settings to the inverter from another data backup.

See also Section: Backing up data and series commissioning (Page 251).




You have downgraded the firmware of the inverter to an older version and have transferred the backed up settings into the inverter.

10.8 Correcting an unsuccessful firmware upgrade or downgrade

How does the inverter signal an unsuccessful upgrade or downgrade?

The inverter signals an unsuccessful firmware upgrade or downgrade by a quickly flashing LED RDY and the lit LED BF.

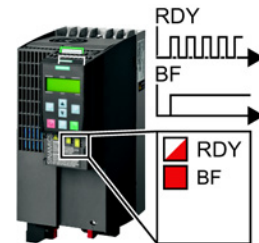

Correcting an unsuccessful upgrade or downgrade

You can check the following to correct an unsuccessful firmware upgrade or downgrade:

- Does the firmware version of your inverter fulfill the preconditions?
 - For an upgrade, as a minimum V4.5.
 - For a downgrade, as a minimum V4.6.
- Have you correctly inserted the card?
- Does the card contain the correct firmware?
- Repeat the appropriate procedure.

10.9 If the converter no longer responds

If the inverter no longer responds

For example, when loading an incorrect file from the memory card, the inverter can go into a state where it can no longer respond to commands from the operator panel or from a higher-level control system. In this case, you must reset the inverter to its factory setting and recommission it. This inverter state is manifested in two different ways:

Case 1

- The motor is switched off.
- You cannot communicate with the inverter, either via the operator panel or other interfaces.
- The LEDs flicker and after 3 minutes the inverter has still not powered up.

Procedure

Proceed as follows to restore the inverter factory settings:

1. Remove the memory card if one is inserted in the inverter.
2. Switch off the inverter power supply.
3. Wait until all LEDs on the inverter go dark. Then switch on the inverter power supply again.
4. Repeat steps 2 and 3 as often as required until the inverter outputs fault F01018:
5. Set p0971 = 1.
6. Switch off the inverter power supply.
7. Wait until all LEDs on the inverter go dark. Then switch on the inverter power supply again.

The inverter now powers up with the factory settings.

8. Recommission the inverter.

You have restored the inverter factory settings.



Case 2

- The motor is switched off.
- You cannot communicate with the inverter, either via the operator panel or other interfaces.
- The LEDs flash and are dark - this process is continually repeated.

Procedure

Proceed as follows to restore the inverter factory settings:

1. Remove the memory card if one is inserted in the inverter.
2. Switch off the inverter power supply.
3. Wait until all LEDs on the inverter go dark. Then switch on the inverter power supply again.
4. Wait until the LEDs flash orange.
5. Repeat steps 2 and 3 as often as required until the inverter outputs fault F01018.
6. Now set p0971 = 1.
7. Switch off the inverter power supply.
8. Wait until all LEDs on the inverter go dark. Then switch on the inverter power supply again.

The inverter now powers up with the factory settings.

9. Recommission the inverter.

You have restored the inverter factory settings.



Alarms, faults and system messages

The converter has the following diagnostic types:

- LED

The LED at the front of the converter immediately informs you about the most important converter states.

- Alarms and faults

The converter signals alarms and faults via

- the fieldbus
- the terminal strip with the appropriate setting
- a connected operator panel, or
- STARTER

Alarms and faults have a unique number.

- Identification & maintenance data (I&M)

If requested, the converter sends data to the higher-level control via PROFIBUS or PROFINET:

- Converter-specific data
- Plant-specific data

11.1 Operating states indicated on LEDs

The LED RDY (Ready) is temporarily orange after the power supply voltage is switched-on. As soon as the color of the LED RDY changes to either red or green, the LEDs signal the inverter state.

Signal states of the LED

In addition to the signal states "on" and "off" there are two different flashing frequencies:

 


Table 11-1 Inverter diagnostics

LED		Explanation
RDY	BF	
GREEN - on	Not relevant	There is presently no fault
GREEN - slow		Commissioning or reset to factory settings
RED - on	YELLOW - variable frequency	Firmware update in progress
RED - slow	RED - slow	Inverter waits until the power supply is switched off and switched on again after a firmware update
RED - fast	Not relevant	There is presently a fault
RED - fast	RED - fast	Incorrect memory card or unsuccessful firmware update

Table 11-2 Communication diagnostics via PROFINET

LNK LED	Explanation
GREEN - on	The communication via PROFINET is in order.
GREEN - slow	Device naming is active.
Off	No communication via PROFINET.

Table 11-3 Communication diagnostics via RS485

LED		Explanation
BF	RDY	
off	Not relevant	Data is being exchanged between the inverter and control
RED - slow	RED - slow	Inverter waits until the power supply is switched off and switched on again after a firmware update
	All other states	The bus is active, however the inverter is not receiving any process data
RED - fast	RED - fast	Incorrect memory card or unsuccessful firmware update
	All other states	No bus connection available
YELLOW - variable frequency	RED - on	Firmware update in progress

Table 11-4 Communication diagnostics via PROFIBUS DP

LED		Explanation
BF	RDY	
GREEN - on	Not relevant	Data is being exchanged between the inverter and control
off		PROFIBUS interface is not being used.
RED - slow	RED - slow	Inverter waits until the power supply is switched off and switched on again after a firmware update
	All other states	Bus fault - configuration fault
RED - fast	RED - fast	Incorrect memory card or unsuccessful firmware update
	All other states	Bus error - no data exchange - inverter searches for baud rate - no connection
YELLOW - variable frequency	RED - on	Firmware update in progress

LED BF display for CANopen

In addition to the signal states "on" and "off" there are three different flashing frequencies:

 


Table 11- 5 Communication diagnostics via CANopen

LED		Explanation
BF	RDY	
GREEN - on	Not relevant	Data is being exchanged between the inverter and control ("operational")
GREEN - fast		Bus state "Pre-Operational"
GREEN - single flash		Bus state "Stopped"
RED - on		No bus
RED - single flash		Alarm - limit reached
RED - double flash		Error event in control (Error Control Event)
RED - slow	RED - slow	Inverter waits until the power supply is switched off and switched on again after a firmware update
RED - fast	RED - fast	Incorrect memory card or unsuccessful firmware update
YELLOW - variable frequency	RED - on	Firmware update in progress

11.2 System runtime

By evaluating the system runtime of the inverter, you can decide when you should replace components subject to wear in time before they fail - such as fans, motors and gear units.

Principle of operation

The system runtime is started as soon as the Control Unit power supply is switched-on. The system runtime stops when the Control Unit is switched off.

The system runtime comprises r2114[0] (milliseconds) and r2114[1] (days):

System runtime = r2114[1] × days + r2114[0] × milliseconds


If r2114[0] has reached a value of 86,400,000 ms (24 hours), r2114[0] is set to the value 0 and the value of r2114[1] is increased by 1.

Parameter	Description
r2114[0]	System runtime (ms)
r2114[1]	System runtime (days)

You cannot reset the system runtime.

11.3 Alarms

Alarms have the following properties:

- They do not have a direct effect in the converter and disappear once the cause has been removed
- They do not need have to be acknowledged
- They are signaled as follows
 - Status display via bit 7 in status word 1 (r0052)
 - At the Operator Panel with a Axxxxx
 - Via STARTER, if you click on TAB  at the bottom left of the STARTER screen

In order to pinpoint the cause of an alarm, there is a unique alarm code and also a value for each alarm.

Alarm buffer

For each incoming alarm, the converter saves the alarm, alarm value and the time that the alarm was received.

	Alarm code	Alarm value		Alarm time received		Alarm time removed	
1. Alarm	r2122[0]	r2124[0]	r2134[0]	r2145[0]	r2123[0]	r2146[0]	r2125[0]
		I32	Float	Days	ms	Days	ms

Figure 11-1 Saving the first alarm in the alarm buffer

r2124 and r2134 contain the alarm value - important for diagnostics - as "fixed point" or "floating point" number.

The alarm times are displayed in r2145 and r2146 (in complete days) as well as in r2123 and r2125 (in milliseconds referred to the day of the alarm).

The converter uses an internal time calculation to save the alarm times. More information on the internal time calculation can be found in Chapter Real time clock (RTC) (Page 220).

As soon as the alarm has been removed, the converter writes the associated instant in time into parameters r2125 and r2146. The alarm remains in the alarm buffer even if the alarm has been removed.

If an additional alarm is received, then this is also saved. The first alarm is still saved. The alarms that have occurred are counted in p2111.

	Alarm code	Alarm value		Alarm time received		Alarm time, resolved	
1st alarm	r2122[0]	r2124[0]	r2134[0]	r2145[0]	r2123[0]	r2146[0]	r2125[0]
2nd alarm	[1]	[1]	[1]	[1]	[1]	[1]	[1]

Figure 11-2 Saving the second alarm in the alarm buffer

The alarm buffer can contain up to eight alarms. If an additional alarm is received after the eighth alarm - and none of the last eight alarms have been removed - then the next to last alarm is overwritten.

	Alarm code	Alarm value		Alarm time received		Alarm time, resolved	
1st alarm	r2122[0]	r2124[0]	r2134[0]	r2145[0]	r2123[0]	r2146[0]	r2125[0]
2nd alarm	[1]	[1]	[1]	[1]	[1]	[1]	[1]
3rd alarm	[2]	[2]	[2]	[2]	[2]	[2]	[2]
4th alarm	[3]	[3]	[3]	[3]	[3]	[3]	[3]
5th alarm	[4]	[4]	[4]	[4]	[4]	[4]	[4]
6th alarm	[5]	[5]	[5]	[5]	[5]	[5]	[5]
7th alarm	[6]	[6]	[6]	[6]	[6]	[6]	[6]
Last alarm	[7]	[7]	[7]	[7]	[7]	[7]	[7]

Figure 11-3 Complete alarm buffer

Emptying the alarm buffer: Alarm history

The alarm history traces up to 56 alarms.

The alarm history only takes alarms that have been removed from the alarm buffer. If the alarm buffer is completely filled - and an additional alarm occurs - then the converter shifts all alarms that have been removed from the alarm buffer into the alarm history. In the alarm history, alarms are also sorted according to the "alarm time received", however, when compared to the alarm buffer, in the inverse sequence:

- The youngest alarm is in index 8
- The second youngest alarm is in index 9
- etc.

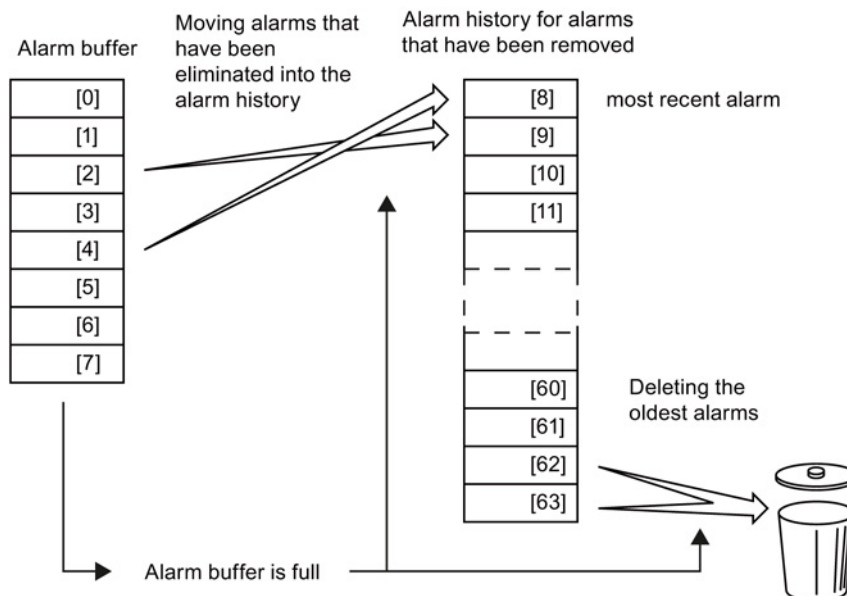


Figure 11-4 Shifting alarms that have been removed into the alarm history

11.3 Alarms

Any alarms that have not been removed remain in the alarm buffer. The converter sorts the alarms and closes gaps between the alarms.

If the alarm history is filled up to index 63, each time a new alarm is accepted in the alarm history, the oldest alarm is deleted.

Parameters of the alarm buffer and the alarm history

Parameter	Description
r2122	Alarm code Displays the numbers of alarms that have occurred
r2123	Alarm time received in milliseconds Displays the time in milliseconds when the alarm occurred
r2124	Alarm value Displays additional information about the alarm
r2125	Alarm time removed in milliseconds Displays the time in milliseconds when the alarm was removed
p2111	Alarm counter Number of alarms that have occurred after the last reset When setting p2111 = 0, all of the alarms that have been removed from the alarm buffer [0...7] are transferred into the alarm history [8...63]
r2145	Alarm time received in days Displays the time in days when the alarm occurred
r2132	Actual alarm code Displays the code of the alarm that last occurred
r2134	Alarm value for float values Displays additional information about the alarm that occurred for float values
r2146	Alarm time removed in days Displays the time in days when the alarm was removed

Extended settings for alarms

Parameter	Description
You can change up to 20 different alarms into a fault or suppress alarms:	
p2118	Setting the message number for the message type Selection of the alarms for which the message type should be changed
p2119	Setting the message type Setting the message type for the selected alarm 1: Fault 2: Alarm 3: No message

You will find details in function diagram 8075 and in the parameter description of the List Manual.

11.4 Faults

A fault indicates a severe fault during inverter operation.

The inverter signals a fault as follows:

- At the operator panel with Fxxxx
- At the inverter using the red LED RDY
- In bit 3 of status word 1 (r0052)
- Via STARTER

To delete a message, you must remedy the cause of the fault and acknowledge the fault.

Every fault has a unique fault code and also a fault value. You need this information to determine the cause of the fault.

Fault buffer of actual values

The inverter saves the time, fault code and fault value for every fault it receives.

	Fault code	Fault value		Fault time received		Fault time removed	
1st fault	r0945[0]	r0949[0]	r2133[0]	r2130[0]	r0948[0]	r2136[0]	r2109[0]
		I32	Float	Days	ms	Days	ms

Figure 11-5 Saving the first fault in the fault buffer

r0949 and r2133 contain the fault value - important for diagnostics - as "fixed point" or "floating point" number.

The "fault time received" is in parameter r2130 (in complete days) as well as in parameter r0948 (in milliseconds referred to the day of the fault). The "fault time removed" is written to parameters r2109 and r2136 when the fault has been acknowledged.

The inverter uses its internal time calculation to save the fault times. More information on the internal time calculation can be found in Chapter Real time clock (RTC) (Page 220).

If an additional fault occurs before the first fault has been acknowledged, then this is also saved. The first alarm remains saved. The fault cases that have occurred are counted in p0952. A fault case can contain one or several faults.

	Fault code	Fault value		Fault time received		Fault time removed	
1st fault	r0945[0]	r0949[0]	r2133[0]	r2130[0]	r0948[0]	r2136[0]	r2109[0]
2nd fault	[1]	[1]	[1]	[1]	[1]	[1]	[1]

Figure 11-6 Saving the second fault in the fault buffer

11.4 Faults

The fault buffer can accept up to eight actual faults. The next to last fault is overwritten if an additional fault occurs after the eighth fault.

	Fault code	Fault value			Fault time received		Fault time removed	
1st fault	r0945[0]	r0949[0]	r2133[0]	r2130[0]	r0948[0]	r2136[0]	r2109[0]	
2nd fault	[1]	[1]	[1]	[1]	[1]	[1]	[1]	
3rd fault	[2]	[2]	[2]	[2]	[2]	[2]	[2]	
4th fault	[3]	[3]	[3]	[3]	[3]	[3]	[3]	
5th fault	[4]	[4]	[4]	[4]	[4]	[4]	[4]	
6th fault	[5]	[5]	[5]	[5]	[5]	[5]	[5]	
7th fault	[6]	[6]	[6]	[6]	[6]	[6]	[6]	
Last fault	[7]	[7]	[7]	[7]	[7]	[7]	[7]	




Figure 11-7 Complete fault buffer

Acknowledgement

You have multiple options to acknowledge a fault, e.g.:

- PROFIdrive control word 1, bit 7 (r2090.7)
- Acknowledge via the operator panel
- Switch-off the inverter power supply and switch-on again.

Faults detected during the inverter-internal monitoring of hardware and firmware can be acknowledged only by switching the supply voltage off and on again. The list of faults in the List Manual contains a note on this limited acknowledgment possibility.

Emptying the fault buffer: Fault history

The fault history can contain up to 56 faults.

The acknowledgment has no effect as long as none of the causes for the faults in the buffer have been removed. If at least one of the faults in the fault buffer has been removed (the cause of the fault has been removed) and you acknowledge the faults, then the following happens:

1. The inverter accepts all faults from the fault buffer in the first eight memory locations of the fault history (indexes 8 ... 15).
2. The inverter deletes the faults that have been removed from the fault buffer.
3. The inverter writes the time of acknowledgment of the faults that have been removed into parameters r2136 and r2109 (fault time removed).

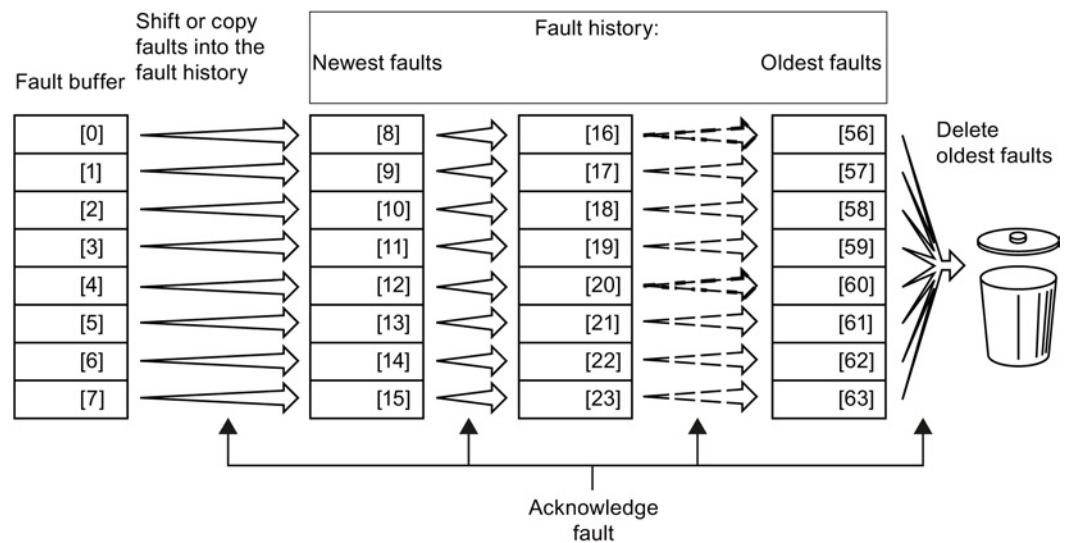


Figure 11-8 Fault history after acknowledging the faults

After acknowledgment, the faults that have not been removed are located in the fault buffer as well as in the fault history. For these faults, the "fault time coming" remains unchanged and the "fault time removed" remains empty.

If less than eight faults were shifted or copied into the fault history, the memory locations with the higher indexes remain empty.

The inverter shifts the values previously saved in the fault history by eight indexes. Faults, which were saved in indexes 56 ... 63 before the acknowledgment, are deleted.

Deleting the fault history

If you wish to delete all faults from the fault history, set parameter p0952 to zero.

Parameters of the fault buffer and the fault history

Parameter	Description
r0945	Fault code Displays the numbers of faults that have occurred
r0948	Fault time received in milliseconds Displays the time in milliseconds when the fault occurred
r0949	Fault value Displays additional information about the fault
p0952	Fault cases, counter Number of fault cases that have occurred since the last acknowledgment. The fault buffer is deleted with p0952 = 0.
r2109	Fault time removed in milliseconds Displays the time in milliseconds when the fault occurred
r2130	Fault time received in days Displays the time in days when the fault occurred
r2131	Actual fault code Displays the code of the oldest fault that is still active
r2133	Fault value for float values Displays additional information about the fault that occurred for float values
r2136	Fault time removed in days Displays the time in days when the fault was removed

Extended settings for faults

Parameter	Description
You can change the fault response of the motor for up to 20 different fault codes:	
p2100	Setting the fault number for fault response Selection of the faults for which the fault response applies
p2101	Setting, fault response Setting the fault response for the selected fault
You can change the acknowledgment type for up to 20 different fault codes:	
p2126	Setting the fault number for the acknowledgment mode Selection of the faults for which the acknowledgment type should be changed
p2127	Setting, acknowledgment mode Setting the acknowledgment type for the selected fault 1: Can only be acknowledged using POWER ON 2: IMMEDIATE acknowledgment after removing the fault cause
You can change up to 20 different faults into an alarm or suppress faults:	
p2118	Setting the message number for the message type Selection of the message for which the message type should be changed
p2119	Setting the message type Setting the message type for the selected fault 1: Fault 2: Alarm 3: No message

You will find details in function diagram 8075 and in the parameter description of the List Manual.

11.5 List of alarms and faults

11.5 List of alarms and faults

Axxxxx Alarm

Fyyyyy: Fault

Table 11- 6 Faults, which can only be acknowledged by switching the converter off and on again (power on reset)

Number	Cause	Remedy
F01000	Software fault in CU	Replace CU.
F01001	Floating Point Exception	Switch CU off and on again.
F01015	Software fault in CU	Upgrade firmware or contact technical support.
F01018	Power-up aborted more than once	After this fault is output, the converter powers up with the factory settings. Remedy: Back up factory setting with p0971=1. Switch CU off and on again. Recommission the converter.
F01040	Parameters must be saved	Save parameters (p0971). Switch CU off and on again.
F01044	Loading of memory data card defective	Replace memory card or CU.
F01105	CU: Insufficient memory	Reduce number of data records.
F01205	CU: Time slice overflow	Contact technical support.
F01250	CU hardware fault	Replace CU.
F01512	An attempt has been made to establish an conversion factor for scaling which is not present	Create scaling or check transfer value.
F01662	CU hardware fault	Switch CU off and on again, upgrade firmware, or contact technical support.
F30022	Power Module: Monitoring U _{CE}	Check or replace the Power Module.
F30052	Incorrect Power Module data	Replace Power Module or upgrade CU firmware.
F30053	Error in FPGA data	Replace the Power Module.
F30662	CU hardware fault	Switch CU off and on again, upgrade firmware, or contact technical support.
F30664	CU power up aborted	Switch CU off and on again, upgrade firmware, or contact technical support.
F30850	Software fault in Power Module	Replace Power Module or contact technical support.

Table 11- 7 The most important alarms and faults

Number	Cause	Remedy
F01018	Power-up aborted more than once	1. Switch the module off and on again. 2. After this fault has been output, the module is booted with the factory settings. 3. Recommission the inverter.
A01028	Configuration error	Explanation: Parameterization on the memory card has been created with a different type of module (order number, MLFB) Check the module parameters and recommitment if necessary.
F01033	Switching over units: Reference parameter value invalid	Set the value of the reference parameter not equal to 0.0 (p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004).

Number	Cause	Remedy
F01034	Switching over units: Calculation of the parameter values after reference value change unsuccessful	Select the value of the reference parameter so that the parameters involved can be calculated in the per unit notation (p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004).
A01053	System overload measured	<p>The maximum computing power of the control unit was exceeded. The following measures reduce the load on the control unit:</p> <ul style="list-style-type: none"> • Use only one data record (CDS and DDS) • Only use the safety features of the basic functions • Deactivate the technology controller • Use the simple ramp-function generator rather than the extended ramp-function generator • Do not use any free function components • Reduce the sampling time of the free function blocks
F01054	System limit exceeded	
F01122	Frequency at the probe input too high	Reduce the frequency of the pulses at the probe input.
A01590	Motor maintenance interval lapsed	Carry out maintenance and reset the maintenance interval (p0651).
A01900	PROFIBUS: Configuration telegram faulty	<p>Explanation: A PROFIBUS master is attempting to establish a connection with a faulty configuration telegram.</p> <p>Check the bus configuration on the master and slave side.</p>
A01910 F01910	Setpoint timeout	<p>The alarm is generated when p2040 \neq 0 ms and one of the following causes is present:</p> <ul style="list-style-type: none"> • The bus connection is interrupted • The Modbus master is switched off • Communications error (CRC, parity bit, logical error) • An excessively low value for the fieldbus monitoring time (p2040)
A01920	PROFIBUS: Cyclic connection interrupt	<p>Explanation: The cyclic connection to PROFIBUS master is interrupted.</p> <p>Establish the PROFIBUS connection and activate the PROFIBUS master with cyclic operation.</p>
F03505	Analog input, wire break	<p>Check the wiring for interruptions.</p> <p>Check the level of the injected signal.</p> <p>The input current measured by the analog input can be read out in r0752.</p>
A03520	Temperature sensor fault	Check that the sensor is connected correctly.
A05000 A05001 A05002 A05004 A05006	Power Module overtemperature	<p>Check the following:</p> <ul style="list-style-type: none"> - Is the ambient temperature within the defined limit values? - Are the load conditions and duty cycle configured accordingly? - Has the cooling failed?
F06310	Supply voltage (p0210) incorrectly set	<p>Check the set supply voltage and if required change (p0210).</p> <p>Check the line voltage.</p>
F07011	Motor overtemperature	<p>Reduce the motor load.</p> <p>Check the ambient temperature.</p> <p>Check the wiring and connection of the sensor.</p>

11.5 List of alarms and faults

Number	Cause	Remedy
A07012	I2t Motor Module overtemperature	Check and if necessary reduce the motor load. Check the motor's ambient temperature. Check the thermal time constant p0611. Check the overtemperature fault threshold p0605.
A07015	Motor temperature sensor alarm	Check that the sensor is connected correctly. Check the parameter assignment (p0601).
F07016	Motor temperature sensor fault	Make sure that the sensor is connected correctly. Check the parameterization (p0601). Deactivate the motor temperature sensor fault evaluation (p0607 = 0).
F07086 F07088	Switching over units: Parameter limit violation	Check the adapted parameter values and if required correct.
F07320	Automatic restart aborted	Increase the number of restart attempts (p1211). The actual number of start attempts is shown in r1214. Increase the wait time in p1212 and/or monitoring time in p1213. Connect an ON command (p0840). Increase the monitoring time of the power unit or switch off (p0857). Reduce the wait time for resetting the fault counter p1213[1] so that fewer faults are registered in the time interval.
A07321	Automatic restart active	Explanation: The automatic restart (AR) is active. During voltage recovery and/or when remedying the causes of pending faults, the drive is automatically switched back on.
F07330	Search current measured too low	Increase the search current (p1202), check the motor connection.
A07353	DC quantity control deactivated	The controller to suppress DC components in the motor current was at its limit and deactivated itself. <ul style="list-style-type: none"> • Increase the integral time p3858 of the DC quantity controller • Decrease the gain p3857 of the DC quantity controller
A07400	DC-link voltage maximum controller active	If it is not desirable that the controller intervenes: <ul style="list-style-type: none"> • Increase the ramp-down times. • Deactivate the Vdc_max control (p1240 = 0 for vector control, p1280 = 0 for U/f control).
A07409	U/f control, current limiting controller active	The alarm automatically disappears after one of the following measures: <ul style="list-style-type: none"> • Increase the current limit (p0640). • Reduce the load. • Slow down the ramp-ups for the setpoint speed.
F07426	Technology controller actual value limited	<ul style="list-style-type: none"> • Adapt the limits to the signal level (p2267, p2268). • Check the actual value scaling (p2264).

Number	Cause	Remedy
F07801	Motor overcurrent	<p>Check the current limits (p0640).</p> <p>Vector control: Check the current controller (p1715, p1717).</p> <p>U/f control: Check the current limiting controller (p1340 ... p1346).</p> <p>Increase the acceleration ramp (p1120) or reduce the load.</p> <p>Check the motor and motor cables for short-circuit and ground fault.</p> <p>Check the motor regarding the star/delta connection and rating plate parameterization.</p> <p>Check the power unit / motor combination.</p> <p>Select the flying restart function (p1200) if switched to rotating motor.</p>
A07805	Drive: Power unit overload I2t	<ul style="list-style-type: none"> • Reduce the continuous load. • Adapt the load cycle. • Check the assignment of rated currents of the motor and power unit.
F07806	Regenerative power limit exceeded	<p>Increase the deceleration ramp.</p> <p>Reduce the driving load.</p> <p>Use a power unit with higher energy recovery capability.</p> <p>For vector control, the regenerative power limit in p1531 can be reduced until the fault is no longer activated.</p>
F07807	Short-circuit detected	<ul style="list-style-type: none"> • Check the inverter connection on the motor side for any phase-phase short-circuit. • Rule out that line and motor cables have been interchanged.
A07850 A07851 A07852	External alarm 1 ... 3	<p>The signal for "external alarm 1" has been triggered.</p> <p>Parameters p2112, p2116 and p2117 determine the signal sources for the external alarm 1... 3.</p> <p>Remedy: Remove the causes of these alarms.</p>
F07860 F07861 F07862	External fault 1 ... 3	Remove the external causes for this fault.
F07900	Motor blocked	<p>Check that the motor can run freely.</p> <p>Check the torque limits (r1538 and r1539).</p> <p>Check the parameters of the "Motor blocked" message (p2175, p2177).</p>
F07901	Motor overspeed	<p>Activate the precontrol for the speed limiting controller (p1401 bit 7 = 1).</p> <p>Increase the hysteresis for overspeed signal p2162.</p>
F07902	Motor stalled	<p>Check whether the motor data has been set correctly and perform a motor identification.</p> <p>Check the current limits (p0640, r0067, r0289). If the current limits are too low, the drive cannot be magnetized.</p> <p>Check whether motor cables are disconnected during operation.</p>
A07903	Motor speed deviation	<p>Increase p2163 and/or p2166.</p> <p>Increase the torque, current and power limits.</p>
A07910	Motor overtemperature	<p>Check the motor load.</p> <p>Check the motor's ambient temperature.</p> <p>Check the KTY84 sensor.</p> <p>Check the overtemperatures of the thermal model (p0626 ... p0628).</p>
A07920	Torque/speed too low	The torque deviates from the torque/speed envelope curve.

11.5 List of alarms and faults

Number	Cause	Remedy
A07921	Torque/speed too high	<ul style="list-style-type: none"> • Check the connection between the motor and the load. • Adapt the parameterization corresponding to the load.
A07922	Torque/speed out of tolerance	
F07923	Torque/speed too low	<ul style="list-style-type: none"> • Check the connection between the motor and the load. • Adapt the parameterization corresponding to the load.
F07924	Torque/speed too high	
A07927	DC braking active	Not required
A07980	Rotary measurement activated	Not required
A07981	No enabling for rotary measurement	Acknowledge pending faults. Establish missing enables (see r00002, r0046).
A07991	Motor identification activated	Switch on the motor and identify the motor data.
F08501	Setpoint timeout	<ul style="list-style-type: none"> • Check the PROFINET connection. • Set the controller into the RUN mode. • If the fault occurs repeatedly, check the monitoring time set p2044.
F08502	Monitoring time, sign-of-life expired	<ul style="list-style-type: none"> • Check the PROFINET connection.
F08510	Send configuration data not valid	<ul style="list-style-type: none"> • Check the PROFINET configuration
A08511	Receive configuration data not valid	
A08526	No cyclic connection	<ul style="list-style-type: none"> • Activate the controller with cyclic operation. • Check the parameters "Name of Station" and "IP of Station" (r61000, r61001).
A08565	Consistency error affecting adjustable parameters	<p>Check the following:</p> <ul style="list-style-type: none"> • IP address, subnet mask or default gateway is not correct. • IP address or station name used twice in the network. • Station name contains invalid characters.
F08700	Communications error	<p>A CAN communications error has occurred. Check the following:</p> <ul style="list-style-type: none"> • Bus cable • Baud rate (p8622) • Bit timing (p8623) • Master <p>Start the CAN controller manually with p8608 = 1 after the cause of the fault has been resolved!</p>
F13100	Know-how protection: Copy protection error	<p>The know-how protection and the copy protection for the memory card are active. An error occurred when checking the memory card.</p> <ul style="list-style-type: none"> • Insert a suitable memory card and switch the inverter supply voltage temporarily off and then on again (POWER ON). • Deactivate the copy protection (p7765).
F13101	Know-how protection: Copy protection cannot be activated	Insert a valid memory card.

Number	Cause	Remedy
F30001	Overcurrent	<p>Check the following:</p> <ul style="list-style-type: none"> • Motor data, if required, carry out commissioning • Motor connection method (Y / Δ) • U/f operation: Assignment of rated currents of motor and Power Module • Line quality • Make sure that the line commutating reactor is connected properly • Power cable connections • Power cables for short-circuit or ground fault • Power cable length • Line phases <p>If this doesn't help:</p> <ul style="list-style-type: none"> • U/f operation: Increase the acceleration ramp • Reduce the load • Replace the power unit
F30002	DC-link voltage overvoltage	<p>Increase the ramp-down time (p1121). Set the rounding times (p1130, p1136). Activate the DC-link voltage controller (p1240, p1280). Check the line voltage (p0210). Check the line phases.</p>
F30003	DC-link voltage undervoltage	Check the line voltage (p0210).
F30004	Inverter overtemperature	<p>Check whether the inverter fan is running. Check whether the ambient temperature is in the permissible range. Check whether the motor is overloaded. Reduce the pulse frequency.</p>
F30005	I2t inverter overload	<p>Check the rated currents of the motor and Power Module. Reduce the current limit p0640. When operating with U/f characteristic: Reduce p1341.</p>
F30011	Line phase failure	<p>Check the inverter's input fuses. Check the motor feeder cables.</p>
F30015	Motor cable phase failure	<p>Check the motor cables. Increase the ramp-up or ramp-down time (p1120).</p>
F30021	Ground fault	<ul style="list-style-type: none"> • Check the power cable connections. • Check the motor. • Check the current transformer. • Check the cables and contacts of the brake connection (a wire might be broken).
F30027	Time monitoring for DC link pre-charging	<p>Check the supply voltage at the input terminals. Check the line voltage setting (p0210).</p>
F30035	Overtemperature, intake air	<ul style="list-style-type: none"> • Check whether the fan is running.

11.5 List of alarms and faults

Number	Cause	Remedy
F30036	Overtemperature, inside area	<ul style="list-style-type: none"> • Check the fan filter elements. • Check whether the ambient temperature is in the permissible range.
F30037	Rectifier overtemperature	See F30035 and, in addition: <ul style="list-style-type: none"> • Check the motor load. • Check the line phases
A30049	Internal fan defective	Check the internal fan and if required replace.
F30059	Internal fan defective	Check the internal fan and if required replace.
A30502	DC-link overvoltage	<ul style="list-style-type: none"> • Check the unit supply voltage (p0210). • Check the dimensioning of the line reactor.
A30920	Temperature sensor fault	Check that the sensor is connected correctly.
A50001	PROFINET configuration error	A PROFINET controller is attempting to establish a connection with an incorrect configuration telegram. Check whether "Shared Device" is activated (p8929 = 2).
A50010	PROFINET name of station invalid	Correct name of station (p8920) and activate (p8925 = 2).
A50020	PROFINET: Second controller missing	"Shared Device" is activated (p8929 = 2). However, only the connection to a PROFINET controller is available.
For further information, please refer to the List Manual.		

For further information, please refer to the List Manual.

11.6 Identification & maintenance data (I&M)

I&M data

The inverter supports the following identification and maintenance (I&M) data.

I&M data	Format	Explanation	Associated parameters	Example for the content
I&M0	u8[64] PROFIBUS u8[54] PROFINET	Inverter-specific data, read only	-	See below
I&M1	Visible String [32]	Plant/system identifier	p8806[0 ... 31]	"ak12-ne.bo2=fu1"
	Visible String [22]	Location code	p8806[32 ... 53]	"sc2+or45"
I&M2	Visible String [16]	Date	p8807[0 ... 15]	"2013-01-21 16:15"
I&M3	Visible String [54]	Any comment	p8808[0 ... 53]	-
I&M4	Octet String[54]	Check signature to track changes for Safety Integrated. This value can be changed by the user. The test signature is reset to the value generated by the machine is p8805 = 0 is used.	p8809[0 ... 53]	Values of r9781[0] and r9782[0]

When requested, the inverter transfers its I&M data to a higher-level control or to a PC/PG with installed STEP 7, STARTER or TIA-Portal.

I&M0

Designation	Format	Example for the content	Valid for PROFINET	Valid for PROFIBUS
Manufacturer-specific	u8[10]	00 ... 00 hex	---	✓
MANUFACTURER_ID	u16	42d hex (=Siemens)	✓	✓
ORDER_ID	Visible String [20]	„6SL3246-0BA22-1FA0“	✓	✓
SERIAL_NUMBER	Visible String [16]	„T-R32015957“	✓	✓
HARDWARE_REVISION	u16	0001 hex	✓	✓
SOFTWARE_REVISION	char, u8[3]	„V“ 04.70.19	✓	✓
REVISION_COUNTER	u16	0000 hex	✓	✓
PROFILE_ID	u16	3A00 hex	✓	✓
PROFILE_SPECIFIC_TYPE	u16	0000 hex	✓	✓
IM_VERSION	u8[2]	01.02	✓	✓
IM_SUPPORTED	bit[16]	001E hex	✓	✓

Technical data

12.1 Technical data for CU230P-2

Feature	Data / explanation
Order numbers	6SL3243-0BB30-1CA3 With CANopen interface
	6SL3243-0BB30-1HA3 With RS485 interface for the following protocols:
	6SL3243-6BB30-1HA3 <ul style="list-style-type: none"> • USS • Modbus RTU • BACnet MS/TP • P1
	6SL3243-0BB30-1PA3 With PROFIBUS interface.
	6SL3243-0BB30-1FA0 With PROFINET interface.
Operating voltage	<p>You have two options for the Control Unit power supply:</p> <ul style="list-style-type: none"> • Supply from the Power Module • External supply via terminals 31 and 32 with 20.4 ... 28.8 VDC. Use a power supply with (PELV = Protective Extra Low Voltage according to EN 61800-5-1), Class 2. The 0 V of the power supply must be connected low-resistant with the PE of the system.
Current consumption	<p>Max 0.5 A The current consumption can be higher if the Control Unit supplies external components.</p>
Power loss	5.0 W
Output voltages	+24 V out (terminal 9), 18 V ... 28.8 V, max. 100 mA
	+10 V out (terminals 1 and 35), 9.5 V ... 10.5 V, max. 10 mA
Setpoint resolution	0.01 Hz
Digital inputs	<p>6 (DI 0 ... DI 5)</p> <ul style="list-style-type: none"> • Low < 5V, high > 11V • Electrically isolated • 30 V maximum input voltage • 5.5 mA current consumption • SIMATIC-compatible • PNP/NPN switchable • 10 ms response time for debounce time p0724 = 0.

Feature	Data / explanation
Analog inputs	4 (AI 0 ... AI 3) <ul style="list-style-type: none"> Differential inputs 12-bit resolution 13 ms response time AI2 and AI3 can be switched: <ul style="list-style-type: none"> 0 V ... 10 V, 0 mA ... 20 mA or -10 V ... +10 V Temperature sensor Pt1000/LG-Ni1000 If AI 0 and AI 1 are configured as supplementary digital inputs: Low < 1.6 V, high > 4.0 V, 13 ms ± 1 ms response time for a debounce time p0724 = 0.
Digital outputs /relay outputs	3 (DO 0 ... DO 2) <ul style="list-style-type: none"> DO 0, DO 2: 30 VDC 5 A / 250 VAC, 2 A ¹⁾ DO 1: 30 VDC 0.5A Update time: 2ms
Analog outputs	2 (AO 0 ... AO 1) <ul style="list-style-type: none"> 0 V ... 10 V or 0 mA ... 20 mA Reference potential: "GND" 16-bit resolution 4 ms update time
Motor temperature sensor	PTC <ul style="list-style-type: none"> Short-circuit monitoring < 20Ω Overtemperature 1650Ω
	KTY84 <ul style="list-style-type: none"> Short-circuit monitoring < 50 Ω Wire breakage: > 2120Ω
	Temperature switch with isolated contact
USB interface	Mini-B
Dimensions (WxHxD)	73mm × 199mm × 50mm Depth when mounting on the Power Module
Memory card (optional)	SINAMICS SD card, 512 MB Recommendation: 6SL3054-4AG00-2AA0 SDHC cards are not possible (SD High Capacity).
Weight	0.61kg
Operating temperature	0° C ... 60° C For operation without inserted operator panel.
	0° C ... 50° C For operation with inserted operator panel.
	Observe any possible restrictions regarding the operating temperature as a result of the Power Module.
Storage temperature	- 40° C ... 70° C
Relative humidity	< 95 % Condensation is not permissible.

1) The following applies to systems complying with UL: A maximum of 3 A 30 VDC or 2 A 250 VAC may be connected via terminals 18 / 20 (DO 0 NC) and 23 / 25 (DO 2 NC).

Note

Short-term voltage dips in the external 24 V supply (≤ 3 ms and ≤ 95% of the rated voltage)

When the mains voltage of the inverter is switched off, the inverter responds to short-term voltage dips in the external 24 V supply with fault F30074. Communication via fieldbus, however, remains in effect in this case.

12.2 Technical data, Power Modules

Note

Please note that the base load (100% power or current) for "Low Overload" is higher than the base load for "High Overload".

The load cycles shown in the diagram are examples. We recommend the "SIZER" engineering software to select the inverter based on duty cycles. See Configuring support (Page 378).

Definitions

- **LO base load input current**
100% of the permissible input current for a load cycle according to Low Overload.
- **LO base load output current**
100% of the permissible output current for a load cycle according to Low Overload.
- **LO base load power**
100 % of the inverter power for 100 % LO base load output current.
- **HO base load input current**
100% of the permissible input current for a load cycle according to High Overload.
- **HO base load output current**
100% of the permissible output current for a load cycle according to High Overload.
- **HO base load power**
100 % of the inverter power for 100 % HO base load output current.

If not specified otherwise, the power and current data always refer to a load cycle according to Low Overload.

12.2.1 Technical data, PM230

Permissible converter overload

The converters have different power ratings "High Overload" and "Low Overload" depending on the expected load.

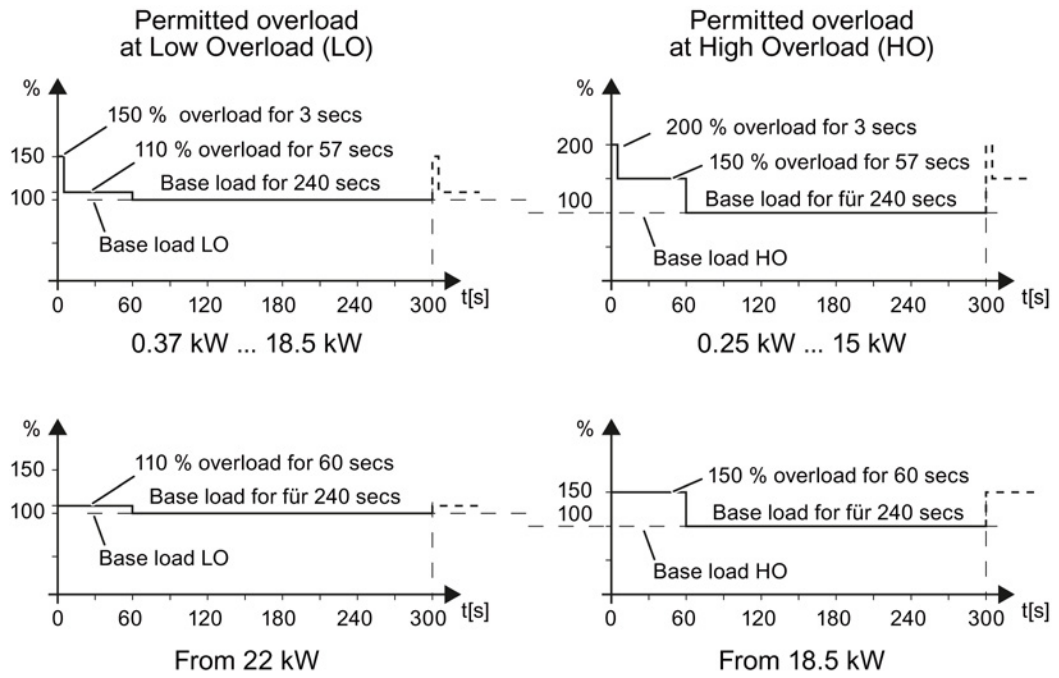


Figure 12-1 Duty cycles, "High Overload" and "Low Overload"

12.2.1.1 General data, PM230 - IP20

Property	Version
Line voltage	380 V ... 480 V 3-ph. AC \pm 10 %
Output voltage	0 V 3-ph. AC ... input voltage x 0.95 (max.)
Input frequency	50 Hz ... 60 Hz, \pm 3 Hz
Output frequency	0 ... 550 Hz, depending on the control mode
Power factor λ	0.9
Line impedance	$U_k \leq 1\%$, no line reactor permitted
Inrush current	< LO base load input current
Pulse frequency (factory setting)	4 kHz The pulse frequency can be increased in 2 kHz steps up to 16 kHz (up to 8 kHz for 55 kW and 75 kW). An increase in the pulse frequency results in a lower output current.
Electromagnetic compatibility	Devices with filters in compliance with EN 61800-3: 2004 are suitable for Category C2 environments. Details, see manuals for your inverter, Hardware Installation Manual PM230 (Page 377)
Braking methods	DC braking
Degree of protection	IP20 built-in units IP20 when mounted in a control cabinet PT devices IP54 on the control cabinet wall
Operating temperature at	LO base load power without derating 0 °C ... +40 °C HO base load power without derating 0 °C ... +50 °C LO/HO base load power with derating: Up to 60° C Details - (Page 354).
Storage temperature	-40 °C ... +70 °C
Relative humidity	< 95% - condensation not permissible
Pollution	Protected according to pollution degree 2 to EN 61800-5-1: 2007
Environmental requirements	Protected against damaging chemical substances according to environmental class 3C2 to EN 60721-3-3; 1995
Shock and vibration	<ul style="list-style-type: none"> • Long-term storage in the transport packaging according to Class 1M2 to EN 60721-3-1: 1997 • Transport in the transport packaging according to Class 2M3 to EN 60721-3-2: 1997 • Vibration during operation according to Class 3M2 to EN 60721-3-3: 1995
Installation altitude	without derating: up to 1000 m above sea level For details, see Restrictions for special with derating: up to 4000 m above sea level ambient conditions (Page 354)
Permissible short-circuit current	Frame size D ... F: 65 kA ¹⁾
Overvoltage category	Supply circuits: Overvoltage category III Non-supply circuits: Overvoltage category II
Standards	UL ^{1),2)} , CE, C-tick The drive only satisfies the UL requirements when UL-certified fuses are used.

¹⁾ If fuse-protected with a listed Class J or 3NE1 fuse, rated voltage 600 VAC with the rated current of the specific inverter.

²⁾ UL available soon for frame sizes D ... F

12.2.1.2 Power-dependent data, PM230, IP20

Note

The values for Low Overload (LO) are identical with those of the rated values.

Table 12- 1 PM230, IP20, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE11-3UL1	...1NE11-7UL1	...1NE12-2UL1
Order No. - with filter	6SL3210...	...1NE11-3AL1	...1NE11-7AL1	...1NE12-2AL1
LO base load power		0,37 kW	0,55 kW	0,75 kW
LO base load input current		1,3 A	1,8 A	2,3 A
LO base load output current		1,3 A	1,7 A	2,2 A
HO base load power		0,25 kW	0,37 kW	0,55 kW
HO base load input current		0,9 A	1,3 A	1,8 A
HO base load output current		0,9 A	1,3 A	1,7 A
Fuse according to IEC		3NE1 813-0	3NE1 813-0	3NE1 813-0
Fuse according to UL		AJT2 / 3NE1 813-0	AJT4 / 3NE1 813-0	AJT4 / 3NE1 813-0
Power loss		0,04 kW	0,04 kW	0,05 kW
Required cooling air flow		1,5 l/s	1,5 l/s	4,5 l/s
Cross section of line and motor cables		1 ... 2,5 mm ² 18 ... 14 AWG	1 ... 2,5 mm ² 18 ... 14 AWG	1 ... 2,5 mm ² 18 ... 14 AWG
Tightening torque for line and motor cables		0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in
Weight without filter		1,4 kg	1,4 kg	1,4 kg
Weight with filter		1,6 kg	1,6 kg	1,6 kg

Table 12- 2 PM230, IP20, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE13-1UL1	...1NE14-1UL1	...-1NE15-8UL1
Order No. - with filter	6SL3210...	...1NE13-1AL10	...1NE14-1AL1	...-1NE15-8AL1
LO base load power		1,1 kW	1,5 kW	2,2 kW
LO base load input current		3,2 A	4,2 A	6,1 A
LO base load output current		3,1 A	4,1 A	5,9 A
HO base load power		0,75 kW	1,1 kW	1,5 kW
HO base load input current		2,3 A	3,2 A	4,2 A
HO base load output current		2,2 A	3,1 A	4,1 A
Fuse according to IEC		3NE1 813-0	3NE1 813-0	3NE1 813-0
Fuse according to UL		AJT6 / 3NE1 813-0	AJT6 / 3NE1 813-0	AJT10 / 3NE1 813-0
Power loss		0,06 kW	0,07 kW	0,08 kW
Required cooling air flow		4,5 l/s	4,5 l/s	4,5 l/s
Cross section of line and motor cables		1 ... 2,5 mm ² 18 ... 14 AWG	1 ... 2,5 mm ² 18 ... 14 AWG	1,5 ... 2,5 mm ² 16 ... 14 AWG
Tightening torque for line and motor cables		0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in
Weight without filter		1,4 kg	1,4 kg	1,4 kg
Weight with filter		1,6 kg	1,6 kg	1,6 kg

Table 12- 3 PM230, IP20, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE17-7UL1
Order No. - with filter	6SL3210...	...1NE17-7AL1
LO base load power		3 kW
LO base load input current		8,0 A
LO base load output current		7,7 A
HO base load power		2,2 kW
HO base load input current		6,1 A
HO base load output current		5,9 A
Fuse according to IEC		3NE1 813-0
Fuse according to UL		AJT10 / 3NE1 813-0
Power loss		0,11 kW
Required cooling air flow		4,5 l/s
Cross section of line and motor cables		1,5 ... 2,5 mm ² 16 ... 14 AWG
Tightening torque for line and motor cables		0,5 Nm / 4 lbf in
Weight without filter		1,4 kg
Weight with filter		1,6 kg

Table 12- 4 PM230, PT, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3211...	...1NE17-7UL1
Order No. - with filter	6SL3211...	...1NE17-7AL1
LO base load power		3 kW
LO base load input current		8,0 A
LO base load output current		7,7 A
HO base load power		2,2 kW
HO base load input current		6,1 A
HO base load output current		5,9 A
Fuse according to IEC		3NE1 813-0
Fuse according to UL		AJT10 / 3NE1 813-0
Power loss		0,11 kW
Required cooling air flow		4,5 l/s
Cross section of line and motor cables		1,5 ... 2,5 mm ² 16 ... 14 AWG
Tightening torque for line and motor cables		0.5 Nm / 4 lbf in
Weight without filter		1,7 kg
Weight with filter		1,9 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 5 PM230, IP20, Frame Sizes B, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE21-0UL1	...1NE21-3UL1	...1NE21-8UL1
Order No. - with filter	6SL3210...	...1NE21-0AL1	...1NE21-3AL1	...1NE21-8AL1
LO base load power		4 kW	5,5 kW	7,5 kW
LO base load input current		10,5 A	13,6 A	18,6 A
LO base load output current		10,2 A	13,2 A	18 A
HO base load power		3 kW	4 kW	5,5 kW
HO base load input current		8,0 A	10,5 A	13,6 A
HO base load output current		7,7 A	10,2 A	13,2 A
Fuse according to IEC		3NE1 813-0	3NE1 814-0	3NE1 815-0
Fuse according to UL		AJT15 / 3NE1 813-0	AJT20 / 3NE1 814-0	AJT25 / 3NE1 815-0
Power loss		0,12 kW	0,15 kW	0,22 kW
Required cooling air flow		9,2 l/s	9,2 l/s	9,2 l/s
Cross section of line and motor cables		1,5 ... 6 mm ² 16 ... 10 AWG	1,5 ... 6 mm ² 16 ... 10 AWG	1,5 ... 6 mm ² 16 ... 10 AWG
Tightening torque for line and motor cables		0,6 Nm / 5 lbf in	0,6 Nm / 5 lbf in	0,6 Nm / 5 lbf in
Weight without filter		2,8 kg	2,8 kg	2,8 kg
Weight with filter		3 kg	3 kg	3 kg

Table 12- 6 PM230, PT, Frame Sizes B, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3211...	...1NE21-8UL1
Order No. - with filter	6SL3211...	...1NE21-8AL1
LO base load power		7,5 kW
LO base load input current		18,6 A
LO base load output current		18 A
HO base load power		5,5 kW
HO base load input current		13,6 A
HO base load output current		13,2 A
Fuse according to IEC		3NE1 815-0
Fuse according to UL		AJT25 / 3NE1 815-0
Power loss		0,22 kW
Required cooling air flow		9.2 l/s
Cross section of line and motor cables		1,5 ... 6 mm ² 16 ... 10 AWG
Tightening torque for line and motor cables		0,6 Nm / 5 lbf in
Weight without filter		3,4 kg
Weight with filter		3,6 kg

Table 12- 7 PM230, IP20, Frame Sizes C, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE22-6UL1	...1NE23-2UL1	...1NE23-8UL1
Order No. - with filter	6SL3210...	...1NE22-6AL1	...1NE23-2AL1	...1NE23-8AL1
LO base load power		11 kW	15 kW	18,5 kW
LO base load input current		26,9 A	33,1 A	39,2 A
LO base load output current		26 A	32 A	38 A
HO base load power		7,5 kW	11 kW	15 kW
HO base load input current		18,6 A	26,9 A	33,1 A
HO base load output current		18 A	26 A	32 A
Fuse according to IEC		3NE1 803-0	3NE1 817-0	3NE1 817-0
Fuse according to UL		AJT35 / 3NE1 803-0	AJT45 / 3NE1 817-0	AJT50 / 3NE1 817-0
Power loss		0,3 kW	0,35 kW	0,45 kW
Required cooling air flow		18,5 l/s	18,5 l/s	18,5 l/s
Cross section of line and motor cables		6 ... 16 mm ² 10 ... 6 AWG	6 ... 16 mm ² 10 ... 6 AWG	6 ... 16 mm ² 10 ... 6 AWG
Tightening torque for line and motor cables		1,3 Nm / 12 lbf in	1,3 Nm / 12 lbf in	1,3 Nm / 12 lbf in
Weight without filter		4,5 kg	4,5 kg	4,5 kg
Weight with filter		5,1 kg	5,1 kg	5,1 kg

Table 12- 8 PM230, PT, Frame Sizes C, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3211...	...1NE23-8UL1
Order No. - with filter	6SL3211...	...1NE23-8AL1
LO base load power		18,5 kW
LO base load input current		39,2 A
LO base load output current		38 A
HO base load power		15 kW
HO base load input current		33,1 A
HO base load output current		32 A
Fuse according to IEC		3NE1 817-0
Fuse according to UL		AJT50 / 3NE1 817-0
Power loss		0,45 kW
Required cooling air flow		18,5 l/s
Cross section of line and motor cables		6 ... 16 mm ² 10 ... 6 AWG
Tightening torque for line and motor cables		1,3 Nm / 12 lbf in
Weight without filter		5,4 kg
Weight with filter		6 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 9 PM230, IP20, Frame Sizes D, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE24-5UL0	...1NE26-0UL0
Order No. - with filter	6SL3210...	...1NE24-5AL0	...1NE26-0AL0
LO base load power		22 kW	30 kW
LO base load input current		42 A	56 A
LO base load output current		45 A	60 A
HO base load power		18.5 kW	22 kW
HO base load input current		36 A	42 A
HO base load output current		38 A	45 A
Fuse according to IEC		3NE1818-0	3NE1820-0
Fuse according to UL		3NE1818-0	3NE1820-0
Power loss		0.52 kW	0.68 kW
Required cooling air flow		80 l/s	80 l/s
Cross section of line and motor cables		16 ... 35 mm ² 5 ... 2 AWG	16 ... 35 mm ² 5 ... 2 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight without filter		11 kg	11 kg
Weight with filter		14 kg	14 kg

Table 12- 10 PM230, IP20, Frame Sizes E, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE27-5UL0	...1NE28-8UL0
Order No. - with filter	6SL3210...	...1NE27-5AL0	...1NE28-8AL0
LO base load power		37 kW	45 kW
LO base load input current		70 A	84 A
LO base load output current		75 A	90 A
HO base load power		30 kW	37 kW
HO base load input current		56 A	70 A
HO base load output current		60 A	75 A
Fuse according to IEC		3NE1021-0	3NE1022-0
Fuse according to UL		3NE1021-0	3NE1022-0
Power loss		0.99 kW	1.2 kW
Required cooling air flow		80 l/s	80 l/s
Cross section of line and motor cables		25 ... 50 mm ² 3 ... 1-1/0 AWG	25 ... 50 mm ² 3 ... 1-1/0 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight without filter		15 kg	15 kg
Weight with filter		22 kg	22 kg

Table 12- 11 PM230, IP20, Frame Sizes F, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1NE31-1UL0	...1NE31-5UL0
Order No. - with filter	6SL3210...	...1NE31-1AL0	...1NE31-5AL0
LO base load power		55 kW	75 kW
LO base load input current		102 A	135 A
LO base load output current		110 A	145 A
HO base load power		45 kW	55 kW
HO base load input current		84 A	102 A
HO base load output current		90 A	110 A
Fuse according to IEC		3NE1224-0	3NE1225-0
Fuse according to UL		3NE1224-0	3NE1225-0
Power loss		1.4 kW	1.9 kW
Required cooling air flow		150 l/s	150 l/s
Cross section of line and motor cables		35 ... 120 mm ² 2 ... 4/0 AWG	35 ... 120 mm ² 2 ... 4/0 AWG
Tightening torque for line and motor cables		13 Nm / 115 lbf in	13 Nm / 115 lbf in
Weight without filter		33 kg	33 kg
Weight with filter		48 kg	48 kg

Current reduction depending on pulse frequency

Table 12- 12 Current reduction depending on the pulse frequency¹⁾

LO base load	Output base-load current at a pulse frequency of							
	2 kHz	4 kHz	6 kHz	8 kHz	10 kHz	12 kHz	14 kHz	16 kHz
kW	A	A	A	A	A	A	A	A
0.37	--	1.30	1.11	0.91	0.78	0.65	0.59	0.52
0.55	--	1.70	1.45	1.19	1.02	0.85	0.77	0.68
0.75	--	2.20	1.87	1.54	1.32	1.10	0.99	0.88
1.1	--	3.10	2.64	2.17	1.86	1.55	1.40	1.24
1.5	--	4.10	3.49	2.87	2.46	2.05	1.85	1.64
2.2	--	5.90	5.02	4.13	3.54	2.95	2.66	2.36
3.0	--	7.70	6.55	5.39	4.62	3.85	3.47	3.08
4.0	--	10.20	8.67	7.14	6.12	5.10	4.59	4.08
5.5	--	13.20	11.22	9.24	7.92	6.60	5.94	5.28
7.5	--	18.00	15.30	12.60	10.80	9.00	8.10	7.20
11.0	--	26.00	22.10	18.20	15.60	13.00	11.70	10.40
15.0	--	32.00	27.20	22.40	19.20	16.00	14.40	12.80
18.5	--	38.00	32.30	26.60	22.80	19.00	17.10	15.20
22	--	45.00	38.25	31.50	27.00	22.50	20.25	18.00
30	--	60.00	51.00	42.00	36.00	30.00	27.00	24.00
37	--	75.00	63.75	52.50	45.00	37.50	33.75	30.00
45	--	90.00	76.50	63.00	54.00	45.00	40.50	36.00
55	--	110.0	93.50	77.00	66.00	55.00	49.50	44.00
75	--	145.0	123.3	101.5	--	--	--	--

¹⁾ The permissible motor cable length also depends on the cable type and the selected pulse frequency.

12.2.1.3 General data, PM230, IP55

Feature	Version
Line voltage	380°V°...°480°V 3-ph.°AC ±°10%
Output voltage	0 V 3-ph. AC ... input voltage x 0.95 (max.)
Input frequency	50 Hz ... 60 Hz, ± 3 Hz
Output frequency	0 ... 550 Hz, depending on the control mode
Power factor λ	0.9
Line impedance	Uk ≤ 1%, no line reactor permitted
Starting current	Less than the input current
Pulse frequency (factory setting)	4 kHz The pulse frequency can be increased in 2 kHz steps up to 16 kHz (up to 8 kHz for 75kW and 90kW). An increase in the pulse frequency results in a lower output current.
Electromagnetic compatibility	The devices comply with EN 61800-3: 2004 suitable for Category C1 and C2 environments. For details, see the Hardware Installation Manual, Appendix A2
Braking methods	DC braking
Degree of protection	FSA ... FSC IP55 / UL Type 12 FSD ... FSF IP55 / UL Type 12 in preparation Note: For the end cover plate, you must use the relevant bolting plates for the cable glands and the corresponding cable glands and seals to achieve the degree of protection UP55 (UL type 12). Degree of protection IP54 / UL Type 12 is reached if an IOP is inserted.
Operating temperature	without power reduction: 0°C ... +40°C with power reduction: to 60°C For details, see the Hardware Installation Manual
Storage temperature	-40 °C ... +70 °C
Relative humidity	< 95% - condensation not permissible
Contamination	Protected from contact with dangerous parts, dust, spray water and water jets
Environmental requirements	Protected against damaging chemical substances according to environmental class 3C2 to EN 60721-3-3; 1995
Shock and vibration	<ul style="list-style-type: none"> • Long-term storage in the transport packaging according to Class 1M2 to EN 60721-3-1: 1997 • Transport in the transport packaging according to Class 2M3 to EN 60721-3-2: 1997 • Vibration during operation according to Class 3M2 to EN 60721-3-3: 1995
Installation altitude	without power reduction: up to 1000 m above sea level with power reduction: up to 4000 m above sea level For details, see the Hardware Installation Manual
Permissible short-circuit current	Frame size A ... C: 40kA ¹⁾ Frame sizes D ... F: 65 kA ¹⁾
Standards	UL ²⁾ , CE, C-tick The drive only satisfies the UL requirements when UL-certified fuses are used.

¹⁾ If fuse-protected with a listed Class J fuse, rated voltage 600 VAC with the rated current of the specific converter.

²⁾ UL available soon for frame sizes D ... F

12.2.1.4 Power dependent data, PM230, IP55

Note

The values for Low Overload (LO) are identical with those of the rated values.

Table 12- 13 PM230, IP55, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	...0DE13-7AA0	...0DE15-5AA0	...0DE17-5AA0
Order No. - with filter Class B	6SL3223-...	...0DE13-7BA0	...0DE15-5BA0	...0DE17-5BA0
LO base load power		0.37 kW	0.55 kW	0.75 kW
LO base load input current		1.3 A	1.8 A	2.3 A
LO base load output current		1.3 A	1.7 A	2.2 A
HO base load power		0.25 kW	0.37 kW	0.55 kW
HO base load input current		0.9 A	1.3 A	1.8 A
HO base load output current		0.9 A	1.3 A	1.7 A
Fuse according to IEC		3NA3803	3NA3803	3NA3803
Fuse according to UL		10 A, Class J	10 A, Class J	10 A, Class J
Power loss		0.06 kW	0.06 kW	0.06 kW
Required cooling air flow		7 l/s	7 l/s	7 l/s
Cross section of line and motor cables		1 ... 2.5 mm ² 18 ... 14 AWG	1 ... 2.5 mm ² 18 ... 14 AWG	1 ... 2.5 mm ² 18 ... 14 AWG
Tightening torque for line and motor cables		0.5 Nm / 4.4 lbf in	0.5 Nm / 4.4 lbf in	0.5 Nm / 4.4 lbf in
Weight		4.3 kg	4.3 kg	4.3 kg

Table 12- 14 PM230, IP55, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	...0DE21-1AA0	...0DE21-5AA0	...0DE22-2AA0
Order No. - with filter Class B	6SL3223-...	...0DE21-1BA0	...0DE21-5BA0	...0DE22-2BA0
LO base load power		1.1 kW	1.5 kW	2.2 kW
LO base load input current		3.2 A	4.2 A	6.1 A
LO base load output current		3.1 A	4.1 A	5.9 A
HO base load power		0.75 kW	1.1 kW	1.5 kW
HO base load input current		2.3 A	3.2 A	4.2 A
HO base load output current		2.2 A	3.1 A	4.1 A
Fuse according to IEC		3NA3803	3NA3803	3NA3803
Fuse according to UL		10 A, Class J	10 A, Class J	10 A, Class J
Power loss		0.07 kW	0.08 kW	0.1 kW
Required cooling air flow		7 l/s	7 l/s	7 l/s
Cross section of line and motor cables		1 ... 2.5 mm ² 18 ... 14 AWG	1 ... 2.5 mm ² 18 ... 14 AWG	1 ... 2.5 mm ² 18 ... 14 AWG
Tightening torque for line and motor cables		0.5 Nm / 4.4 lbf in	0.5 Nm / 4.4 lbf in	0.5 Nm / 4.4 lbf in
Weight		4.3 kg	4.3 kg	4.3 kg

Table 12- 15 PM230, IP55, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	...0DE23-0AA0
Order No. - with filter Class B	6SL3223-...	...0DE23-0BA0
LO base load power		3 kW
LO base load input current		8.0 A
LO base load output current		7.7 A
HO base load power		2.2 kW
HO base load input current		6.1 A
HO base load output current		5.9 A
Fuse according to IEC		3NA3803
Fuse according to UL		10 A, Class J
Power loss		0.12 kW
Required cooling air flow		7 l/s
Cross section of line and motor cables		1 ... 2.5 mm ² 18 ... 14 AWG
Tightening torque for line and motor cables		0.5 Nm / 4.4 lbf in
Weight		4.3 kg

Table 12- 16 PM230, IP55, Frame Sizes B, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	...0DE24-0AA0	...0DE25-5AA0	...0DE27-5AA0
Order No. - with filter Class B	6SL3223-...	...0DE24-0BA0	...0DE25-5BA0	...0DE27-5BA0
LO base load power		4 kW	5.5 kW	7.5 kW
LO base load input current		10.5 A	13.6 A	18.6 A
LO base load output current		10.2 A	13.2 A	18 A
HO base load power		3 kW	4 kW	5.5 kW
HO base load input current		8.0 A	10.5 A	13.6 A
HO base load output current		7.7 A	10.2 A	13.2 A
Fuse according to IEC		3NA3805	3NA3807	3NA3810
Fuse according to UL		16 A, Class J	25 A, Class J	35 A, Class J
Power loss		0.14 kW	0.18 kW	0.24 kW
Required cooling air flow		9 l/s	9 l/s	9 l/s
Cross section of line and motor cables		2.5 ... 6 mm ² 14 ... 10 AWG	4 ... 6 mm ² 12 ... 10 AWG	4 ... 6 mm ² 12 ... 10 AWG
Tightening torque for line and motor cables		0.5 Nm / 4.4 lbf in	0.5 Nm / 4.4 lbf in	0.5 Nm / 4.4 lbf in
Weight		6.3 kg	6.3 kg	6.3 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 17 PM230, IP55, Frame Sizes C, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	...0DE31-1AA0	...0DE31-5AA0	...0DE31-8AA0
Order No. - with filter Class B	6SL3223-...	...0DE31-1BA0	...0DE31-5BA0	-
LO base load power		11 kW	15 kW	18.5 kW
LO base load input current		26.9 A	33.1 A	39.2 A
LO base load output current		26 A	32 A	38 A
HO base load power		7.5 kW	11 kW	15 kW
HO base load input current		18.6 A	26.9 A	33.1 A
HO base load output current		18 A	26 A	32 A
Fuse according to IEC		3NA3814	3NA3820	3NA3820
Fuse according to UL		40 A, Class J	50 A, Class J	50 A, Class J
Power loss		0.32 kW	0.39 kW	0.46 kW
Required cooling air flow		20 l/s	20 l/s	20 l/s
Cross section of line and motor cables		6 ... 16 mm ² 10 ... 5 AWG	10 ... 16 mm ² 7 ... 5 AWG	10 ... 16 mm ² 7 ... 5 AWG
Tightening torque for line and motor cables		1.5 Nm / 13 lbf in	1.5 Nm / 13 lbf in	1.5 Nm / 13 lbf in
Weight		9.5 kg	9.5 kg	9.5 kg

Table 12- 18 PM230, IP55, Frame Sizes D, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	-	...0DE32-2AA0	...0DE33-0AA0
Order No. - with filter Class B	6SL3223-...	...0DE31-8BA0	...0DE32-2BA0	...0DE33-0BA0
LO base load power		18.5 kW	22 kW	30 kW
LO base load input current		39.2 A	42 A	56 A
LO base load output current		38 A	45 A	60 A
HO base load power		15 kW	18.5 kW	22 kW
HO base load input current		33.1 A	36 A	42 A
HO base load output current		32 A	38 A	45 A
Fuse according to IEC		3NA3820	3NA3822	3NA3824
Fuse according to UL		50 A, Class J	63 A, Class J	80 A, Class J
Power loss		0.46 kW	0.52 kW	0.68 kW
Required cooling air flow		20 l/s	39 l/s	39 l/s
Cross section of line and motor cables		10 ... 35 mm ² 7 ... 2 AWG	16 ... 35 mm ² 5 ... 2 AWG	16 ... 35 mm ² 5 ... 2 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight		30.2 kg	30.2 kg	30.2 kg

Table 12- 19 PM230, IP55, Frame Sizes E, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	...0DE33-7AA0	...0DE34-5AA0
Order No. - with filter Class B	6SL3223-...	...0DE33-7BA0	...0DE34-5BA0
LO base load power		37 kW	45 kW
LO base load input current		70 A	84 A
LO base load output current		75 A	90 A
HO base load power		30 kW	37 kW
HO base load input current		56 A	70 A
HO base load output current		60 A	75 A
Fuse according to IEC		3NA3830	3NA3832
Fuse according to UL		100 A, Class J	125 A, Class J
Power loss		0.99 kW	1.2 kW
Required cooling air flow		39 l/s	39 l/s
Cross section of line and motor cables		25 ... 50 mm ² 3 ... 1 AWG	25 ... 50 mm ² 3 ... 1 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight		35.8 kg	35.8 kg

Table 12- 20 PM230, IP55, Frame Sizes F, 3 AC 380 V ... 480 V

Order No. - with filter, Class A	6SL3223-...	...0DE35-5AA0	...0DE37-5AA0	...0DE38-8AA0
Order No. - with filter Class B	6SL3223-...	...0DE35-5BA0	...0DE37-5BA0	...0DE38-8BA0
LO base load power		55 kW	75 kW	90 kW
LO base load input current		102 A	135 A	166 A
LO base load output current		110 A	145 A	178 A
HO base load power		45 kW	55 kW	75 kW
HO base load input current		84 A	102 A	135 A
HO base load output current		90 A	110 A	145 A
Fuse according to IEC		3NA3836	3NA3140	3NA3144
Fuse according to UL		160 A, Class J	200 A, Class J	250 A, Class J
Power loss		1.4 kW	1.9 kW	2.3 kW
Required cooling air flow		117 l/s	117 l/s	117 l/s
Cross section of line and motor cables		35 ... 120 mm ² 2 ... 4/0 AWG	35 ... 120 mm ² 2 ... 4/0 AWG	35 ... 120 mm ² 2 ... 4/0 AWG
Tightening torque for line and motor cables		13 Nm / 115 lbf in	13 Nm / 115 lbf in	13 Nm / 115 lbf in
Weight		70.0 kg	70.0 kg	70.0 kg

Current reduction depending on pulse frequency

Table 12- 21 Current reduction depending on the pulse frequency¹⁾

LO base load	Output base-load current at a pulse frequency of							
	2 kHz	4 kHz	6 kHz	8 kHz	10 kHz	12 kHz	14 kHz	16 kHz
kW	A	A	A	A	A	A	A	A
0.37	--	1.30	1.11	0.91	0.78	0.65	0.59	0.52
0.55	--	1.70	1.45	1.19	1.02	0.85	0.77	0.68
0.75	--	2.20	1.87	1.54	1.32	1.10	0.99	0.88
1.1	--	3.10	2.64	2.17	1.86	1.55	1.40	1.24
1.5	--	4.10	3.49	2.87	2.46	2.05	1.85	1.64
2.2	--	5.90	5.02	4.13	3.54	2.95	2.66	2.36
3.0	--	7.70	6.55	5.39	4.62	3.85	3.47	3.08
4.0	--	10.20	8.67	7.14	6.12	5.10	4.59	4.08
5.5	--	13.20	11.22	9.24	7.92	6.60	5.94	5.28
7.5	--	18.00	15.30	12.60	10.80	9.00	8.10	7.20
11.0	--	26.00	22.10	18.20	15.60	13.00	11.70	10.40
15.0	--	32.00	27.20	22.40	19.20	16.00	14.40	12.80
18.5	--	38.00	32.30	26.60	22.80	19.00	17.10	15.20
22	--	45.00	38.25	31.50	27.00	22.50	20.25	18.00
30	--	60.00	51.00	42.00	36.00	30.00	27.00	24.00
37	--	75.00	63.75	52.50	45.00	37.50	33.75	30.00
45	--	90.00	76.50	63.00	54.00	45.00	40.50	36.00
55	--	110.0	93.50	77.00	66.00	55.00	49.50	44.00
75	--	145.0	123.3	101.5	--	--	--	--

¹⁾ The permissible motor cable length also depends on the cable type and the selected pulse frequency.

12.2.2 Technical data, PM240

Permissible inverter overload

The inverters have different load capabilities, "High Overload" and "Low Overload", depending on the expected.

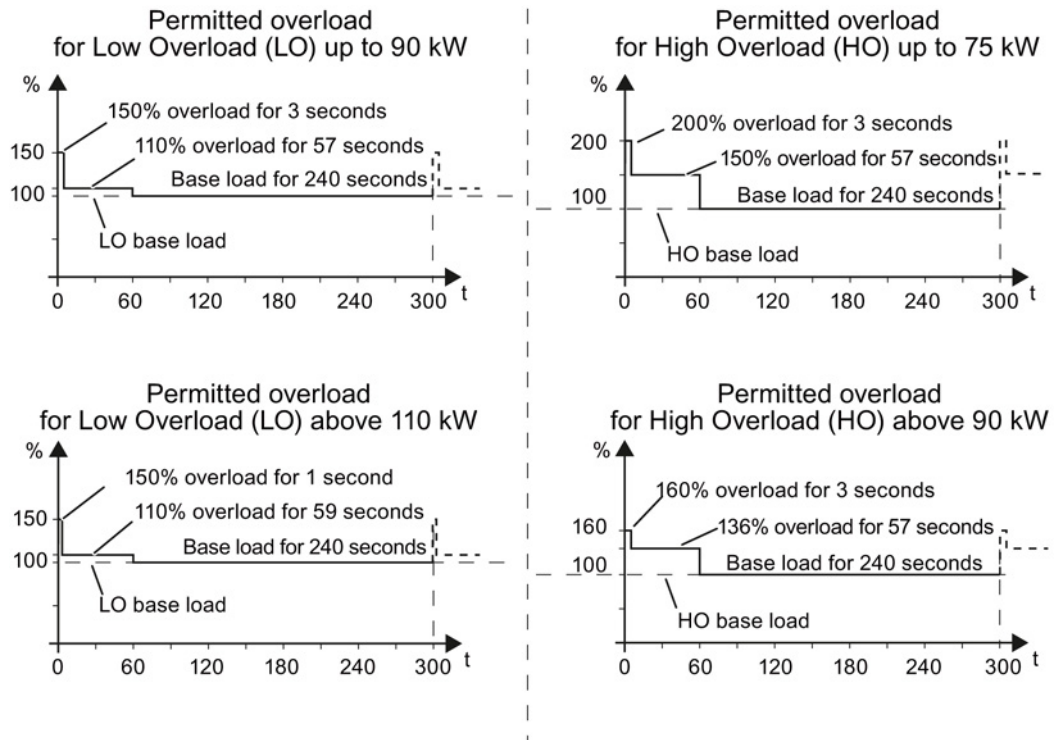


Figure 12-2 Load cycles, "Low Overload" and "High Overload"

12.2.2.1 General data, PM240

Property	Version
Line voltage	380 V ... 480 V 3-ph. AC \pm 10 %
Output voltage	0 V 3-ph. AC ... input voltage x 0.95 (max.)
Input frequency	50 Hz ... 60 Hz, \pm 3 Hz
Output frequency	0 ... 550 Hz, depending on the control mode
Power factor λ	0,7 ... 0,85
Inrush current	< LO base load input current
Pulse frequency (factory setting)	4 kHz for 0.37 kW ... 90 kW 2 kHz for 110 kW ... 250 kW The pulse frequency can be increased in 2 kHz steps. An increase in the pulse frequency results in a lower output current.
Electromagnetic compatibility	The devices comply with EN 61800-3: 2004 suitable for Category C1 and C2 environments. Details, see manuals for your inverter, Hardware Installation Manual PM240 (Page 377)
Braking methods	DC braking, compound braking, dynamic braking with integrated braking chopper
Degree of protection	IP20 chassis units
Operating temperature at	LO base load power without derating All power ratings 0 °C ... +40 °C
	HO base load power without derating 0.37 kW ... 110 kW 0 °C ... +50 °C
	HO base load power without derating 132 kW ... 200 kW 0 °C ... +40 °C
	LO/HO base load power with derating: All power ratings Up to 60° C
Storage temperature	-40 °C ... +70 °C
Pollution	Protected according to pollution degree 2 to EN 61800-5-1: 2007
Relative humidity	< 95% - condensation not permissible
Environmental requirements	Protected against damaging chemical substances according to environmental class 3C2 to EN 60721-3-3; 1995
Shock and vibration	<ul style="list-style-type: none"> • Long-term storage in the transport packaging according to Class 1M2 to EN 60721-3-1: 1997 • Transport in the transport packaging according to Class 2M3 to EN 60721-3-2: 1997 • Vibration during operation according to Class 3M2 to EN 60721-3-3: 1995
Installation altitude	without derating: 0.37 kW ... 132 kW up to 1000 m above sea level 160 kW ... 250 kW up to 2000 m above sea level with derating: all power ratings up to 4000 m above sea level For details, see Restrictions for special ambient conditions (Page 354)
Standards	UL, cUL, CE, C-tick, SEMI F47 The drive only satisfies the UL requirements when UL-certified fuses are used.

12.2.2.2 Power-dependent data, PM240

Note

The given input currents are valid for operation without a line reactor for a line voltage of 400 V with $V_k = 1\%$ referred to the rated power of the inverter. If a line reactor is used, the specified values are reduced by a few percent.

Note

The values for Low Overload (LO) are identical with those of the rated values.

Table 12- 22 PM240, IP20, frame sizes A, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE13-7UA0	...0BE15-5UA0	...0BE17-5UA0
LO base load power		0.37 kW	0.55 kW	0.75 kW
LO base load input current		1.6 A	2.0 A	2.5 A
LO base load output current		1.3 A	1.7 A	2.2 A
HO base load power		0.37 kW	0.55 kW	0.75 kW
HO base load input current		1.6 A	2.0 A	2.5 A
HO base load output current		1.3 A	1.7 A	2.2 A
Fuse according to UL (from SIEMENS)		3NE1813-0, 16 A	3NE1813-0, 16 A	3NE1813-0, 16 A
Fuse according to UL (Class J, K-1 or K-5)		10 A	10 A	10 A
Power loss		0.097 kW	0.099 kW	0.102 kW
Required cooling air flow		4.8 l/s	4.8 l/s	4.8 l/s
Cross section of line and motor cables		1 ... 2.5 mm ² 18 ... 14 AWG	1 ... 2.5 mm ² 18 ... 14 AWG	1 ... 2.5 mm ² 18 ... 14 AWG
Tightening torque for line and motor cables		0.5 Nm / 4 lbf in	0.5 Nm / 4 lbf in	0.5 Nm / 4 lbf in
Weight		1.2 kg	1.2 kg	1.2 kg

Table 12- 23 PM240, IP20, frame sizes A, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE21-1UA0	...0BE21-5UA0
LO base load power		1.1 kW	1.5 kW
LO base load input current		3.9 A	4.9 A
LO base load output current		3.1 A	4.1 A
HO base load power		1.1 kW	1.5 kW
HO base load input current		3.8 A	4.8 A
HO base load output current		3.1 A	4.1 A
Fuse according to UL (from SIEMENS)		3NE1813-0, 16 A	3NE1813-0, 16 A
Fuse according to UL (Class J, K-1 or K-5)		10 A	10 A
Power loss		0.108 kW	0.114 kW
Required cooling air flow		4.8 l/s	4.8 l/s
Cross section of line and motor cables		1 ... 2.5 mm ² 18 ... 14 AWG	1 ... 2.5 mm ² 18 ... 14 AWG
Tightening torque for line and motor cables		0.5 Nm / 4 lbf in	0.5 Nm / 4 lbf in
Weight		1.1 kg	1.1 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 24 PM240, IP20, frame sizes B, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE22-2UA0	...0BE23-0UA0	...0BE24-0UA0
Order No. - with filter	6SL3224-...	...0BE22-2AA0	...0BE23-0AA0	...0BE24-0AA0
LO base load power		2.2 kW	3 kW	4 kW
LO base load input current		7.6 A	10.2 A	13.4 A
LO base load output current		5.9 A	7.7 A	10.2 A
HO base load power		2.2 kW	3 kW	4 kW
HO base load input current		7.6 A	10.2 A	13.4 A
HO base load output current		5.9 A	7.7 A	10.2 A
Fuse according to UL (from SIEMENS)		3NE1813-0, 16 A	3NE1813-0, 16 A	3NE1814-0, 20 A
Fuse according to UL (Class J, K-1 or K-5)		16 A	16 A	20 A
Power loss		0.139 kW	0.158 kW	0.183 kW
Required cooling air flow		24 l/s	24 l/s	24 l/s
Cross section of line and motor cables		1.5 ... 6 mm ² 16 ... 10 AWG	1.5 ... 6 mm ² 16 ... 10 AWG	1.5 ... 6 mm ² 16 ... 10 AWG
Tightening torque for line and motor cables		1.5 Nm / 13 lbf in	1.5 Nm / 13 lbf in	1.5 Nm / 13 lbf in
Weight		4.3 kg	4.3 kg	4.3 kg

Table 12- 25 PM240, IP20, frame sizes C, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE25-5UA0	...0BE27-5UA0	...0BE31-1UA0
Order No. - with filter	6SL3224-...	...0BE25-5AA0	...0BE27-5AA0	...0BE31-1AA0
LO base load power		7.5 kW	11 kW	15 kW
LO base load input current		21.9 A	31.5 A	39.4 A
LO base load output current		18 A	25 A	32 A
HO base load power		5.5 kW	7.5 kW	11 kW
HO base load input current		16.7 A	23.7 A	32.7 A
HO base load output current		13.2 A	19 A	26 A
Fuse according to UL (from SIEMENS)		3NE1814-0, 20 A	3NE1814-0, 20 A	3NE1803-0, 35 A
Fuse according to UL (Class J, K-1 or K-5)		20 A	20 A	35 A
Power loss		0.240 kW	0.297 kW	0.396 kW
Required cooling air flow		55 l/s	55 l/s	55 l/s
Cross section of line and motor cables		4 ... 10 mm ² 12 ... 8 AWG	4 ... 10 mm ² 12 ... 8 AWG	4 ... 10 mm ² 12 ... 8 AWG
Tightening torque for line and motor cables		2.3 Nm / 20 lbf in	2.3 Nm / 20 lbf in	2.3 Nm / 20 lbf in
Weight without filter		6.5 kg	6.5 kg	6.5 kg
Weight with filter		7 kg	7 kg	7 kg

Table 12- 26 PM240, IP20, frame sizes D, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE31-5UA0	...0BE31-8UA0	...0BE32-2UA0
Order No. - with filter	6SL3224-...	...0BE31-5AA0	...0BE31-8AA0	...0BE32-2AA0
LO base load power		18.5 kW	22 kW	30 kW
LO base load input current		46 A	53 A	72 A
LO base load output current		38 A	45 A	60 A
HO base load power		15 kW	18.5 kW	22 kW
HO base load input current		40 A	46 A	56 A
HO base load output current		32 A	38 A	45 A
Fuse according to UL (from SIEMENS)		3NE1817-0	3NE1818-0	3NE1820-0
Fuse according to UL (Class J)		50 A, 600 V	---	---
Power loss		0.44 kW 0.42 kW	0.55 kW 0.52 kW	0.72 kW 0.69 kW
Required cooling air flow		22 l/s	22 l/s	39 l/s
Cross section of line and motor cables		10 ... 35 mm ² 7 ... 2 AWG	10 ... 35 mm ² 7 ... 2 AWG	16 ... 35 mm ² 5 ... 2 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight without filter		13 kg	13 kg	13 kg
Weight with filter		16 kg	16 kg	16 kg

Table 12- 27 PM240, IP20, frame sizes E, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE33-0UA0	...0BE33-7UA0
Order No. - with filter	6SL3224-...	...0BE33-0AA0	...0BE33-7AA0
LO base load power		37 kW	45 kW
LO base load input current		88 A	105 A
LO base load output current		75 A	90 A
HO base load power		30 kW	37 kW
HO base load input current		73 A	90 A
HO base load output current		60 A	75 A
Fuse according to UL (from SIEMENS)		3NE1021-0	3NE1022-0
Fuse according to UL		---	---
Power losses without filter		0.99 kW	1.2 kW
Power losses with filter		1.04 kW	1.2 kW
Required cooling air flow		22 l/s	39 l/s
Cross section of line and motor cables		25 ... 35 mm ² 3 ... 2 AWG	25 ... 35 mm ² 3 ... 2 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight without filter		16 kg	16 kg
Weight with filter		23 kg	23 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 28 PM240, IP20, frame sizes F, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE34-5UA0	...0BE35-5UA0	...0BE37-5UA0
Order No. - with filter	6SL3224-...	...0BE34-5AA0	...0BE35-5AA0	...0BE37-5AA0
LO base load power		55 kW	75 kW	90 kW
LO base load input current		129 A	168 A	204 A
LO base load output current		110 A A	145 A	178 A
HO base load power		45 kW	55 kW	75 kW
HO base load input current		108 A	132 A	169 A
HO base load output current		90 A	110 A	145 A
Fuse according to UL (from SIEMENS)		3NE1224-0	3NE1225-0	3NE1227-0
Fuse according to UL (Class J)		150 A, 600 V	200 A, 600 V	250 A, 600 V
Power losses without filter		1.4 kW	1.9 kW	2.3 kW
Power losses with filter		1.5 kW	2.0 kW	2.4 kW
Required cooling air flow		94 l/s	94 l/s	117 l/s
Cross section of line and motor cables		35 ... 120 mm ² 2 ... 4/0 AWG	70 ... 120 mm ² 2/0 ... 4/0 AWG	95 ... 120 mm ² 3/0 ... 4/0 AWG
Tightening torque for line and motor cables		13 Nm / 115 lbf in	13 Nm / 115 lbf in	13 Nm / 115 lbf in
Weight without filter		36 kg	36 kg	36 kg
Weight with filter		52 kg	52 kg	52 kg

Table 12- 29 PM240, IP20, frame sizes F, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0BE38-8UA0	...0BE41-1UA0
LO base load power		110 kW	132 kW
LO base load input current		234 A	284 A
LO base load output current		205 A	250 A
HO base load power		90 kW	110 kW
HO base load input current		205 A	235 A
HO base load output current		178 A	205 A
Fuse according to UL (from SIEMENS)		3NE1227-0	3NE1230-0
Fuse according to UL		300 A, 600 V, Class J	400 A, 600 V, Class J
Power loss		2.4 kW	2.5 kW
Required cooling air flow		117 l/s	117 l/s
Cross section of line and motor cables		95 ... 120 mm ² 3/0 ... 4/0 AWG	95 ... 120 mm ² 3/0 ... 4/0 AWG
Tightening torque for line and motor cables		13 Nm / 115 lbf in	13 Nm / 115 lbf in
Weight		39 kg	39 kg

Table 12- 30 PM240 frame sizes GX, 3-ph. 380 V AC... 480 V

Order No. - without filter	6SL3224-...	...0XE41-3UA0	...0XE41-6UA0	...0XE42-0UA0
LO base load power		160 kW	200 kW	240 kW
LO base load input current		297 A	354 A	442 A
LO base load output current		302 A	370 A	477 A
HO base load power		132 kW	160 kW	200 kW
HO base load input current		245 A	297 A	354 A
HO base load output current		250 A	302 A	370 A
Fuse according to IEC		3NA3254	3NA3260	3NA3372
Fuse according to UL (from SIEMENS)		3NE1333-2	3NE1333-2	3NE1436-2
Power loss,		3.9 kW	4.4 kW	5.5 kW
Required cooling air flow		360 l/s	360 l/s	360 l/s
Cross section of line and motor cables		95 ... 2 x 240 mm ² 3/0 ... 2 x 600 AWG	120 ... 2 x 240 mm ² 4/0 ... 2 x 600 AWG	185 ... 2 x 240 mm ² 6/0 ... 2 x 600 AWG
Tightening torque for line and motor cables		14 Nm / 120 lbf in	14 Nm / 120 lbf in	14 Nm / 120 lbf in
Weight		176 kg	176 kg	176 kg

Relationship between pulse frequency and output base-load current reduction

LO base load	Output base-load current at pulse frequency of							
	2 kHz	4 kHz	6 kHz	8 kHz	10 kHz	12 kHz	14 kHz	16 kHz
kW	A	A	A	A	A	A	A	A
0.37	--	1.30	1.11	0.91	0.78	0.65	0.59	0.52
0.55	--	1.70	1.45	1.19	1.02	0.85	0.77	0.68
0.75	--	2.20	1.87	1.54	1.32	1.10	0.99	0.88
1.1	--	3.10	2.64	2.17	1.86	1.55	1.40	1.24
1.5	--	4.10	3.49	2.87	2.46	2.05	1.85	1.64
2.2	--	5.90	5.02	4.13	3.54	2.95	2.66	2.36
3.0	--	7.70	6.55	5.39	4.62	3.85	3.47	3.08
4.0	--	10.20	8.67	7.14	6.12	5.10	4.59	4.08
7.5	--	18.00	16.20	13.30	11.40	9.50	8.60	7.60
11.0	--	25.00	22.10	18.20	15.60	13.00	11.70	10.40
15.0	--	32.00	27.20	22.40	19.20	16.00	14.40	12.80
18.5	--	38.00	32.30	26.60	22.80	19.00	17.10	15.20
22	--	45.00	38.25	31.50	27.00	22.50	20.25	18.00
30	--	60.00	52.70	43.40	37.20	31.00	27.90	24.80
37	--	75.00	63.75	52.50	45.00	37.50	33.75	30.00
45	--	90.00	76.50	63.00	54.00	45.00	40.50	36.00
55	--	110.0	93.50	77.00	--	--	--	--
75	--	145.0	123.3	101.5	--	--	--	--
90	--	178.0	151.3	124.6	--	--	--	--
110	205.0	178.0	--	--	--	--	--	--
132	250.0	205.0	--	--	--	--	--	--
160	302.0	250.0	--	--	--	--	--	--
200	370.0	302.0	--	--	--	--	--	--
250	477.0	370.0	--	--	--	--	--	--

12.2.3 Technical data, PM240-2

12.2.3.1 High overload - low overload PM240-2

Permissible inverter overload

The inverters have different load capabilities, "High Overload" and "Low Overload", depending on the expected.

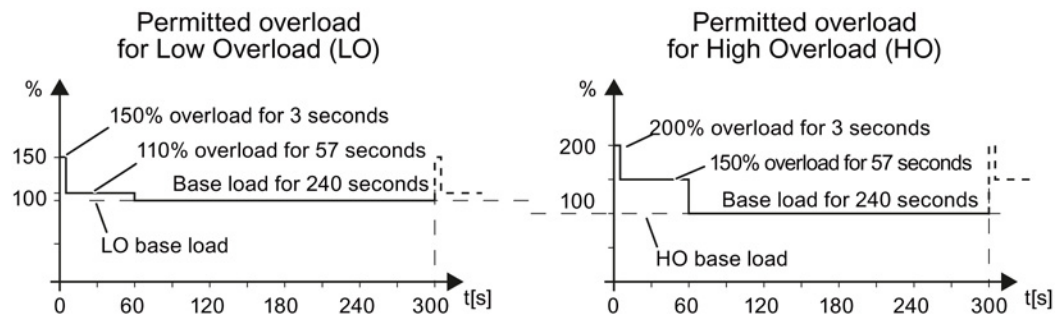


Figure 12-3 Load cycles, "Low Overload" and "High Overload"

12.2.3.2 General data, PM240-2 - 400V

If not specified otherwise, the data listed here apply up to installation altitudes of 2000 m above sea level.

You can find the values for higher installation altitudes under "Restrictions for special ambient conditions (Page 354)".

Property	Version
Line voltage	3 AC 380 V ... 480 V -20 %, +10 %
Output voltage	3 AC 0 V ... 0.95 * input voltage (max.) for U/f control systems 3 AC 0 V ... 0.90 * input voltage (max.) for vector control
Input frequency	50 Hz ... 60 Hz, ± 3 Hz
Output frequency	0 ... 550 Hz, depending on the control mode
Line impedance	$U_k \geq 1\%$, a line reactor is required for lower values
Power factor λ	0.7 at $U_k = 1\%$
Inrush current	< LO base load input current
Overvoltage category	The inverter insulation is designed for surge voltages according to EN 60664-1 according to the following categories: Overvoltage category III: Supply circuits Overvoltage category II: Non-supply circuits
Pulse frequency	4 kHz (factory setting) Can be adjusted in 2 kHz steps from 4 kHz ... 16 kHz. The output current is reduced if you increase the pulse frequency.
Short-circuit current rating (SCCR)	65 kA When fused using a type J or 3NE1 fuse, rated voltage 600 V AC with the rated current of the specific inverter.
Electromagnetic compatibility	Devices with integrated filter are in accordance with IEC 61800-3 and are suitable for category C2 environments.
Braking methods	DC braking, compound braking, dynamic braking with integrated braking chopper
Degree of protection	Chassis devices IP20 when installed in a control cabinet according to EN60529 PT devices IP54 at the control cabinet panel acc. to EN60529
Operating temperature at	LO base load power without derating -5 °C ... +40 °C HO base load power without derating -5 °C ... +50 °C LO/HO base load power with derating: -5 °C ... + 60° C
Storage temperature	-40 °C ... +70 °C
Relative humidity	< 95% - condensation not permissible
Pollution	Protected according to degree of pollution 2 to EN 61800-5-1
Environmental requirements	Protected against damaging chemical substances according to environmental class 3C2 to EN 60721-3-3
Shock and vibration	<ul style="list-style-type: none"> • Long-term storage in the transport packaging according to Class 1M2 to EN 60721-3-1 • Transport in the transport packaging according to Class 2M3 to EN 60721-3-2 • Vibration during operation according to Class 3M2 to EN 60721-3-3
Installation altitude	without derating: up to 1000 m above sea level Details see Section Restrictions for with derating: up to 4000 m above sea level special ambient conditions (Page 354).
Standards	UL, cUL, CE, C-tick, SEMI F47 The drive only satisfies the UL requirements when UL-certified fuses are used.

12.2.3.3 Power-dependent data PM240-2

Table 12- 31 PM240-2, IP20, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1PE11-8UL1	...1PE12-3UL1	...1PE13-2UL1
Order No. - with filter	6SL3210...	...1PE11-8AL1	...1PE12-3AL1	...1PE13-2AL1
LO base load power		0,55 kW	0,75 kW	1,1 kW
LO base load input current		2,3 A	2,9 A	4,1 A
LO base load output current		1,7 A	2,2 A	3,1 A
HO base load power		0,37 kW	0,55 kW	0,75 kW
HO base load input current		2,0 A	2,6 A	3,3 A
HO base load output current		1,3 A	1,7 A	2,2 A
Fuse according to IEC		3NA3 804 (4A)	3NA3 804 (4A)	3NA3 801 (6 A)
Fuse according to UL		4 A Class J	4 A Class J	6 A Class J
Power losses without filter		0,04 kW	0,04 kW	0,04 kW
Power losses with filter		0,04 kW	0,04 kW	0,04 kW
Required cooling air flow		5 l/s	5 l/s	5 l/s
Cross section of line and motor cables		1 ... 2,5 mm ² 18 ... 14 AWG	1 ... 2,5 mm ² 18 ... 14 AWG	1 ... 2,5 mm ² 18 ... 14 AWG
Tightening torque for line and motor cables		0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in
Weight without filter		1,4 kg	1,4 kg	1,4 kg
Weight with filter		1,5 kg	1,5 kg	1,5 kg

Table 12- 32 PM240-2, IP20, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1PE14-3UL1	...1PE16-1UL1	...1PE18-0UL1
Order No. - with filter	6SL3210...	...1PE14-3AL1	...1PE16-1AL1	...1PE18-0AL1
LO base load power		1,5 kW	2,2 kW	3,0 kW
LO base load input current		5,5 A	7,7 A	10,1 A
LO base load output current		4,1 A	5,9 A	7,7 A
HO base load power		1,1 kW	1,5 kW	2,2 kW
HO base load input current		4,7 A	6,1 A	8,8 A
HO base load output current		3,1 A	4,1 A	5,9 A
Fuse according to IEC		3NA3 803 (10 A)	3NA3 803 (10 A)	3NA3 805 (16 A)
Fuse according to UL		10 A Class J	10 A Class J	15 A Class J
Power losses without filter		0,07 kW	0,1 kW	0,12 kW
Power losses with filter		0,07 kW	0,1 kW	0,12 kW
Required cooling air flow		5 l/s	5 l/s	5 l/s
Cross section of line and motor cables		1 ... 2,5 mm ² 18 ... 14 AWG	1,5 ... 2,5 mm ² 16 ... 14 AWG	1,5 ... 2,5 mm ² 16 ... 14 AWG
Tightening torque for line and motor cables		0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in	0,5 Nm / 4 lbf in
Weight without filter		1,4 kg	1,4 kg	1,4 kg
Weight with filter		1,5 kg	1,5 kg	1,5 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 33 PM240-2, PT, Frame Sizes A, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3211...	...1PE18-0UL1
Order No. - with filter	6SL3211...	...1PE18-0AL1
LO base load power		3,0 kW
LO base load input current		10,1 A
LO base load output current		7,7 A
HO base load power		2,2 kW
HO base load input current		8,8 A
HO base load output current		5,9 A
Fuse according to IEC		3NA3 805 (16 A)
Fuse according to UL		15 A Class J
Power losses without filter		0,12 kW ¹⁾
Power losses with filter		0,12 kW ¹⁾
Required cooling air flow		7 l/s
Cross section of line and motor cables		1,5 ... 2,5 mm ² 16 ... 14 AWG
Tightening torque for line and motor cables		0,5 Nm / 4 lbf in
Weight without filter		1,7 kg
Weight with filter		---

1) approx. 0.1 kW through the heatsink

Table 12- 34 PM240-2, IP20, Frame Sizes B, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1PE21-1UL0	...1PE21-4UL0	...1PE21-8UL0
Order No. - with filter	6SL3210...	...1PE21-1AL0	...1PE21-4AL0	...1PE21-8AL0
LO base load power		4,0 kW	5,5 kW	7,5 kW
LO base load input current		13,3 A	17,2 A	22,2 A
LO base load output current		10,2 A	13,2 A	18,0 A
HO base load power		3,0 kW	4,0 kW	5,5 kW
HO base load input current		11,6 A	15,3 A	19,8 A
HO base load output current		7,7 A	10,2 A	13,7 A
Fuse according to IEC		3NE 1814-0 (20 A)	3NE 1815-0 (25 A)	3NE 1803-0 (35 A)
Fuse according to UL		20 A Class J	25 A Class J	35 A Class J
Power losses without filter		0,11 kW	0,15 kW	0,2 kW
Power losses with filter		0,11 kW	0,15 kW	0,2 kW
Required cooling air flow		9,2 l/s	9,2 l/s	9,2 l/s
Cross section of line and motor cables		1,5 ... 6 mm ² 16 ... 10 AWG	1,5 ... 6 mm ² 16 ... 10 AWG	1,5 ... 6 mm ² 16 ... 10 AWG
Tightening torque for line and motor cables		0,6 Nm / 5 lbf in	0,6 Nm / 5 lbf in	0,6 Nm / 5 lbf in
Weight without filter		2,9 kg	2,9 kg	3,0 kg
Weight with filter		3,1 kg	3,1 kg	3,2 kg

Table 12- 35 PM240-2, PT, Frame Sizes B, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3211...	...1PE21-8UL0
Order No. - with filter	6SL3211...	...1PE21-8AL0
LO base load power		7,5 kW
LO base load input current		22,2 A
LO base load output current		18,0 A
HO base load power		5,5 kW
HO base load input current		19,8 A
HO base load output current		13,7 A
Fuse according to IEC		3NE 1803-0 (35 A)
Fuse according to UL		35 A Class J
Power losses without filter		0,2 kW ¹⁾
Power losses with filter		0,2 kW ¹⁾
Required cooling air flow		9,2 l/s
Cross section of line and motor cables		1,5 ... 6 mm ² 16 ... 10 AWG
Tightening torque for line and motor cables		0,6 Nm / 5 lbf in
Weight without filter		3,6 kg
Weight with filter		3,9 kg

1) approx. 0.18 kW through the heatsink

Table 12- 36 PM240-2, IP20, Frame Sizes C, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3210...	...1PE22-7UL0	...1PE23-3UL0
Order No. - with filter	6SL3210...	...1PE22-7AL0	...1PE23-3AL0
LO base load power		11,0 kW	15,0 kW
LO base load input current		32,6 A	39,9 A
LO base load output current		26,0 A	32,0 A
HO base load power		7,5 kW	11,0 kW
HO base load input current		27,0 A	36,0 A
HO base load output current		18,0 A	26,0 A
Fuse according to IEC		3NE 1817-0 (50 A)	3NE 1817-0 (50 A)
Fuse according to UL		50 A Class J	50 A Class J
Power losses without filter		0,3 kW	0,37 kW
Power losses with filter		0,3 kW	0,37 kW
Required cooling air flow		18,5 l/s	18,5 l/s
Cross section of line and motor cables		6 ... 16 mm ² 10 ... 6 AWG	6 ... 16 mm ² 10 ... 6 AWG
Tightening torque for line and motor cables		1,3 Nm / 12 lbf in	1,3 Nm / 12 lbf in
Weight without filter		4,7 kg	4,8 kg
Weight with filter		5,3 kg	5,4 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 37 PM240-2, PT, Frame Sizes C, 3 AC 380 V ... 480 V

Order No. - without filter	6SL3211...	...1PE23-3UL0
Order No. - with filter	6SL3211...	...1PE23-3AL0
LO base load power	15,0 kW	
LO base load input current	39,9 A	
LO base load output current	32,0 A	
HO base load power	11,0 kW	
HO base load input current	36,0 A	
HO base load output current	26,0 A	
Fuse according to IEC	3NE 1817-0 (50 A)	
Fuse according to UL	50 A Class J	
Power losses without filter	0,37 kW ¹⁾	
Power losses with filter	0,37 kW ¹⁾	
Required cooling air flow	18,5 l/s	
Cross section of line and motor cables	6 ...16 mm ² 10 ... 6 AWG	
Tightening torque for line and motor cables	1,3 Nm / 12 lbf in	
Weight without filter	5,8 kg	
Weight with filter	6,3 kg	

1) approx. 0.35 kW through the heatsink

Current derating depending on the pulse frequency

Table 12- 38 Current derating depending on the pulse frequency ¹⁾ for 400 V devices

Order number	LO base load output current for a pulse frequency of ... [A]						
	4 kHz	6 kHz	8 kHz	10 kHz	12 kHz	14 kHz	16 kHz
6SL3210-1PE11-8□L1	1,7	1,4	1,2	1,0	0,9	0,8	0,7
6SL3210-1PE12-3□L1	2,2	1,9	1,5	1,3	1,1	1,0	0,9
6SL3211-1PE13-2□L1	3,1	2,6	2,2	1,9	1,6	1,4	1,2
6SL3210-1PE14-3□L1	4,1	3,5	2,9	2,5	2,1	1,8	1,6
6SL3210-1PE16-1□L1	5,9	5,0	4,1	3,5	3,0	2,7	2,4
6SL321□-1PE18-0□L1	7,7	6,5	5,4	4,6	3,9	3,5	3,1
6SL3210-1PE21-1□L0	10,2	8,7	7,1	6,1	5,1	4,6	4,1
6SL3210-1PE21-4□L0	13,2	11,2	9,2	7,9	6,6	5,9	5,3
6SL321□-1PE21-8□L0	18,0	15,3	12,6	10,8	9,0	8,1	7,2
6SL3210-1PE22-7□L0	26,0	22,1	18,2	15,6	13,0	11,7	10,4
6SL321□-1PE23-3□L0	32,0	27,2	22,4	19,2	16	14,4	12,8

¹⁾ The permissible motor cable length also depends on the cable type and the selected pulse frequency.

12.2.4 Technical data, PM250

12.2.4.1 High Overload - Low Overload

Permissible inverter overload

The inverters have different load capabilities, "High Overload" and "Low Overload", depending on the expected.

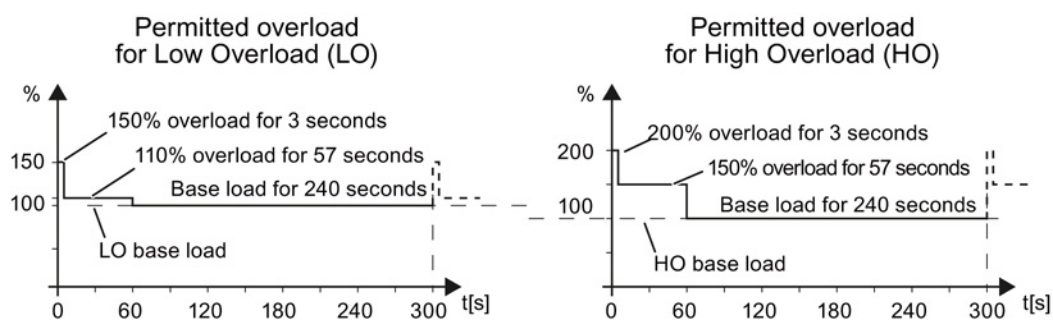


Figure 12-4 Load cycles, "Low Overload" and "High Overload"

12.2.4.2 General data, PM250

Property	Version		
Line voltage	380 V ... 480 V 3-ph. AC \pm 10 %		
Output voltage	0 V 3-ph. AC ... input voltage x 0.87 (max.)		
Input frequency	47 Hz ... 63 Hz		
Power factor λ	0.9		
Inrush current	< LO base load input current		
Pulse frequency (factory setting)	4 kHz The pulse frequency can be adjusted up to 16 kHz in 2 kHz steps. The higher the pulse frequency, the lower the available output current. For details, see Restrictions for special ambient conditions (Page 354).		
Electromagnetic compatibility	The devices comply with EN 61800-3: 2004 suitable for Category C1 and C2 environments.		
Braking methods	DC braking, energy recovery (up to 100% of the output power)		
Degree of protection	IP20 chassis units		
Operating temperature at	LO base load power without derating	0 °C ... +40 °C	
	HO base load power without derating	0 °C ... +50 °C	
	LO/HO base load power with derating:	Up to 60° C	
	For details, see Restrictions for special ambient conditions (Page 354).		
Storage temperature	-40 °C ... +70 °C		
Relative humidity	< 95% - condensation not permissible		
Pollution	Protected according to pollution degree 2 to EN 61800-5-1: 2007		
Environmental requirements	Protected against damaging chemical substances according to environmental class 3C2 to EN 60721-3-3; 1995		
Shock and vibration	<ul style="list-style-type: none"> • Long-term storage in the transport packaging according to Class 1M2 to EN 60721-3-1: 1997 • Transport in the transport packaging according to Class 2M3 to EN 60721-3-2: 1997 • Vibration during operation according to Class 3M2 to EN 60721-3-3: 1995 		
Installation altitude	without derating:	up to 1000 m above sea level	For details, see Restrictions for special ambient conditions (Page 354)
	with derating:	up to 4000 m above sea level	
Standards	UL, CE, CE, SEMI F47 The drive only satisfies the UL requirements when UL-certified fuses are used.		

12.2.4.3 Power-dependent data, PM250

Note

The values for Low Overload (LO) are identical with those of the rated values.

Table 12- 39 PM250, IP20, Frame Sizes C, 3 AC 380 V ... 480 V

Order No. - with filter	6SL3225-...	0BE25-5AA0	0BE27-5AA0	0BE31-1AA0
LO base load power		7.5 kW	11 kW	15 kW
LO base load input current		18 A	25 A	32 A
LO base load output current		18 A	25 A	32 A
HO base load power		5.5 kW	7.5 kW	11 kW
HO base load input current		13.2 A	19 A	26 A
HO base load output current		13.2 A	19 A	26 A
Fuse		20 A, Class J	32 A, Class J	35 A, Class J
Power loss		0.24 kW	0.30 kW	0.31 kW
Required cooling air flow		38 l/s	38 l/s	38 l/s
Cross section of line and motor cables		2.5 ... 10 mm ² 14 ... 8 AWG	4.0 ... 10 mm ² 12 ... 8 AWG	4.0 ... 10 mm ² 12 ... 8 AWG
Tightening torque for line and motor cables		2.3 Nm / 20 lbf in	2.3 Nm / 20 lbf in	2.3 Nm / 20 lbf in
Weight		7.5 kg	7.5 kg	7.5 kg

Table 12- 40 PM250, IP20, Frame Sizes D, 3 AC 380 V ... 480 V

Order No. - with filter	6SL3225-...	0BE31-5AA0	0BE31-8AA0	0BE32-2AA0
LO base load power		18.5 kW	22 kW	30 kW
LO base load input current		36 A	42 A	56 A
LO base load output current		38 A	45 A	60 A
HO base load power		15 kW	18.5 kW	22 kW
HO base load input current		30 A	36 A	42 A
HO base load output current		32 A	38 A	45 A
Fuse according to IEC		3NA3820	3NA3822	3NA3824
Fuse according to UL		50 A, Class J	63 A, Class J	80 A, Class J
Power loss		0.44 kW	0.55 kW	0.72 kW
Required cooling air flow		22 l/s	22 l/s	39 l/s
Cross section of line and motor cables		10 ... 35 mm ² 7 ... 2 AWG	10 ... 35 mm ² 7 ... 2 AWG	16 ... 35 mm ² 6 ... 2 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight		15 kg	15 kg	16 kg

Technical data

12.2 Technical data, Power Modules

Table 12- 41 PM250, IP20, Frame Sizes E, 3 AC 380 V ... 480 V

Order No. - with filter	6SL3225-...	0BE33-0AA0	0BE33-7AA0
LO base load power		37 kW	45 kW
LO base load input current		70 A	84 A
LO base load output current		75 A	90 A
HO base load power		30 kW	37 kW
HO base load input current		56 A	70 A
HO base load output current		60 A	75 A
Fuse according to IEC		3NA3830	3NA3832
Fuse according to UL		100 A, Class J	125 A, Class J
Power loss		1.04 kW	1.2 kW
Required cooling air flow		22 l/s	39 l/s
Cross section of line and motor cables		25 ... 35 mm ² 3 ... 2 AWG	25 ... 35 mm ² 3 ... 2 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight		21 kg	21 kg

Table 12- 42 PM250, IP20, Frame Sizes F, 3 AC 380 V ... 480 V

Order No. - with filter	6SL3225-...	0BE34-5AA0	0BE35-5AA0	0BE37-5AA0
LO base load power		55 kW	75 kW	90 kW
LO base load input current		102 A	135 A	166 A
LO base load output current		110 A	145 A	178 A
HO base load power		45 kW	55 kW	75 kW
HO base load input current		84 A	102 A	135 A
HO base load output current		90 A	110 A	145 A
Fuse according to IEC		3NA3836	3NA3140	3NA3144
Fuse according to UL		160 A, Class J	200 A, Class J	250 A, Class J
Power loss		1.5 kW	2.0 kW	2.4 kW
Required cooling air flow		94 l/s	94 l/s	117 l/s
Cross section of line and motor cables		35 ... 120 mm ² 2 ... 4/0 AWG	35 ... 120 mm ² 2 ... 4/0 AWG	35 ... 120 mm ² 2 ... 4/0 AWG
Tightening torque for line and motor cables		13 Nm / 115 lbf in	13 Nm / 115 lbf in	13 Nm / 115 lbf in
Weight		51 kg	51 kg	51 kg

Relationship between pulse frequency and current reduction

Table 12- 43 Current reduction depending on pulse frequency

Rated Power (LO)	Base load current (LO)	Base load current (LO) at pulse frequency of					
		4 kHz	6 kHz	8 kHz	10 kHz	12 kHz	14 kHz
kW	A	A	A	A	A	A	A
7.5	18.0	12.5	11.9	10.6	9.20	7.90	6.60
11	25.0	18.1	17.1	15.2	13.3	11.4	9.50
15	32.0	24.7	23.4	20.8	18.2	15.6	12.8
18.5	38.0	32.3	26.6	22.8	19.0	17.1	15.2
22	45.0	38.3	31.5	27.0	22.5	20.3	18.0
30	60.0	51.0	42.0	36.0	30.0	27.0	24.0
37	75.0	63.8	52.5	45.0	37.5	33.8	30.0
45	90.0	76.5	63.0	54.0	45.0	40.5	36.0
55	110	93.5	77.0	--	--	--	--
75	145	123	102	--	--	--	--
90	178	151	125	--	--	--	--

12.2.5 Technical data, PM260

12.2.5.1 High Overload - Low Overload

Permissible inverter overload

The inverters have different load capabilities, "High Overload" and "Low Overload", depending on the expected.

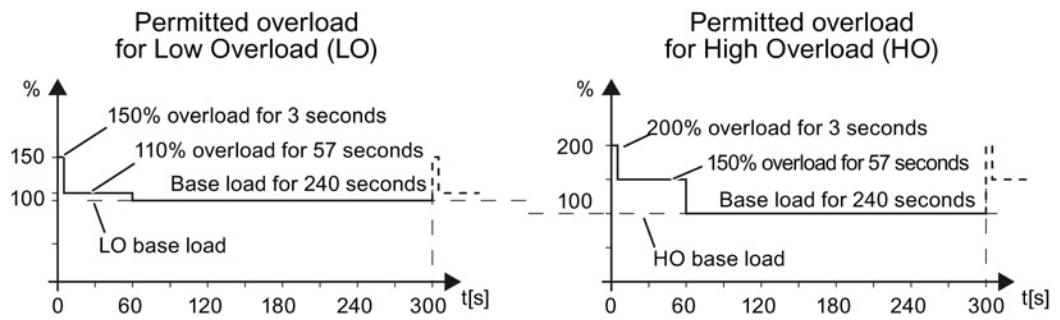


Figure 12-5 Load cycles, "Low Overload" and "High Overload"

12.2.5.2 General data, PM260

Property	Version
Line voltage	660 V ... 690 V 3-ph. AC \pm 10% The power units can also be operated with a minimum voltage of 500 V –10 %. In this case, the power is linearly reduced.
Input frequency	50 Hz ... 60 Hz, \pm 3 Hz
Power factor λ	0.9
Inrush current	< LO base load input current
Pulse frequency	16 kHz
Electromagnetic compatibility	The devices comply with EN 61800-3: 2004 suitable for Category C1 and C2 environments.
Braking methods	DC braking, energy recovery (up to 100% of the output power)
Degree of protection	IP20 chassis units
Operating temperature at	LO base load power without derating 0 °C ... +40 °C
	HO base load power without derating 0 °C ... +50 °C
	LO/HO base load power with derating: Up to 60° C
	For details, see Restrictions for special ambient conditions (Page 354).
Storage temperature	-40 °C ... +70 °C
Relative humidity	< 95% - condensation not permissible
Pollution	Protected according to pollution degree 2 to EN 61800-5-1: 2007
Environmental requirements	Protected against damaging chemical substances according to environmental class 3C2 to EN 60721-3-3; 1995
Shock and vibration	<ul style="list-style-type: none"> • Long-term storage in the transport packaging according to Class 1M2 to EN 60721-3-1: 1997 • Transport in the transport packaging according to Class 2M3 to EN 60721-3-2: 1997 • Vibration during operation according to Class 3M2 to EN 60721-3-3: 1995
Installation altitude	without derating: up to 1000 m above sea level with derating: up to 4000 m above sea level For details, see Restrictions for special ambient conditions (Page 354)
Standards	CE, C-TICK

12.2.5.3 Power-dependent data, PM260

Technical data, PM260

Note

The values for Low Overload (LO) are identical with those of the rated values.

Table 12- 44 PM260, IP20, Frame Sizes D - 3 AC 660 V ... 690 V

Order No. - without filter	6SL3225-...	0BH27-5UA1	0BH31-1UA1	0BH31-5UA1
Order No. - with filter	6SL3225-...	0BH27-5AA1	0BH31-1AA1	0BH31-5AA1
LO base load power		11 kW	15 kW	18.5 kW
LO base load input current		13 A	18 A	22 A
LO base load output current		14 A	19 A	23 A
HO base load power		7.5 kW	11 kW	15 kW
HO base load input current		10 A	13 A	18 A
HO base load output current		10 A	14 A	19 A
Fuse		20 A	20 A	32 A
Power losses without filter				
Power losses with filter				
Required cooling air flow		22 l/s	22 l/s	39 l/s
Cross section of line and motor cables		2.5 ... 16 mm ² 14 ... 6 AWG	4 ... 16 mm ² 12 ... 6 AWG	6 ... 16 mm ² 10 ... 6 AWG
Tightening torque for line and motor cables		1.5 Nm / 53 lbf in	1.5 Nm / 53 lbf in	1.5 Nm / 53 lbf in
Weight without filter		22 kg	22 kg	22 kg
Weight with filter		23 kg	23 kg	23 kg
Sound pressure level		< 64 dB(A)	< 64 dB(A)	< 64 dB(A)

Table 12- 45 PM260, IP20, Frame Sizes F - 3 AC 660 V ... 690 V

Order No. - without filter	6SL3225-...	0BH32-2UA1	0BH33-0UA1	0BH33-7UA1
Order No. - with filter	6SL3225-...	0BH32-2AA1	0BH33-0AA1	0BH33-7AA1
LO base load power		30 kW	37 kW	55 kW
LO base load input current		34 A	41 A	60 A
LO base load output current		35 A	42 A	62 A
HO base load power		22 kW	30 kW	37 kW
HO base load input current		26 A	34 A	41 A
HO base load output current		26 A	35 A	42 A
Fuse		50 A	50 A	80 A
Power losses without filter				
Power losses with filter				
Required cooling air flow		94 l/s	94 l/s	117 l/s
Cross section of line and motor cables		10 ... 35 mm ² 8 ... 2 AWG	16 ... 35 mm ² 6 ... 2 AWG	25 ... 35 mm ² 4 ... 2 AWG
Tightening torque for line and motor cables		6 Nm / 53 lbf in	6 Nm / 53 lbf in	6 Nm / 53 lbf in
Weight without filter		56 kg	56 kg	56 kg
Weight with filter		58 kg	58 kg	58 kg
Sound pressure level		< 70 dB(A)	< 70 dB(A)	< 70 dB(A)

12.2.6 PM330 technical data

Permissible inverter overload

The inverters have different load capabilities, "High Overload" and "Low Overload", depending on the expected.

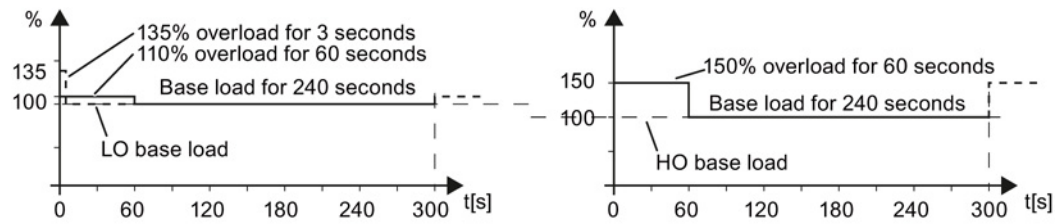


Figure 12-6 Load cycles, "Low Overload" and "High Overload"

12.2.6.1 PM330 general data

Table 12- 46 General technical data

Electrical data			
Line system configurations	Grounded TN/TT systems and non-grounded IT systems		
Line requirement	A line reactor (2 % u_k) must be connected in series		
Line voltage	380 V (-10 %) ... 480 V (+10 %)		
Line frequency	47 ... 63 Hz		
Output frequency	0 ... 100 Hz		
Displacement factor $\cos \varphi$ power factor λ	0,96 0.75 ... 0.93 (with line reactor $u_k = 2 \%$)		
Inverter efficiency	> 98 %		
Short-circuit current rating per IEC, in conjunction with the specified fuses	110 ... 400 kW: 100 kA		
Short-circuit current rating per UL508C (up to 480 VAC), in conjunction with the specified fuses	110 ... 400 kW: 100 kA Can be used on supply systems that cannot supply more than 100 kA symmetrically for a maximum voltage of 480 VAC when they are protected with the listed fuses of type Class J or Class L, or approved semi-conductor fuses specified in the "Technical Data" section of this manual.		
Overvoltage category	III according to EN 61800-5-1		
Mechanical data			
Degree of protection	IP20		
Protection class	according to EN 61800-5-1: Class I (with protective conductor system) and Class III (PELV)		
Cooling method	Forced air cooling AF according to EN 60146		
Sound pressure level L_{PA} (1 ma)	≤ 74 dB(A) ¹⁾		
Touch protection	according to EN 61800-5-1: For the intended purpose		
Compliance with standards			
Standards	EN 60146-1-1, EN 61800-2, EN 61800-3, EN 61800-5-1, EN 60204-1, EN 60529, UL508C, CSA 22.2 No. 14-13		
CE marking	To EMC directive No. 2004/108/EC and low-voltage directive No. 2006/95/EC		
Radio interference suppression	In accordance with the EMC product standard for variable-speed drives EN 61800-3, "second environment" ²⁾ . Application in "first environment" possible with line filters.		
Approval	cULus (File No.: E192450), CE, c-Tick, GOST-R, KC		
Ambient conditions	During storage ³⁾	During transport ³⁾	During operation
Ambient temperature	-25 ... +55° C	-25 ... +70° C above -40° C for 24 hours	0 ... +40° C up to +50° C with derating
Relative humidity (no condensation) Corresponds to class	5 to 95% 1K4 according to EN 60721-3-1	5 ... 95% at 40° C 2K3 according to EN 60721-3-2	5 ... 95 % 3K3 according to EN 60721-3-3
Environmental class / harmful chemical substances	1C2 according to EN 60721-3-1	2C2 according to EN 60721-3-2	3C2 according to EN 60721-3-3
Organic/biological influences	1B1 according to EN 60721-3-1	2B1 according to EN 60721-3-2	3B1 according to EN 60721-3-3

Pollution degree	2 according to EN 61800-5-1		
Installation altitude	Up to 1000 m above sea level without derating, > 1000 m above sea level with derating (see "Derating data")		
Mechanical strength	During storage ³⁾	During transport ³⁾	During operation
Vibrational load - Displacement - Acceleration	Fc test according to EN 60068-2-6 ±1.5 mm for 5 ... 9 Hz 0.5 g for 9 ... 200 Hz	Fc test according to EN 60068-2-6 ±1.5 mm for 5 ... 9 Hz 0.5 g for 9 ... 200 Hz	Fc test according to EN 60068-2-6 0.075 mm for 10 ... 58 Hz 9.81 ma/s ² (1 x g) for > 58 ... 200 Hz
Shock load - Displacement - Acceleration		Fc test according to EN 60068-2-6 ±1.5 mm for 5 ... 9 Hz 0.5 g for 9 ... 200 Hz	Test according to EN 60068-2-27 (EA shock type) 49 ma/s ² (5 x g)/30 ms 147 ma/s ² (15 x g)/11 ms

Deviations from the defined classes are shown in *italics*.

- 1) maximum sound pressure level, ascertained in the IP20 cabinet
- 2) Standard construction: Devices installed in the switch cabinet with EMC-conform construction, line reactor uk = 2%, shielded motor cable (e.g. Prototflex EMC) with max. 100 m cable length, line perturbations according to EN 61000-2-4: Class 2, THD(U) total = 8 % for typical line conditions (RSC > 30 ... 50); THD(I) total: typically 30 ... 45 % (15 < RSC < 50)
- 3) in transport packaging

12.2.6.2 Power-dependent data, PM330

Note

Recommended connection cross-sections

The recommended connection cross-sections are determined for copper cables at 40° C (104° F) ambient temperature and cables with a permitted operating temperature on the conductor for 70° C (laying type C - factor for bundling 0.75 considered) according to DIN VDE 0298-4/08.03).

Protective conductor cross-section (S: Cross-section of the supply connection phase conductor, MS: Cross-section of the external protective conductor):

Minimum cross-sections:

- $S \leq 16 \text{ mm}^2 \rightarrow MS = S$
- $16 \text{ mm}^2 \leq S \leq 35 \text{ mm}^2 \rightarrow MS = 16 \text{ mm}^2$
- $S > 35 \text{ mm}^2 \rightarrow MS = 0.5 \times S$

Recommended cross-sections:

- $MS \geq S$

PM330 frame sizes GX, 3-ph. 380 VAC... 480 VAC

Table 12- 47 PM330 frame sizes GX, 3-ph. 380 VAC... 480 VAC

Order no.	6SL3310...	...1PE33-0AA0	...1PE33-7AA0	...1PE34-6AA0
Rated input current				
- for 380/400 V, 40° C		317 A	375 A	469 A
- for 480 V, 40° C		262 A	314 A	376 A
- for 380/400 V, 50° C		269 A	319 A	399 A
- for 480 V, 50° C		220 A	266 A	319 A
Rated output current I _N				
- for 380/400 V, 40° C		300 A	370 A	460 A
- for 480 V, 40° C		245 A	308 A	369 A
- for 380/400 V, 50° C		255 A	315 A	391 A
- for 480 V, 50° C		208 A	262 A	313 A
LO base-load power		160 kW	200 kW	250 kW
LO base-load input current at 400 V		307 A	365 A	459 A
LO base-load output current at 400 V		290 A	360 A	450 A
HO base-load power		132 kW	160 kW	200 kW
HO base-load input current at 400 V		254 A	300 A	375 A
HO base-load output current at 400 V		240 A	296 A	368 A
Fuse according to IEC		3NE1333-2 (450 A/690 V)	3NE1334-2 (500 A/690 V)	3NE1435-2 (560 A/690 V)
manufacturer:		Siemens AG	Siemens AG	Siemens AG
Maximum permissible line short-circuit current I _{kmax}		≤ 100 kA	≤ 100 kA	≤ 100 kA
Minimum network short-circuit current required I _{kmin} ¹⁾		> 4.4 kA	> 5.2 kA	> 6.3 kA
Fuse according to UL ²⁾		Class J 400 A / 600 V e.g. DF J-400	Class J 500 A / 600 V e.g. DF J-500	Class J 600 A / 600 V e.g. DF J-600
max.power loss, at I _N , 40 °C, 400 V		3.642 kW	4.414 kW	5.125 kW
Required cooling air flow		210 l/s	210 l/s	210 l/s
Maximum connectable cross-section of the line, motor and DC-link cable		2 x 240 mm ² 2 x 500 kcmil	2 x 240 mm ² 2 x 500 kcmil	2 x 240 mm ² 2 x 500 kcmil
Recommended cable cross-section for 380/400 V				
- power cable		2 x 120 mm ²	2 x 120 mm ²	2 x 185 mm ²
- motor cable		2 x 95 mm ²	2 x 95 mm ²	2 x 150 mm ²
Recommended cable cross-section for 480 V				
- power cable		2 x 95 mm ²	2 x 120 mm ²	2 x 120 mm ²
- motor cable		2 x 70 mm ²	2 x 95 mm ²	2 x 120 mm ²
Tightening torque for line, motor and ground cable		50 Nm / 443 lbf in	50 Nm / 443 lbf in	50 Nm / 443 lbf in
Weight		101 kg	102 kg	107 kg

- 1) The network supply must be capable of supplying the minimum short-circuit current so that the fuses trigger and consequential damage is avoided.
 Note: If the minimum short-circuit current is not reached then the tripping time for the fuses increases, and this may result in consequential damage.
- 2) When semi-conductor fuses are used, they must be mounted in the same lower-level construction as the inverter.

PM330, frame size HX, 3 AC 380 V ... 480 V

Table 12- 48 PM330, frame size HX, 3 AC 380 V ... 480 V

Order no.	6SL3310...	...1PE35-8AA0	...1PE36-6AA0	...1PE37-4AA0
Rated input current				
- for 380/400 V, 40° C		597 A	668 A	750 A
- for 480 V, 40° C		497 A	536 A	614 A
- for 380/400 V, 50° C		507A	568 A	637 A
- for 480 V, 50° C		422 A	456 A	522 A
Rated output current I_N				
- for 380/400 V, 40° C		585 A	655 A	735 A
- for 480 V, 40° C		487 A	526 A	602 A
- for 380/400 V, 50° C		497 A	557 A	625 A
- for 480 V, 50° C		414 A	447 A	512 A
LO base-load power		315 kW	355 kW	400 kW
LO base-load input current at 400 V		581 A	653 A	734 A
LO base-load output current at 400 V		570 A	640 A	720 A
HO base-load power		250 kW	250 kW	315 kW
HO base-load input current at 400 V		477 A	501 A	562 A
HO base-load output current at 400 V		468 A	491 A	551 A
Fuse according to IEC		3NE1437-2 (710 A/690 V)	3NE1438-2 (800 A/690 V)	3NE1448-2 (850 A/690 V)
manufacturer:		Siemens AG	Siemens AG	Siemens AG
Maximum permissible line short-circuit current I_{kmax}		≤ 100 kA	≤ 100 kA	≤ 100 kA
Minimum network short-circuit current required I_{kmin} ¹⁾		> 9.0 kA	> 10.0 kA	> 12.0 kA
Fuse according to UL ²⁾		Class L 650 A / 600 V e. g. KTU 650	Class L 700 A / 600 V e. g. KTU 700	Class L 800 A / 600 V e. g. KTU 800
max.power loss, at I_N , 40 °C, 400 V		6.791 kW	7.687 kW	8.385 kW
Required cooling air flow		360 l/s	360 l/s	360 l/s
Maximum connectable cross-section of the line, motor and DC-link cable		4 x 240 mm ² 4 x 500 kcmil	4 x 240 mm ² 4 x 500 kcmil	4 x 240 mm ² 4 x 500 kcmil
Recommended cable cross-section for 380/400 V				
- power cable		2 x 240 mm ²	3 x 150 mm ²	3 x 185 mm ²
- motor cable		2 x 185 mm ²	2 x 240 mm ²	2 x 240 mm ²
Recommended cable cross-section for 480 V				
- power cable		2 x 185 mm ²	2 x 240 mm ²	2 x 240 mm ²
- motor cable		2 x 150 mm ²	2 x 185 mm ²	2 x 240 mm ²
Tightening torque for line, motor and ground cable		50 Nm / 443 lbf in	50 Nm / 443 lbf in	50 Nm / 443 lbf in
Weight		155 kg	155 kg	157 kg
Minimum control cabinet size for installation of the Power Module (width x height x depth)		800 mm x 2000 mm x 600 mm		

1) The network supply must be capable of supplying the minimum short-circuit current so that the fuses trigger and consequential damage is avoided.


Note: If the minimum short-circuit current is not reached then the tripping time for the fuses increases, and this may result in consequential damage.

2) When semi-conductor fuses are used, they must be mounted in the same lower-level construction as the inverter.


12.3 Restrictions for special ambient conditions

Current de-rating depending on the ambient operating temperature

Low Overload

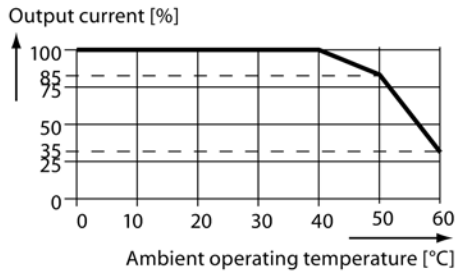

High Overload

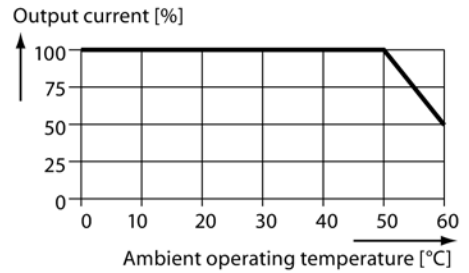


NOTICE

Restrictions for the permissible ambient operating temperature as a result of the Control Unit or operator panel

For the permissible ambient operating temperature, also observe possible restrictions as a result of the Control Unit or an operator panel.

Current derating depending on the installation altitude

Above 1000 m above sea level you must reduce the inverter output current corresponding to the adjacent curve as a result of the lower cooling power of the air.

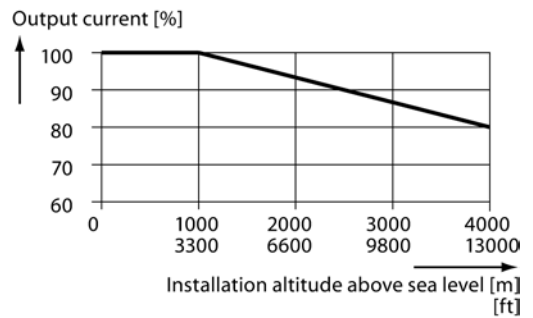

Permissible line supplies depending on the installation altitude

- Installation altitude up to 2000 m above sea level
 - Connection to every supply system permitted for the inverter.
- Installation altitudes between 2000 m and 4000 m above sea level
 - Connection to a TN system with grounded neutral point.
 - TN systems with grounded line conductor are not permitted.
 - The TN line system with grounded neutral point can also be supplied using an isolation transformer.
 - The phase-to-phase voltage does not have to be reduced.

Also observe restrictions related to the connection of components.

Appendix

A.1 New and extended functions

A.1.1 Firmware version 4.5

Table A- 1 New functions and function changes in Firmware 4.5

	Function	SINAMICS					
			G120			G120D	
		G120C	CU230P-2	CU240B-2	CU240E-2	CU240D-2	CU250D-2
1	Support for the new Power Modules: <ul style="list-style-type: none"> PM230 IP20 FSA ... FSF PM230 in a push-through FSA ... FSC 	-	✓	✓	✓	-	-
2	Support for the new Power Modules: <ul style="list-style-type: none"> PM240-2 IP20 FSA PM240-2 in push-through FSA 	-	✓	✓	✓	-	-
3	New Control Units with PROFINET support	✓	✓	-	✓	✓	✓
4	Support of the PROFlenergy profile	✓	✓	-	✓	✓	✓
5	Shared device support via PROFINET	✓	✓	-	✓	✓	✓
6	Write protection	✓	✓	✓	✓	✓	✓
7	Know-how protection	✓	✓	✓	✓	✓	✓
8	Adding a second command data set (CDS0 → CDS0 ... CDS1) (All other inverters have four command data sets)	✓	-	-	-	-	-
9	Position control and basic positioner	-	-	-	-	-	✓
10	Support of an HTL encoder	-	-	-	-	✓	✓
11	Support of an SSI encoder	-	-	-	-	-	✓
12	Fail-safe digital output	-	-	-	-	✓	✓

A.1.2 Firmware version 4.6

Table A-2 New functions and function changes in Firmware 4.6

	Function	SINAMICS						
		G120					G120D	
		G120C	CU230P-2	CU240B-2	CU240E-2	CU250S-2	CU240D-2	CU250D-2
1	Support for the new Power Modules <ul style="list-style-type: none"> PM240-2 IP20 FSB ... FSC PM240-2 in through-hole technology FSB ... FSC 	-	✓	✓	✓	✓	-	-
2	Support for the new Power Modules <ul style="list-style-type: none"> PM230 in through-hole technology FSD ... FSF 	-	✓	✓	✓	-	-	-
3	Motor data preassignment for the 1LA/1LE motors via code number <ul style="list-style-type: none"> During basic commissioning with the operator panel, set the motor data using a code number 	✓	✓	✓	✓	✓	✓	✓
4	Extension to communication via CANopen <ul style="list-style-type: none"> CAN velocity, ProfilTorque, SDO channel for each axis, system test with CodeSys, suppression of ErrorPassiv alarm 	✓	✓	-	-	✓	-	-
5	Extension to communication via BACnet <ul style="list-style-type: none"> Multistate value objects for alarms, commandable AO objects, objects for configuring the PID controller 	-	✓	-	-	-	-	-
6	Communication via EtherNet/IP	✓	✓	-	✓	✓	✓	✓
7	Skip frequency band for analog input <ul style="list-style-type: none"> A symmetrical skip frequency band can be set for each analog input around the 0 V range. 	✓	✓	✓	✓	✓	✓	-
8	Changing the control of the motor holding brake	✓	-	✓	✓	✓	✓	-
9	Safety function SBC (Safe Brake Control) <ul style="list-style-type: none"> Secure control of a motor holding brake when using the "Safe Brake Module" option 	-	-	-	-	✓	-	-
10	Safety function SS1 (Safe Stop 1) without speed monitoring	-	-	-	-	✓	-	-
11	Straightforward selection of standard motors <ul style="list-style-type: none"> Selection of 1LA... and 1LE... motors with an operator panel using a list containing code numbers 	✓	✓	✓	✓	✓	✓	✓
12	Firmware update via memory card	✓	✓	✓	✓	✓	✓	✓
13	Safety info channel <ul style="list-style-type: none"> BICO source r9734.0...14 for the status bits of the extended safety functions 	-	-	-	✓	✓	✓	✓
14	Diagnostic alarms for PROFIBUS	✓	✓	✓	✓	✓	✓	✓

A.1.3 Firmware version 4.6.6

Table A- 3 New functions and function changes in Firmware 4.6.6

	Function	SINAMICS						
		G120					G120D	
		G120C	CU230P-2	CU240B-2	CU240E-2	CU250S-2	CU240D-2	CU250D-2
1	Support for the new Power Modules <ul style="list-style-type: none"> PM330 IP20 GX 	-	✓	-	-	-	-	-

A.1.4 Firmware version 4.7

Table A- 4 New functions and function changes in Firmware 4.7

	Function	SINAMICS								
		G120						G120D		ET 200pro FC
		G110M	G120C	CU230P-2	CU240B-2	CU240E-2	CU250S-2	CU240D-2	CU250D-2	
1	Supporting the identification & maintenance datasets (I&M1 ... 4)	✓	✓	✓	✓	✓	✓	✓	✓	✓
2	Fall in pulse rate with increased drive power required by the motor <ul style="list-style-type: none"> The inverter temporarily lowers the pulse frequency if required when the motor is started up, and simultaneously increases the current limit. 	✓	✓	✓	✓	✓	✓	✓	✓	✓
3	S7 communication <ul style="list-style-type: none"> Direct data exchange from the inverter and human machine interface (HMI) Increase in communication performance with the engineering tools and support of the S7 routing 	✓	✓	✓	✓	✓	✓	✓	✓	-
4	The basic functions of Safety Integrated are unrestrictedly available in all control types with 1FK7 encoderless permanent-field synchronous motors	-	-	-	-	-	-	✓	-	-
5	Direct selection of the 1FK7 encoderless permanent-field synchronous motors using the order number with allocated code number <ul style="list-style-type: none"> It is not necessary to input individual motor data 	-	-	-	-	-	-	✓	-	-
6	Pulse input as source of setpoint value <ul style="list-style-type: none"> The inverter calculates its speed setpoint from a sequence of pulses at the digital input. 	-	-	-	-	-	✓	-	-	-
7	Dynamic IP address assignment (DHCP) and temporary device names for PROFINET	✓	✓	✓	-	✓	✓	✓	✓	✓
8	PROFenergy Slave profile 2 and 3	✓	✓	✓	-	✓	✓	✓	✓	✓
9	Uniform behavior for component replacement <ul style="list-style-type: none"> After a component is replaced, an inverter with activated Safety Integrated will report what type of component has been replaced using a unique code. 	✓	✓	-	-	✓	✓	✓	✓	✓
10	Improved direct-component control in PM230 <ul style="list-style-type: none"> Optimized efficiency for pump and fan applications 	-	-	✓	-	-	-	-	-	-
11	Rounding down of BACnet and macros	-	-	✓	-	-	-	-	-	-

A.2 Star-delta motor connection and application examples

Depending on your application, you can operate the motor in the star or delta connection (Y/ Δ).

Examples for operating the converter and motor on a 400 V line supply

Assumption: The motor rating plate states 230/400 V Δ /Y.

Case 1: A motor is normally operated between standstill and its rated speed (i.e. a speed corresponding to the line frequency). In this case, you need to connect the motor in Y. Operating the motor above its rated speed is only possible in field weakening, i.e. the motor torque available is reduced above the rated speed.

Case 2: If you want to operate the motor with the "87 Hz characteristic", you need to connect the motor in Δ .


With the 87 Hz characteristic, the motor's power output increases. The 87 Hz characteristic is mainly used with geared motors.

Before you connect the motor, ensure that the motor has the appropriate connection for your application:

Motor is connected in the star or delta configuration

With SIEMENS motors, you will see a diagram of both connection methods on the inside of the cover of the terminal box:

- Star connection (Y)
- Delta connection (Δ)

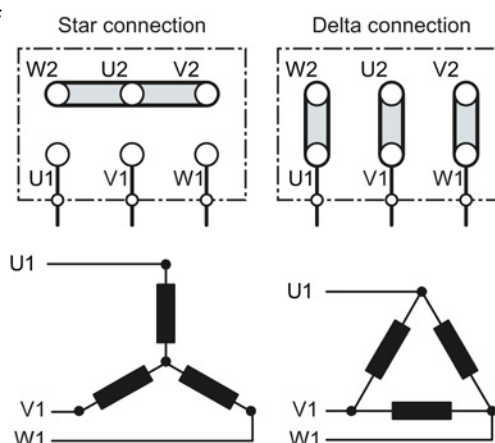

A.3 Parameter

Parameters are the interface between the firmware of the converter and the commissioning tool, e.g. an Operator Panel.

Adjustable parameters

Adjustable parameters are the "adjusting screws" with which you adapt the converter to its particular application. If you change the value of an adjustable parameter, then the converter behavior also changes.

Adjustable parameters are shown with a "p" as prefix, e.g. p1082 is the parameter for the maximum motor speed.

Display parameters

Display parameters allow internal measured quantities of the converter and the motor to be read.

The Operator Panel and STARTER represent display parameters with an "r" prefix, for example, r0027 is the parameter for the converter output current.

Parameters that in many cases help

Table A- 5 How to switch to commissioning mode or restore the factory setting

Parameter	Description
p0010	Commissioning parameters 0: Ready (factory setting) 1: Carry out basic commissioning 3: Carry out motor commissioning 5: Technological applications and units 15: Define number of data sets 30: Factory setting - initiate restore factory settings

Table A- 6 How to determine the firmware version of the Control Unit

Parameter	Description
r0018	Firmware version is displayed

Table A- 7 How to select the command and setpoint sources for the inverter

Parameter	Description
p0015	Additional information is available in Section Factory setting of the terminals (Page 69).

Table A- 8 How to set the ramp-up and ramp-down

Parameter	Description
p1080	Minimum speed 0.00 [rpm] factory setting
p1082	Maximum speed 1500.000 [rpm] factory setting
p1120	Ramp-up time 10.00 [s]
p1121	Ramp-down time 10.00 [s]

Table A- 9 This is how you set the closed-loop type

Parameter	Description
p1300	0: U/f control with linear characteristic 1: U/f control with linear characteristic and FCC 2: U/f control with parabolic characteristic 3: U/f control with adjustable characteristic 4: U/f control with linear characteristic and ECO 5: U/f control for drives requiring a precise frequency (textile area) 6: U/f control for drives requiring a precise frequency and FCC 7: U/f control with parabolic characteristic and ECO 19: U/f control with independent voltage setpoint 20: Speed control (without encoder) 22: Torque control (without encoder)

Not all Power Modules offer for selection all the listed control modes. The control modes permitted for your device are offered during the commissioning.


Table A- 10 This is how you optimize the starting behavior of the U/f control for a high break loose torque and overload

Parameter	Description
p1310	Voltage boost to compensate ohmic losses The voltage boost is active from standstill up to the rated speed. It is at its highest at speed 0 and continually decreases as the speed increases. Value of the voltage boost at speed 0 in V: $1.732 \times \text{rated motor current (p0305)} \times \text{stator resistance (r0395)} \times \text{p1310} / 100\%$
p1311	Voltage boost when accelerating The voltage boost is effective from standstill up to the rated speed. It is independent of the speed and has a value in V of: $1.732 \times \text{rated motor current (p0305)} \times \text{stator resistance (p0350)} \times \text{p1311} / 100\%$
p1312	Voltage boost when starting Setting to additionally boost the voltage when starting, however only when accelerating for the first time.

Table A- 11 How to change the inverter pulse frequency

Parameter	Description
p1800	<p>Setting the inverter pulse frequency</p> <p>The pulse frequency depends on the power unit. You can find the setting limits and the factory setting in Section Technical data, Power Modules (Page 311).</p> <p>If you increase the pulse frequency, the inverter output current decreases (the maximum output current is displayed in r0076).</p> <p>If you use a sine-wave filter, you can only set the pulse frequency to values that are permissible for the filter.</p> <p>When operated with an output reactor, the pulse frequency is limited to a maximum of 4 kHz.</p>

A.4 Handling the BOP 2 operator panel

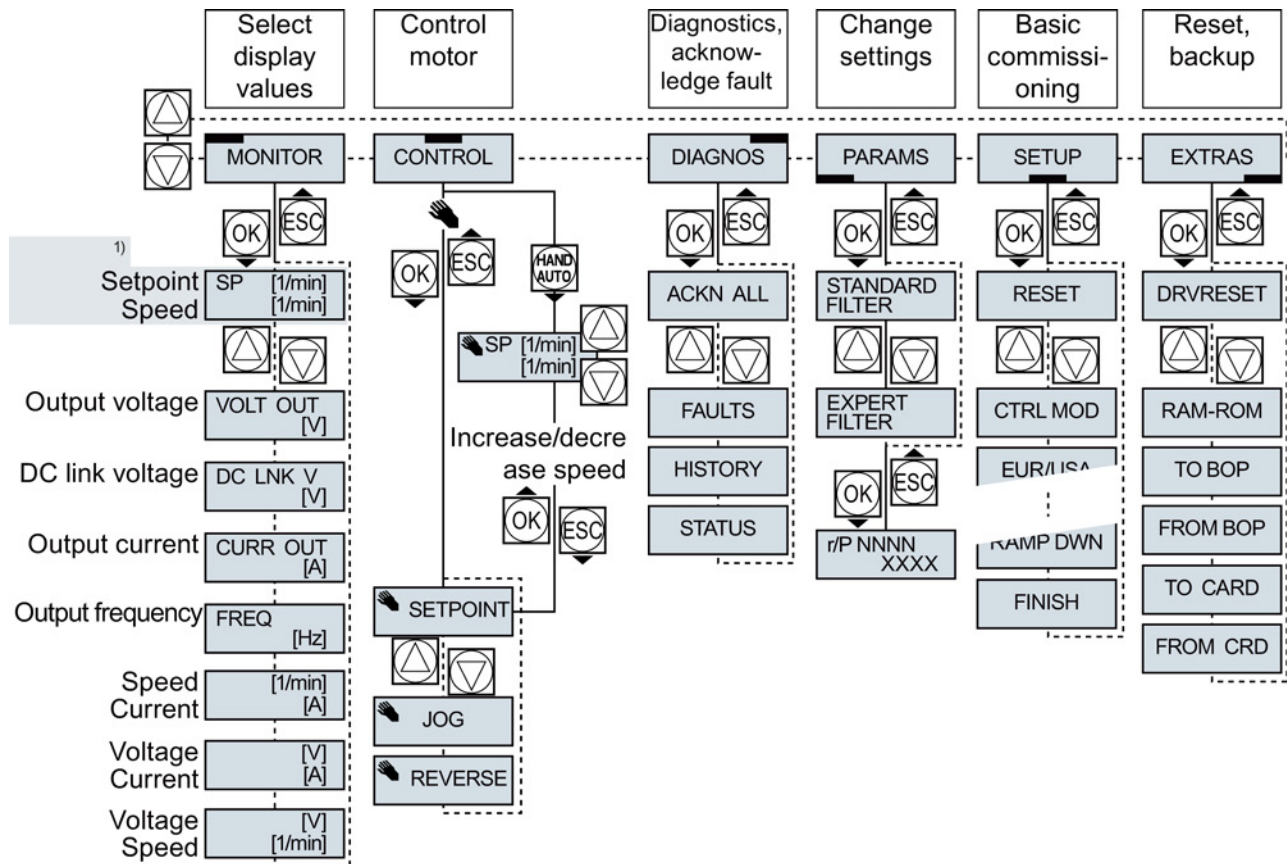

1) Status display once the power supply for the inverter has been switched on.

Figure A-1 Menu of the BOP-2

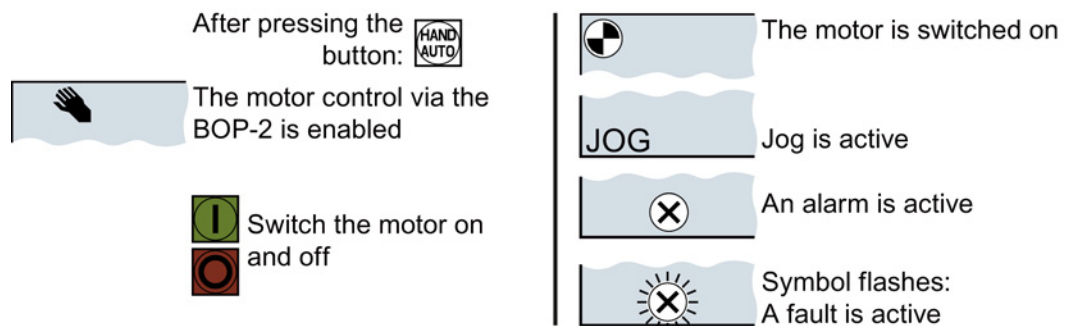


Figure A-2 Other keys and symbols of the BOP-2

A.4.1 Changing settings using BOP-2

Changing settings using BOP-2

You can modify the settings of your inverter by changing the values of the its parameters. The inverter only permits changes to "write" parameters. Write parameters begin with a "P", e.g. P45.


The value of a read-only parameter cannot be changed. Read-only parameters begin with an "r", for example: r2.

Procedure

To change write parameters using the BOP-2, proceed as follows:



1. Select the menu to display and change parameters.
Press the OK key.
2. Select the parameter filter using the arrow keys.
Press the OK key.
 - STANDARD: The inverter only displays the most important parameters.
 - EXPERT: The inverter displays all of the parameters.

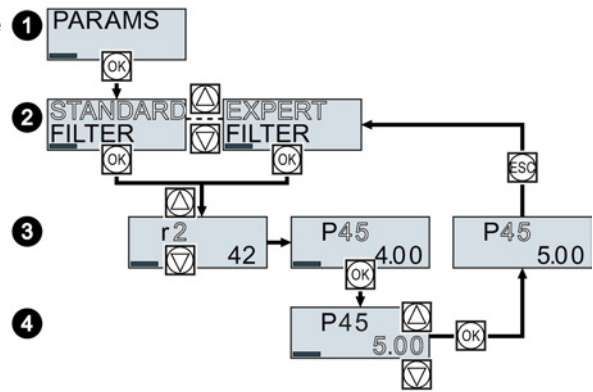

3. Select the required number of a write parameter using the arrow keys.
Press the OK key.
4. Select the value of the write parameter using the arrow keys.
Accept the value with the OK key.



You have now changed a write parameter using the BOP-2.

The inverter saves all the changes made using the BOP-2 so that they are protected against power failure.

A.4.2 Changing indexed parameters

Changing indexed parameters


For indexed parameters, several parameter values are assigned to a parameter number. Each of the parameter values has its own index.

Procedure



To change an indexed parameter, proceed as follows:

1. Select the parameter number.
2. Press the OK key.
3. Set the parameter index.
4. Press the OK key.
5. Set the parameter value for the selected index.

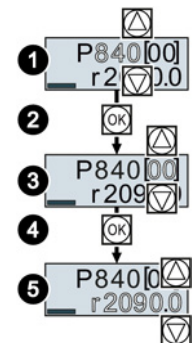

You have now changed an indexed parameter.

A.4.3 Directly entering the parameter number and value

Directly select the parameter number

The BOP-2 offers the possibility of setting the parameter number digit by digit.

Precondition


The parameter number is flashing in the BOP-2 display.

Procedure



To select the parameter number directly, proceed as follows:

1. Press the OK button for longer than five seconds.
2. Change the parameter number digit-by-digit.
If you press the OK button then the BOP-2 jumps to the next digit.
3. If you have entered all of the digits of the parameter number, press the OK button.

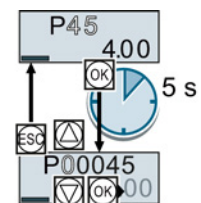

You have now entered the parameter number directly.

Entering the parameter value directly

The BOP-2 offers the option of setting the parameter value digit by digit.


Precondition

The parameter value flashes in the BOP-2 display.

Procedure

To select the parameter value directly, proceed as follows:

1. Press the OK button for longer than five seconds.
2. Change the parameter value digit-by-digit.
If you press the OK button then the BOP-2 jumps to the next digit.
3. If you have entered all of the digits of the parameter value, press the OK button.

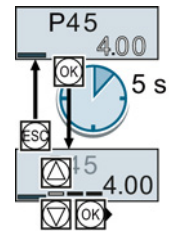


You have now entered the parameter value directly.


A.4.4 A parameter cannot be changed

When must you not change a parameter?


The converter indicates why it currently does not permit a parameter to be changed:

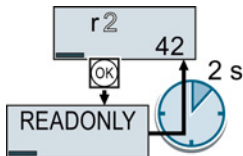

You have attempted to change a read-only parameter.

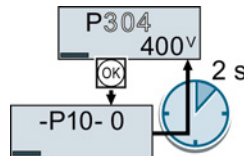

You must change to basic commissioning to set this parameter.

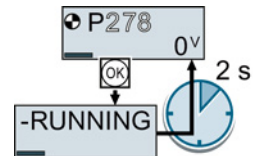

You must turn the motor off to set this parameter.

The operating state in which you can change a parameter is provided in the List Manual for each parameter.

A.5 Handling STARTER

A.5.1 Change settings

After the basic commissioning, you can adapt the inverter to your application as described in the Commissioning guidelines (Page 85).


STARTER offers two options:

- Change the settings using the appropriate screen forms - **our recommendation**.

① Navigation bar: For each inverter function, select the corresponding screen form.

② tabs: Switch between screen forms.

If you change the settings using screen forms you do not need to know the parameter numbers.

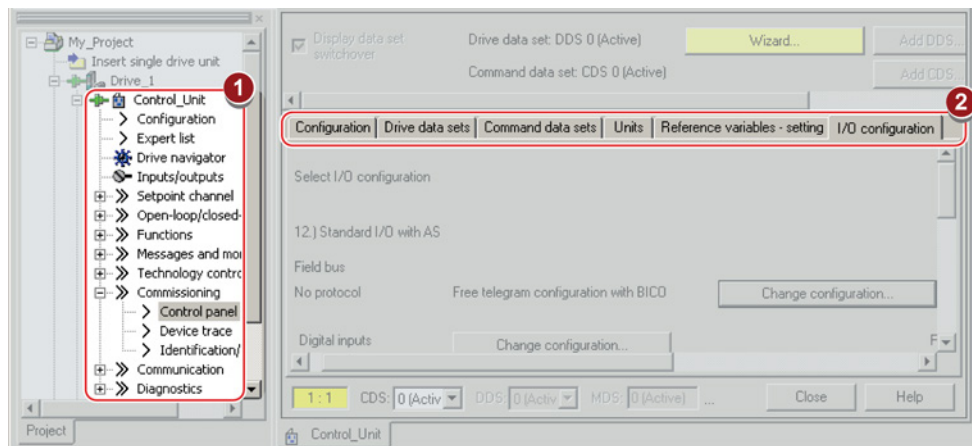

- You change the settings using the parameters in the expert list. If you wish to change the settings using the expert list, you need to know the corresponding parameter number and its significance.


Saving settings so that they are not lost when the power fails

The inverter initially only saves changes temporarily. You must do the following so that the inverter saves your settings securely in the event of a power failure.

Procedure




Proceed as follows to save your settings in the inverter so that they are not lost when the power fails:

1. Mark the appropriate drive in the project navigator.
2. Click the  Save (RAM to ROM) button.



You have saved your settings securely in the inverter in case of a power failure.


Go offline

You can now exit the online connection after the data backup (RAM to ROM) with  "Disconnect from target system".

A.5.2 Optimize the drive using the trace function

Description

The trace function is used for inverter diagnostics and helps to optimize the behavior of the drive. Start the function in the navigation bar using "... Control_Unit/Commissioning/Device trace".



In two settings that are independent of one another, using  you can interconnect eight signals each. Each signal that you interconnect is active as standard

You can start a measurement as often as required; the results are temporarily stored (until you exit STARTER) under the "Measurements" tab, together with the date and time. When terminating STARTER or under the "Measurements" tab, you can save the measurement results in the *.trc format.


If you require more than two settings for your measurements, you can either save the individual traces in the project or export them in the *.clg format – and if necessary, load or import.

Recording


Recording is performed in a CU-dependent basic clock cycle. The maximum recording duration depends on the number of recorded signals and the trace clock cycle.

You can extend the recording duration by increasing the trace clock cycle by multiplying with an integer factor and then accepting the displayed maximum duration with . Alternatively, you can also specify the measurement period and then calculate the trace clock cycle of STARTER using .

Recording individual bits for bit parameters

You can record individual bits of a parameter (e.g. r0722) by allocating the relevant bit using "bit track" (.



Mathematical function

Using the mathematical function () you can define a curve, for example the difference between the speed setpoint and the actual speed value.

Note

If you use the "record individual bits" or "mathematical functions" option, then this is displayed under signal No. 9.


Trigger


You can create your own start condition (trigger) for the trace. With the factory setting (default setting) the trace starts as soon as you press the  button (Start Trace). Using the button , you can define another trigger to start the measurement.


Using pretrigger, set the time for the recording before the trigger is set. As a consequence, the trigger condition traces itself.


Example of a bit pattern as trigger:

You must define the pattern and value of a bit parameter for the trigger. To do so, proceed as follows:

Using , select "Trigger to variable - bit pattern"

Using , select the bit parameter

Using , open the screen form in which you set the bits and their values for the start condition

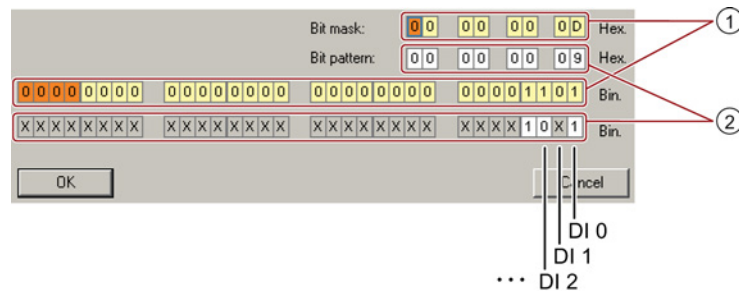

- ① Select the bits for the trace trigger, upper row hex format, lower row binary format
- ② Define the bits for the trace trigger, upper row hex format, lower row binary format

Figure A-3 Bit pattern

In the example, the trace starts if DI0 and DI3 are high and DI2 is low. The state of the other digital inputs is not relevant for the start of the trace.

Further, you can either set an alarm or fault as start condition.

Display options

In this area, you can set how the measurement results are displayed.

- Repeating measurements
This places the measurements that you wish to perform at different times above one other.
- Arrange the curves in tracks
This means you define whether the trace of all measured values is displayed with respect to a common zero line – or to separate zero lines.
- Measuring cursor on
This allows you to analyze the measuring intervals in more detail.

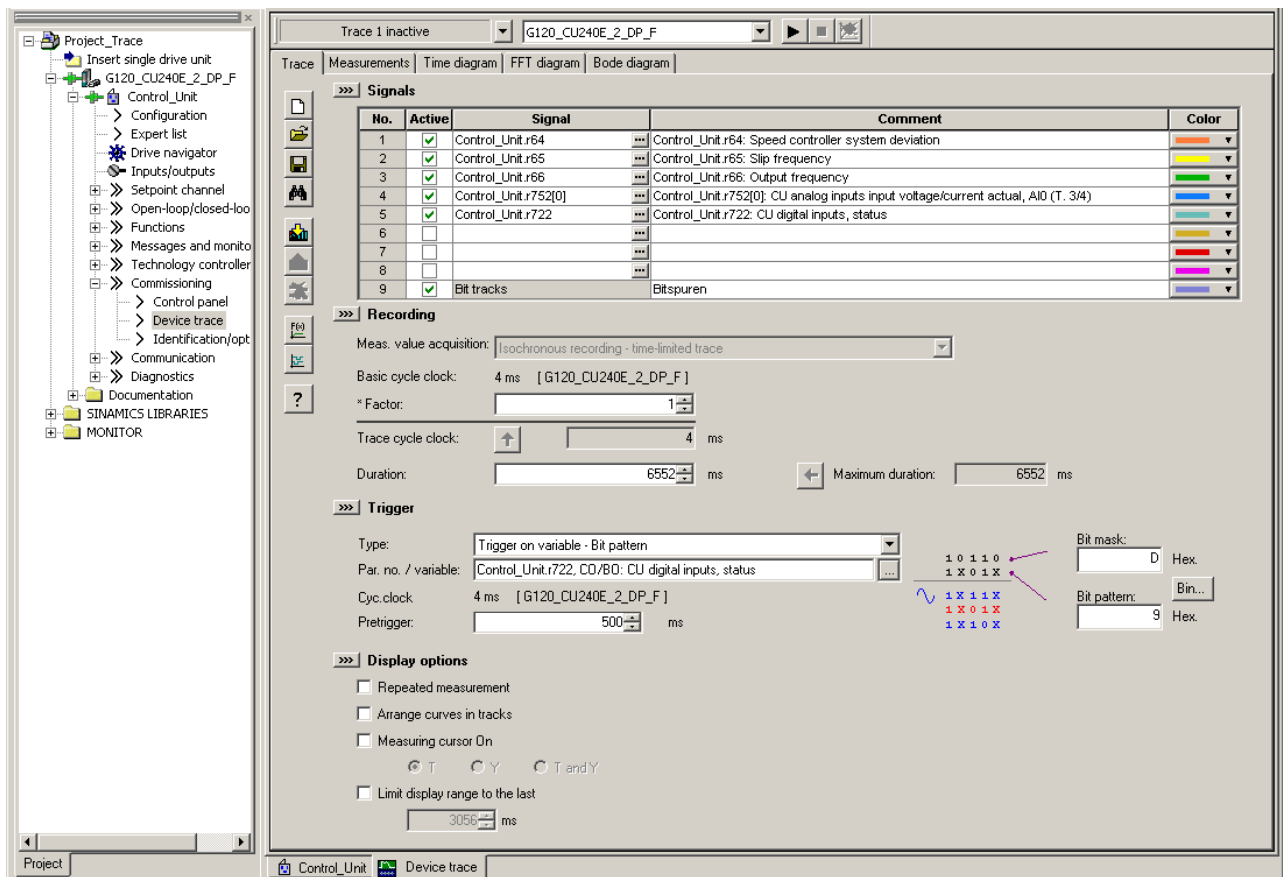


Figure A-4 Trace dialog box

A.6 Interconnecting signals in the converter

A.6.1 Fundamentals

The following functions are implemented in the converter:

- Open-loop and closed-loop control functions
- Communication functions
- Diagnosis and operating functions

Every function comprises one or several blocks that are interconnected with one another.

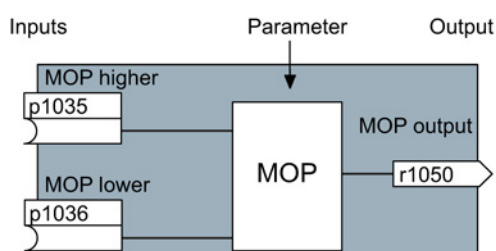


Figure A-5 Example of a block: Motorized potentiometer (MOP)

Most of the blocks can be adapted to specific applications using parameters.

You cannot change the signal interconnection within the block. However, the interconnection between blocks can be changed by interconnecting the inputs of a block with the appropriate outputs of another block.

The signal interconnection of the blocks is realized, contrary to electric circuitry, not using cables, but in the software.

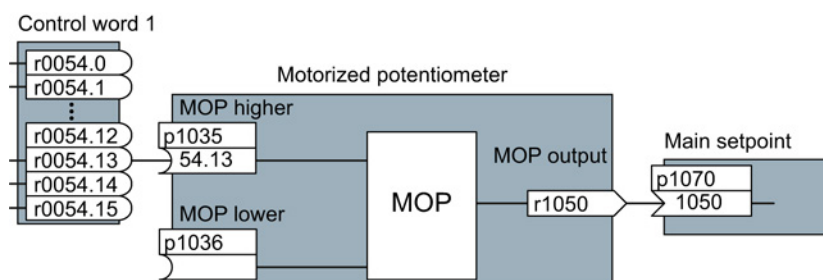


Figure A-6 Example: Signal interconnection of two blocks for digital input 0

Binectors and connectors

Connectors and binectors are used to exchange signals between the individual blocks:

- Connectors are used to interconnect "analog" signals. (e.g. MOP output speed)
- Binectors are used to interconnect "digital" signals. (e.g. 'Enable MOP up' command)

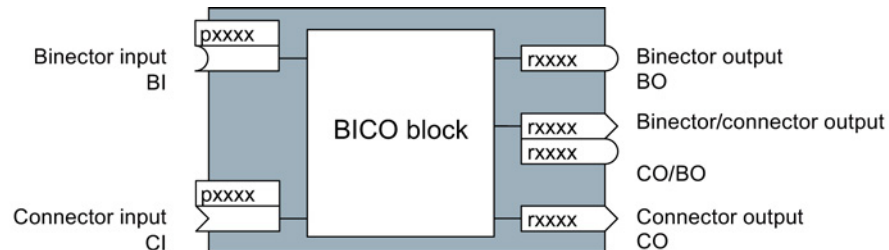


Figure A-7 Symbols for binector and connector inputs and outputs

Binector/connector outputs (CO/BO) are parameters that combine more than one binector output in a single word (e.g. r0052 CO/BO: status word 1). Each bit in the word represents a digital (binary) signal. This summary reduces the number of parameters and simplifies parameter assignment.

Binector or connector outputs (CO, BO or CO/BO) can be used more than once.

When must you interconnect signals in the converter?

If you change the signal interconnection in the converter, you can adapt the converter to a wide range of requirements. This does not necessarily have to involve highly complex functions.

Example 1: Assign a different function to a digital input.

Example 2: Switch the speed setpoint from the fixed speed to the analog input.

How much care is required when you change the signal interconnection?

Always take care when establishing internal signal interconnections. Note which changes you make as you go along since the process of analyzing them later can be quite difficult.

The STARTER commissioning tool offers signals in plain text and simplifies their interconnection.

Where can you find additional information?

- This manual is sufficient for simple signal interconnections (e.g. assigning a different function to digital inputs).
- The parameter list in the List Manual is sufficient for more complex signal interconnections.
- You can also refer to the function diagrams in the List Manual for complex signal interconnections.

A.6.2 Example

Moving a basic control logic into the inverter

A conveyor system is to be configured in such a way that it can only start when two signals are present simultaneously. These could be the following signals, for example:

- The oil pump is running (the required pressure level is not reached, however, until after 5 seconds)
- The protective door is closed

To implement this task, you must insert free function blocks between digital input 0 and the command to switch on the motor (ON/OFF1).

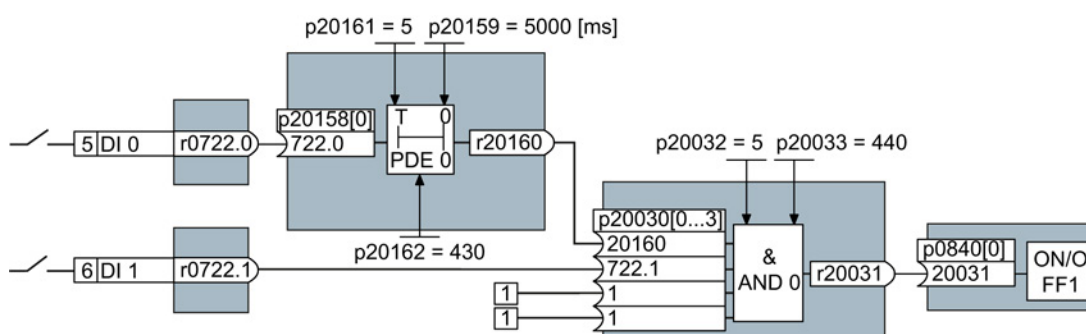


Figure A-8 Example: Signal interconnection for control logic

The signal of digital input 0 (DI 0) is fed through a time block (PDE 0) and is interconnected with the input of a logic block (AND 0). The signal of digital input 1 (DI 1) is interconnected to the second input of the logic block. The logic block output issues the ON/OFF1 command to switch-on the motor.

Setting the control logic

Parameter	Description
p20161 = 5	The time block is enabled by assigning to runtime group 5 (time slice of 128 ms)
p20162 = 430	Run sequence of the time block within runtime group 5 (processing before the AND logic block)
p20032 = 5	The AND logic block is enabled by assigning to runtime group 5 (time slice of 128 ms)
p20033 = 440	Run sequence of the AND logic block within runtime group 5 (processing after the time block)
p20159 = 5000.00	Setting the delay time [ms] of the time module: 5 seconds
p20158 = 722.0	Connect the status of DI 0 to the input of the time block r0722.0 = Parameter that displays the status of digital input 0.
p20030[0] = 20160	Interconnecting the time block to the 1st input of the AND
p20030[1] = 722.1	Interconnecting the status of DI 1 to the 2nd AND input r0722.1 = Parameter that displays the status of digital input 1.
p0840 = 20031	Interconnect the AND output to ON/OFF1

Explanation of the example using the ON/OFF1 command

Parameter p0840[0] is the input of the "ON/OFF1" block of the inverter. Parameter r20031 is the output of the AND block. To interconnect ON/OFF1 with the output of the AND block, set p0840 = 20031.

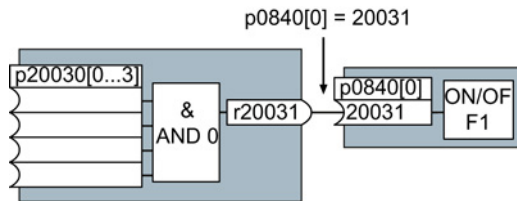


Figure A-9 Interconnecting blocks by setting p0840[0] = 20031

Principle for interconnecting blocks

Always interconnect the input (connector or binector input) with the signal source.

A.7 Manuals and technical support

A.7.1 Manuals for your inverter

Table A- 12 Manuals for your inverter

Depth of the information	Manual	Contents	Available languages	Download or order number
++	Getting Started Guide for the SINAMICS G120 inverter with the CU230P-2; CU240B-2 and CU240E-2 Control Units	Installing the inverter and commissioning.	English, German, Italian, French, Spanish, Chinese	Download manuals (http://support.automation.siemens.com/WW/view/en/22339653/133300) SINAMICS Manual Collection Documentation on DVD, order number 6SL3097-4CA00-0YGO
+++	Operating instructions	(this manual)		
+++	Fieldbus function manual for the SINAMICS G120, G120C and G120D inverters	Configuring fieldbuses.		
+++	List Manual for the SINAMICS G120 inverter with the CU230P-2 Control Units	Graphic function block diagrams. List of all parameters, alarms and faults.	English, German, Chinese	
+	Getting Started Guide for the following SINAMICS G120 Power Modules: <ul style="list-style-type: none"> • PM240, PM250 and PM260 • PM240-2 • PM230 • PM330 	Installing the Power Module		
+	Installation Instructions for reactors, filters and braking resistors	Installing components	English	
+++	Hardware Installation Manual for the following SINAMICS G120 Power Modules: <ul style="list-style-type: none"> • PM230 IP20 • PM230 IP55 • PM240 • PM240-2 • PM250 • PM260 • PM330 	Installing power modules, reactors and filters. Maintaining power modules.	English, German	
+++	Operating Instructions for the following Operator Panels: <ul style="list-style-type: none"> • BOP-2 • IOP 	Operating Operator Panels, door mounting kit for mounting of IOP.		

A.7.2 Configuring support

Table A- 13 Support when configuring and selecting the inverter

Manual or tool	Contents	Available languages	Download or order number
Catalog D 31	Ordering data and technical information for the standard SINAMICS G inverters	English, German, Italian, French, Spanish	Everything about SINAMICS G120 (www.siemens.com/sinamics-g120)
Online catalog (Industry Mall)	Ordering data and technical information for all SIEMENS products	English, German	
SIZER	The overall configuration tool for SINAMICS, MICROMASTER and DYNAVERT T drives, motor starters, as well as SINUMERIK, SIMOTION controls and SIMATIC Technology	English, German, Italian, French	You obtain SIZER on a DVD (Order number: 6SL3070-0AA00-0AG0) and in the Internet: Download SIZER (http://support.automation.siemens.com/W/W/view/en/10804987/130000)

A.7.3 Product Support

You can find additional information on the product and more in the Internet under: Product support (<http://www.siemens.com/automation/service&support>).

In addition to our documentation, under this address we offer our complete knowledge base online: You can find the following information:

- Actual product information (Update), FAQ (frequently asked questions), downloads.
- The Newsletter contains the latest information on the products you use.
- The Knowledge Manager (Intelligent Search) helps you find the documents you need.
- Users and specialists from around the world share their experience and knowledge in the Forum.
- You can find your local representative for Automation & Drives via our contact database under "Contact & Partner".
- Information about local service, repair, spare parts and much more can be found under "Services".

A.8 Mistakes and improvements

If you come across any mistakes when reading this manual or if you have any suggestions for how it can be improved, then please send your suggestions to the following address or by E-mail:

Siemens AG
Drive Technologies
Motion Control Systems
Postfach 3180
91050 Erlangen, Germany

E-mail (<mailto:docu.motioncontrol@siemens.com>)

Index

8

87 Hz characteristic, 361

A

Acyclic communication, 140
Additional components, 44
Additional technology controller 0, 191
Additional technology controller 1, 191
Additional technology controller 2, 191
Adjustable parameters, 362
Agitators, 88
Alarm, 221, 287, 292
Alarm buffer, 221, 292
Alarm code, 292
Alarm history, 293
Alarm time, 221, 292
Alarm value, 292
Ambient temperature, 86, 183
Analog input, 68, 69
 Function, 104, 111, 111, 115
Analog output, 68, 69
 Function, 104, 114
Application
 Reading and writing parameters cyclically via PROFIBUS, 139
Automatic mode, 153
Automatic restart, 207

B

Base components, 42
BF (Bus Fault), 288, 289
BICO block, 373
Bimetallic switch, 180
Binectors, 374
Block, 373
Blocking protection, 217
BOP-2
 Installing, 91
 Menu, 365
 Symbols, 365
Braking
 Regenerative, 204
Braking functions, 195

Braking method, 195, 196
Braking module, 202
Braking resistor, 202
Break loose torque, 363
Bus fault, 289
Bus termination, 67, 78
Bypass, 232

C

Cascade control, 237, 240
Catalog, 378
CDS (Command Data Set), 153
Centrifuge, 88, 197, 200, 204
Chain conveyors, 88
Changing parameters (STARTER), 369
Characteristic
 Additional, 171
 Linear, 171
 parabolic, 171
 square-law, 171
Checklist
 PROFIBUS, 123
 PROFINET, 119
Clockwise rotation, 145
Closed-loop speed control (vector control), 174
Command Data Set, 153
Command source, 142
 Selecting, 362
Commissioning
 Accessories, 40
 Guidelines, 85
Communication
 Acyclic, 140
 Cyclically, 126
Compound braking, 200
Compressor, 27, 88
Configuring support, 378
Connectors, 374
Control mode, 363
Control terminals, 69
Control Units, 23
Control word
 Control word 1, 128
 Control word 3, 131
Control word 3 (STW3), 131
Controlling the motor, 145
Conveyor belt, 88, 197

Conveyor systems, 99
Correction manual, 379
Counter-clockwise rotation, 145
Crushers, 88
Current derating, 340
Current input, 110
Current reduction, 320, 326, 334, 345
Cyclic communication, 128

D

Data backup, 251, 256, 261, 262
Data set 47 (DS), 140
Data transfer, 256, 261, 262
Date, 220
DC braking, 131, 198
DC-link overvoltage, 185
DC-link voltage, 185
Delta connection (Δ), 86, 361
Derating
 Installation altitude, 355
Digital input, 68, 69, 145
 Function, 104
Digital output, 68, 69
 Function, 104, 107
Dimensions, 46, 50, 51
DIP switch
 Analog input, 110
Direct data exchange, 139
Direction of rotation, 162
Direction reversal, 145
Display parameters, 362
Door mounting kit, 40
Download, 256, 261, 262
Drilling patterns, 46, 50, 51
Drive Data Set, DDS, 249
Drive Data Sets, 249
Drive ES Basic, 40
DTC (Digital Time Clock), 222
Dynamic braking, 202

E

EMC, 79
Energy recovery option, 204
Energy-saving display, 193
ESM, 225
Essential Service Mode, 225
Extruder, 88, 179

F

Factory assignment, 69
Factory settings
 Restoring the, 90
Fan, 27, 88
Fans, 99, 178
Fault, 221, 287, 295
 Acknowledge, 295, 296
Fault buffer, 221, 295
Fault case, 295
Fault code, 295
Fault history, 296
Fault time, 221, 295
 received, 295
 removed, 295
Fault value, 295
FFC (Flux Current Control), 171
Field weakening, 361
Fieldbus interfaces, 67, 78
Firmware downgrade, 281
Firmware version, 271, 358, 359, 360, 362
Flow control, 213
Flying restart, 205
Formatting, 252
Free function blocks, 248
Functions
 BOP-2, 365
 Fan applications, 142
 Heating/air-conditioning systems, 142
 HVAC, 142
 Overview, 141
 Pump applications, 142
 Technological, 142

G

Getting Started, 377
Grinding machine, 197, 200
GSDML (Generic Station Description Markup Language), 120

H

Hardware Installation Manual, 377
Hoist drive, 204
Hoisting gear, 202
Horizontal conveyors, 179, 200, 202
Hotline, 378

I

I_max controller, 184
 I2t monitoring, 177
 Inclined conveyors, 202
 IND (page index), 136
 Industry Mall, 378
 Installation, 41
 Installation altitude, 355
 Interfaces, 67
 Interlock, 375
 Inverter
 does not respond, 284
 Inverter components, 23, 271
 Inverter control, 142
 IT system, 54

J

JOG function, 151

K

Kinetic buffering, 211
 Kneaders, 88
 Know-how protection, 252, 266
 KTY84 sensor, 180

L

LED
 BF, 288, 289
 LNK, 288
 RDY, 288
 LED (light emitting diode), 287
 Level control, 213
 License, 252
 Line dip, 211
 Line filter, 30
 Line supply cable, 60
 Line supply type, 54
 Linear characteristic, 171
 List Manual, 377
 LNK (PROFINET Link), 288
 Load failure, 219
 Load torque, 217

M

Macro p15, 86
 Manual Collection, 377

Manual mode, 153

Manuals

 Download, 377
 Inverter accessories,
 Overview, 377

Maximum cable length
 PROFIBUS, 123

Maximum cable lengths
 PROFINET, 120

Maximum current controller, 184

Maximum speed, 89, 162, 363

Memory cards, 25

Menu

 BOP-2, 365
 Operator panel, 365

Mills, 88

Minimum speed, 89, 162, 164, 363

Mistakes manual, 379

Mixers, 88

MMC (memory card), 252

MOP (motorized potentiometer), 157

MotID (motor data identification), 93

Motor cable, 60

Motor control, 142

Motor data, 86

 Identify, 93, 100, 176
 measurement, 93

Motor standard, 189

Motor temperature, 183

Motor temperature sensor, 68, 69, 181

Motorized potentiometer, 157

Mounting, 43

Multi-zone control, 229

N

Neutral conductor, 54

No-load monitoring, 217

O

OFF1 command, 145

OFF3 ramp-down time, 167

ON command, 145

Operating instruction, 21

Operating instructions, 377

Operation, 144

Operator panel

 BOP-2, 40, 365
 Door mounting kit, 40
 Handheld, 40

- Installing, 91
- IOP, 40
- Menu, 365
- Optimizing the closed-loop speed controller, 176
- Order number, 23
- Overload, 184, 363
- Overview
 - Manuals, 377
- Overview of the functions, 141
- Overvoltage, 185

P

- p15 macro, 86
- Page index, 136
- Parabolic characteristic, 171
- Parameter channel, 134
 - IND, 136
- Parameter index, 136
- Parameter number, 136, 367
- Parameter types, 362
- Parameter value, 368
- PC Connection Kit, 40
- PELV, 309
- PID controller, 213
- PLC functionality, 375
- Power distribution systems, 54
- Power failure, 207
- Power Module, 23
- Pressure control, 213
- Procedure, 21
- Process variables of the technology controller, 190
- PROFIBUS, 123
- PROFIdrive, 117
- PROFInergy, 117
- Protection functions, 142
- Protective conductor, 54
- PTC sensor, 180
- Pulse cancelation, 129
- Pulse enable, 129
- Pulse frequency, 178, 179, 320, 326, 334, 340, 345, 364
- Pump, 27, 88, 99

Q

- Questions, 378
- Quick stop, 143

R

- Radio interference class, 30
- Ramp-down, 363
- Ramp-down time, 89, 167, 363
- Ramp-function generator, 162
- Ramp-up, 363
- Rampup time,
 - Ramp-up time, 167
- RDY (Ready), 288
- Ready, 144
 - Ready to switch on, 144
- Real time clock, 220
- Real Time Clock, 220
- Regenerative feedback, 28, 204
- Regenerative power, 195
- Reset
 - Parameter, 90
- Reversing, 162
- Roller conveyors, 88
- Rotary furnace, 88
- Rounding, 167
- Rounding OFF3, 167
- RTC (Real Time Clock), 220, 222

S

- S7 communication, 117
- Saw, 197, 200
- Scaling
 - Analog input, 110
 - Analog output, 113
- SD (memory card), 252
 - Formatting, 252
 - MMC, 252
- Sequence control, 143
- Series commissioning, 251
- Setpoint processing, 142, 162
- Setpoint source, 142
 - Selecting, 156, 157, 362
- Settling time, 88
- Shield connection kit, 28
- Short-circuit monitoring, 181
- Signal interconnection, 373
- Signal states, 288
- Sine-wave filter, 36
- SIZER, 378
- Skip frequency band, 112, 162
- Speed
 - change with BOP-2, 365
 - Limiting, 162
- Speed deviation, 219

Speed monitoring, 219
 Spindle, 88
 Square-law characteristic, 171
 Stall protection, 217
 Star connection (Y), 361
 STARTER, 40, 96, 261, 369
 Download, 40
 Starting characteristics
 Optimization, 172
 State overview, 143
 Status word
 Status word 1, 130
 Status word 3, 132
 Storage medium, 251
 STW1 (control word 1), 128
 Subindex, 136
 Suggestions for improvement manual, 379
 Support, 378
 Switch off
 Motor, 143
 OFF1 command, 143
 OFF2 command, 143
 OFF3 command, 143
 Switch on
 Motor, 143
 ON command, 143
 Switching on inhibited, 129, 144
 Switching over units, 188
 Switching-on a motor with BOP-2, 365
 Symbols, 21
 System runtime, 291

T

Technical data
 Control Unit, 309
 General, 350
 Technology controller, 131, 190, 213
 Telegram
 Extending, 133
 paste, 121, 125
 Temperature calculation, 182
 Temperature monitoring, 177, 182
 Temperature sensor, 68, 69
 Temperature switch, 180
 Terminal block, 77, 103
 Terminal strip
 Factory setting, 69
 Three-wire control, 145
 Time, 220
 Time control, 222
 Time switch, 222

TN line system, 54
 Torque accuracy, 88
 Torque monitoring
 Speed-dependent, 217
 Total depth, 53
 Trace function, 370
 TT system, 54
 Two-wire control, 145
 Type plate
 Control Unit, 23
 Power Module, 23

U

U/f control, 169, 363
 Unit system, 190
 Unwinders, 204
 Upgrading the firmware, 279
 Upload, 253, 261, 262
 USB cable, 40
 USB interface, 97
 Use for the intended purpose, 23
 User interfaces, 67

V

VDC min controller, 211
 Vector control, 176, 363
 Sensorless, 174
 Version
 Control Unit, 23
 Power Module, 23
 Vertical conveyors, 202
 Voltage boost, 172, 363
 Voltage input, 110

W

Winders, 204
 Wire-break monitoring, 110, 181
 Write protection, 264

Z

ZSW1 (status word 1), 130
 ZSW3 (status word 3), 132

Further information

SINAMICS inverter:
www.siemens.com/sinamics

PROFINET:
www.siemens.com/profinet

Siemens AG
Industry Sector
Drive Technologies
Motion Control Systems
Postfach 3180
91050 ERLANGEN
GERMANY

Subject to change without prior notice
© Siemens AG 2009 - 2014

To obtain additional
information on the
SINAMICS G120P
scan the QR code.



www.siemens.com/drives